

[Manuals.plus](#) /

› [Aquasonic](#) /

› Aquasonic Vibe Series Ultra-Whitening Electric Toothbrush User Manual

Aquasonic Vibe Series

Aquasonic Vibe Series Ultra-Whitening Electric Toothbrush User Manual

Model: Vibe Series | Brand: Aquasonic

INTRODUCTION

The Aquasonic Vibe Series Ultra-Whitening Toothbrush is a modern electric toothbrush designed for comprehensive oral care. It features an ultra-powerful motor producing 40,000 vibrations per minute, ultra-fast wireless charging, 4 mode operation, smart vibration timers, and comes with 8 DuPont engineered brush heads and a travel case. Its sleek, ultra-slim, lightweight, and IPX7 waterproof design ensures durability and ease of use.

This product has been accepted by the American Dental Association (ADA) Council on Scientific Affairs, demonstrating its efficacy in removing plaque and helping to prevent and reduce gingivitis.



Image: The AquaSonic Vibe Series Ultra-Whitening Toothbrush in Charcoal Metallic, along with its charging base, 8 brush heads, and clear travel case.


What's in the Box

Your AquaSonic Vibe Series package includes the following components:

- 1 x Charcoal Metallic Smart Toothbrush Handle
- 8 x DuPont Brush Heads
- 1 x Custom Travel Case
- 1 x Wireless Charging Base
- 1 x User Manual (this document)
- 1 x Warranty Card

Exceptional Value

8 DuPont Brush Heads Included
for 2+ Years of Brushing

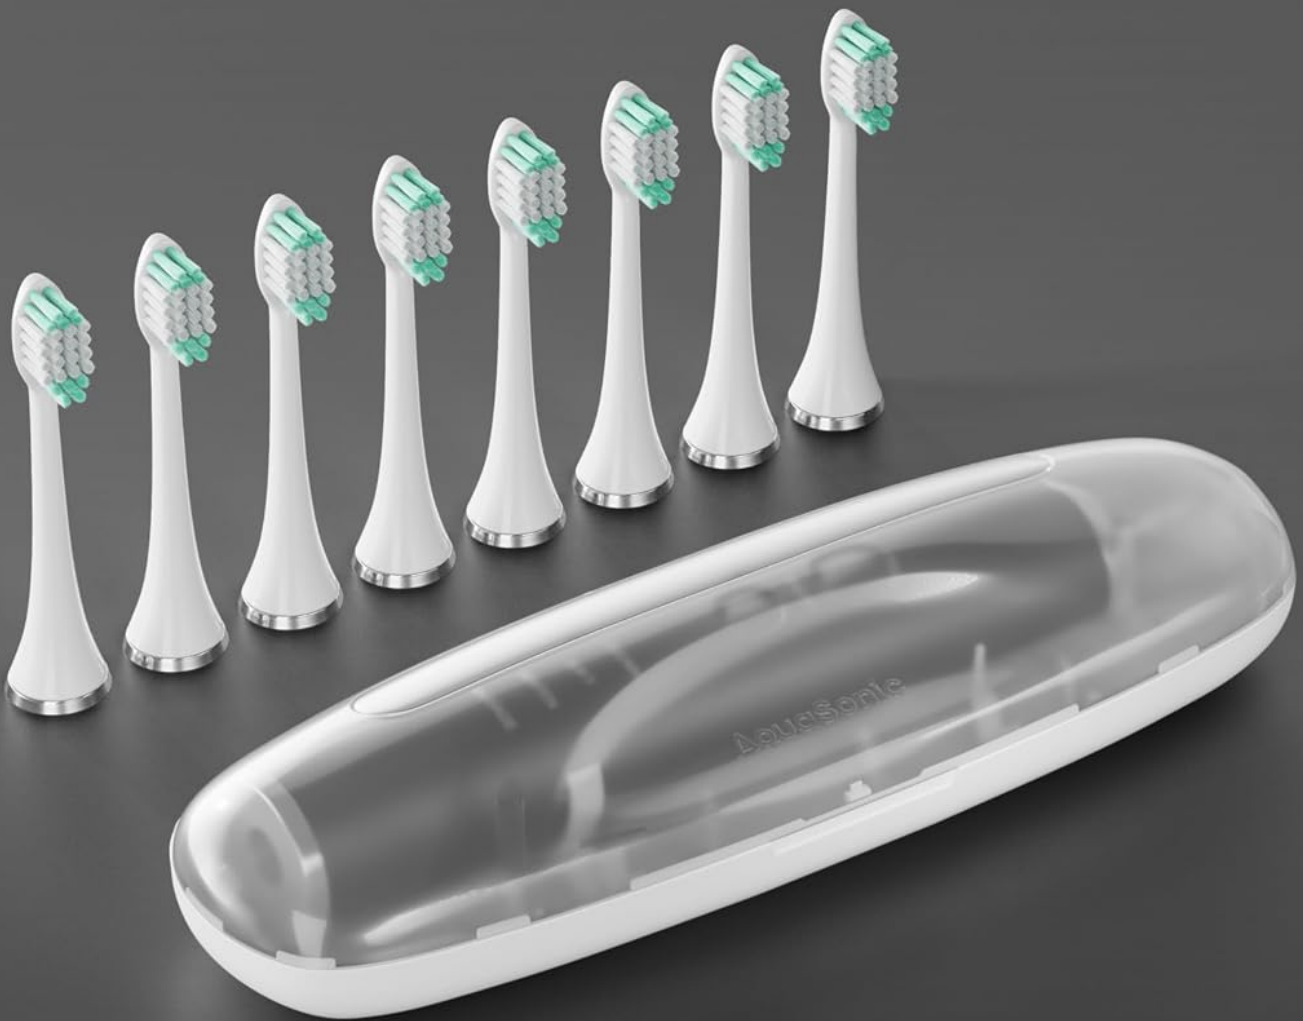

Premium Travel Case Included

Image: A close-up of the eight included DuPont brush heads and the custom travel case.

1. Initial Charging

Before first use, fully charge your toothbrush for 24 hours. Place the toothbrush handle onto the wireless charging base. The indicator light on the handle will show charging status. A full charge can last approximately 4 full weeks (based on 2 minutes of brushing, twice a day).

2. Attaching the Brush Head

Align the brush head with the metal shaft on the toothbrush handle. Push the brush head down firmly until it clicks into place. Ensure it is securely attached before use.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the top button (On/Off) once to turn on the toothbrush. Press it again to turn off the toothbrush.

2. Selecting Brushing Modes

The Aquasonic Vibe Series offers 4 distinct brushing modes. With the toothbrush turned on, press the bottom button (Mode) repeatedly to cycle through the modes:

- **Clean:** Standard brushing mode for daily cleaning.
- **Soft:** Gentle mode for sensitive teeth and gums.
- **Whiten:** Helps remove daily surface stains for a brighter smile.
- **Massage:** Delivers vibrating microbursts to gums for improved gum health.

AquaSonic



ON/OFF



CLEAN

SOFT

WHITEN

MASSAGE



Intelligent Brushing 4 Custom Modes

standard Brushing mode

gentle mode for sensitive teeth

helps remove daily surface stains

delivers vibrating microbursts to gums

Image: The control panel of the toothbrush, highlighting the four distinct brushing modes.

3. Smart Timer

The toothbrush features a smart vibration timer. It will pause briefly every 30 seconds to signal you to move to a different quadrant of your mouth. After 2 minutes, the toothbrush will automatically shut off, indicating the completion of the dentist-recommended brushing time.



**40,000 Vibrations
Per Minute Motor**

Smart Chip to Guide
the 30-Second Timers
& 2-Minute Auto Shut-Off

**4 Brushing
Modes**

**Powerful Lithium-Ion Battery
with Wireless Charging**

**Modern,
Smart Technology**

Image: An X-ray view of the toothbrush, illustrating its internal smart technology and powerful motor.

1. Cleaning the Toothbrush

After each use, rinse the brush head thoroughly under running water. Wipe the toothbrush handle with a damp cloth. Do not submerge the charging base in water. The toothbrush handle is IPX7 waterproof, meaning it can withstand immersion in water up to 1 meter for 30 minutes, but the charging base is not.

2. Replacing Brush Heads

It is recommended to replace the brush head every 3 months, or sooner if the bristles become frayed or worn. To replace, simply pull the old brush head straight off the handle and push a new one on until it clicks.

3. Battery Care

To maintain battery longevity, avoid leaving the toothbrush on the charger continuously after it is fully charged. It is designed to hold a charge for an extended period, making it ideal for travel.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toothbrush not turning on.	Low battery or not charged.	Place on charging base for 24 hours for initial charge, or until fully charged.
Weak vibrations.	Low battery.	Recharge the toothbrush.
Brush head feels loose.	Brush head not properly attached.	Remove and re-attach the brush head, ensuring it clicks into place.
Toothbrush stops before 2 minutes.	Normal operation of smart timer.	The toothbrush pauses every 30 seconds and automatically shuts off after 2 minutes. This is normal.

SPECIFICATIONS

- **Motor:** 40,000 Vibrations Per Minute (VPM)
- **Charging:** Wireless Charging
- **Modes:** 4 (Clean, Soft, Whiten, Massage)
- **Timer:** Smart vibration timers (30-second quadrant timer, 2-minute auto shut-off)
- **Waterproof Rating:** IPX7
- **Battery:** 1 Lithium Ion battery (included)
- **Battery Life:** Up to 4 weeks on a full charge (2 min/2x a day)
- **Brush Heads:** DuPont engineered, soft bristles
- **Package Dimensions:** 9.79 x 6.69 x 2.2 inches
- **Weight:** 1.1 Pounds

SAFETY INFORMATION

Please read and understand the following safety guidelines before using your Aquasonic Vibe Series toothbrush:

- Keep out of reach of children.
- Do not use for purposes other than oral hygiene.
- Replace brush head every 3 months.
- Dispose of properly after use according to local regulations.

- Do not disassemble or attempt to repair the device yourself.
- If you have any medical concerns, consult your dentist or physician before use.

WARRANTY AND SUPPORT

Your Aquasonic Vibe Series toothbrush comes with a warranty. Please refer to the included warranty card for specific terms, conditions, and registration details. For technical support, replacement parts, or any other inquiries, please contact Aquasonic customer service through the contact information provided on the warranty card or the official Aquasonic website. For more information and product registration, visit the official Aquasonic Store: [Aquasonic Store on Amazon](#).

© 2025 Aquasonic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question