



Manuals.plus /

- › Wendry /
- › Wendry Replacement Remote Control for Grundig TV TP7187R User Manual

Wendry TP7187R

Wendry Replacement Remote Control for Grundig TV TP7187R User Manual

Model: TP7187R

1. INTRODUCTION

This user manual provides comprehensive instructions for the Wendry Replacement Remote Control, designed specifically for Grundig TV model TP7187R. This high-quality replacement remote offers reliable performance and ease of use, ensuring a seamless control experience for your television.



Image: Front view of the Wendry replacement remote control, showing all buttons and its sleek black design.

2. PRODUCT FEATURES

- **Durable Construction:** Manufactured from high-quality ABS material, ensuring longevity and resistance to wear.
- **Extended Range:** Operates effectively at a distance of over 8 meters, providing flexibility in your viewing environment.
- **Direct Replacement:** A premium quality replacement for your original Grundig TV remote control, offering identical functionality.
- **Compatibility:** Specifically designed for Grundig TV model TP7187R.

- **Infrared Technology:** Utilizes reliable infrared signals for communication with your television.

This is high quality remotes controller for GRUNDIG TV

Suitable for GRUNDIG TV TP7187R



Image: An angled view of the remote control, highlighting its compatibility with Grundig TV TP7187R.

3. SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Important: Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries.



Image: The back of the remote control with the battery cover removed, showing the battery slots.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for use with your Grundig TV TP7187R. Point the remote control directly at the TV's infrared receiver.

Basic Functions:

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **Volume Up/Down (+/-):** Adjusts the sound volume.
- **Channel Up/Down (P+/P-):** Changes channels sequentially.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **Menu Button:** Accesses the TV's main menu.
- **Source/Input Button:** Changes the input source (HDMI, AV, etc.).



8m

5m

3m

Remote Control Distance: > 8M

Remote control distance differs depending on the type of models



Image: A user holding the remote control, demonstrating its use with a television.



This is high quality
remotes controller for
GRUNDIG TV.

Image: Diagram illustrating the effective remote control distance, which is greater than 8 meters, though actual range may vary with TV model.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

Cleaning:

Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the surface.

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Refer to the "Setup: Battery Installation" section for instructions. Remove batteries if the remote control will not be used for an extended period to prevent leakage.

Storage:

Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Limited range or intermittent response.	Obstruction between remote and TV; low batteries; interference.	Ensure a clear line of sight to the TV's IR receiver. Replace batteries. Move away from strong light sources or other electronic devices.
Specific buttons not responding.	Button stuck or dirty; internal fault.	Clean around the button. If problem persists, consider replacing the remote.
Remote works with some TVs but not Grundig TP7187R.	Incorrect remote model for your TV.	Verify your TV model is Grundig TP7187R. This remote is specifically designed for this model.

7. SPECIFICATIONS

Feature	Detail
Brand	Wendry
Model	TP7187R (Replacement)
Material	ABS
Color	Black
Remote Control Distance	> 8 meters (varies by machine model)
Battery Type	2 x AAA batteries (not included)
Dimensions (L x W x H)	Approx. 223 x 50 x 19 mm (8.8 x 2.0 x 0.8 inches)
Weight	Approx. 81.3 g
Connectivity Technology	Infrared
Compatible Devices	Grundig TV TP7187R

8. WARRANTY AND SUPPORT

Information regarding specific warranty terms for this product is not explicitly provided in the product details. For any issues or support inquiries, please contact the seller or refer to the purchase platform's return and support policies.

This product is designed as a direct replacement and should function immediately upon correct battery installation with the specified Grundig TV model.