

## IDEALHOUSE Twin

# IDEALHOUSE Twin Metal Bed Frame Instruction Manual

Model: Twin

## INTRODUCTION

Thank you for choosing the IDEALHOUSE Twin Metal Bed Frame. This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your new bed frame. Please read all instructions carefully before assembly and retain this manual for future reference.

This bed frame features an elegant design with a curved floral headboard and footboard, durable steel slat support, and 13.3 inches of under-bed clearance for storage. It is designed for noiseless sleep and supports up to 600 pounds without requiring a box spring.

## SAFETY INFORMATION

### WARNING:

- Exceeding the maximum weight limit of 600 pounds may result in product failure and potential injury.
- Ensure proper assembly to prevent instability or collapse. Double-check all connections.
- Be cautious of pinch points during assembly. Keep hands and fingers clear of moving parts.
- Regularly inspect all bolts and screws to ensure they are tight. Retighten as necessary.
- Do not allow children to play on or under the bed frame without supervision.

## SETUP AND ASSEMBLY

Assembly of this IDEALHOUSE Twin Metal Bed Frame is designed to be straightforward. All necessary installation tools and an installation manual are included in the package. We recommend two people for assembly, though it can be completed by one person.

### Before You Begin:

- Unpack all components and verify against the parts list in the included manual.
- Clear a spacious area for assembly.

- Keep children and pets away from the assembly area.

### Assembly Steps:

1. Attach the side rails to the headboard and footboard using the provided hardware. Ensure all bolts are finger-tightened initially.
2. Install the center support beam and its legs. This enhances stability.
3. Place the steel slats across the frame. Secure them according to the instructions in the included manual.
4. Once all components are in place, fully tighten all bolts with the provided tools. Do not overtighten.
5. Verify the frame is stable and level before placing a mattress on it.



*Image: All components of the IDEALHOUSE Twin Metal Bed Frame laid out for assembly.*



*Image: Close-up of the headboard and footboard assembly, highlighting the curved floral design.*



*Image: The assembled bed frame with steel slats in place, ready for a mattress.*



## OPERATING INSTRUCTIONS

The IDEALHOUSE Twin Metal Bed Frame is designed for comfortable and practical use.

### Mattress Compatibility:

This platform bed frame is designed to be used without a box spring. Place your mattress directly on the steel slats. For memory foam mattresses, please note that the slat spacing is approximately 6 inches. Some memory foam mattress manufacturers recommend slat spacing of 2-3 inches to prevent sagging and maintain warranty. Verify your mattress manufacturer's requirements before use.

### Noiseless Operation:

The frame is engineered to provide quiet, noiseless support. If any squeaking occurs, refer to the troubleshooting section.

### Space Utilization:

The bed frame offers 13.3 inches of clearance underneath, providing ample space for storage. Utilize this area for luggage, storage bins, or other items to keep your room organized.

## MAINTENANCE

Proper maintenance will ensure the longevity and continued performance of your bed frame.

- **Cleaning:** Wipe the metal frame with a damp cloth for general cleaning. For a thorough clean, follow with a dry cloth to prevent water spots or rust. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all bolts, screws, and connections to ensure they remain tight. Loose connections can lead to instability and noise. Retighten as needed.
- **Weight Limit:** Do not exceed the maximum weight recommendation of 600 pounds.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is squeaking.	Loose bolts or connections.	Inspect all bolts and screws. Tighten any loose connections. Ensure the center support legs are firmly on the floor.
Bed frame feels unstable or wobbly.	Incomplete or incorrect assembly; loose hardware.	Review the assembly instructions carefully. Ensure all parts are correctly installed and all bolts are fully tightened.

Problem	Possible Cause	Solution
Mattress is sagging between slats (especially memory foam).	Slat spacing is too wide for the mattress type.	The slat spacing on this frame is approximately 6 inches. If your mattress requires narrower spacing (e.g., 2-3 inches), consider adding a bunkie board or plywood sheet between the mattress and the slats to provide additional support.

## SPECIFICATIONS

Feature	Detail
Model	Twin
Size	Twin
Material	Metal
Product Dimensions (L x W x H)	78.7" x 39.3" x 42.5"
Item Weight	38 Pounds
Maximum Weight Recommendation	600 Pounds
Under-bed Clearance	13.3 inches
Box Spring Required	No
Special Features	Headboard and Footboard, Squeak Resistant
Included Components	Installation Manual, Installation Tools
Care Instructions	Wipe with Damp Cloth, Wipe with Dry Cloth

## WARRANTY INFORMATION

Specific warranty details for the IDEALHOUSE Twin Metal Bed Frame are typically provided with your purchase documentation or can be obtained directly from the manufacturer or retailer. Please refer to the warranty card included in your product packaging or visit the official IDEALHOUSE website for the most current warranty policy.

Retain your proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

If you have any questions regarding the assembly, operation, or maintenance of your IDEALHOUSE Twin Metal Bed Frame, please do not hesitate to contact IDEALHOUSE customer support.

For assistance, please refer to the contact information provided in your product packaging or visit the official IDEALHOUSE website.

*We are committed to providing you with an ideal home experience.*

