

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Indesit](#) /

› [Indesit XWDE-961480XSGCC Washer Dryer Instruction Manual](#)

Indesit XWDE-961480XSGCC

Indesit XWDE-961480XSGCC Washer Dryer Instruction Manual

Model: XWDE-961480XSGCC

[Introduction](#) [Safety Information](#) [Product Overview](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Indesit XWDE-961480XSGCC Washer Dryer. This appliance is designed to provide efficient and convenient washing and drying of your laundry. To ensure safe and optimal performance, please read this instruction manual thoroughly before using the appliance. Keep this manual for future reference.



Figure 1: Indesit XWDE-961480XSGCC Washer Dryer

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
- Do not use heat to dry articles containing plastic, foam rubber, or rubber-like materials.
- Clean the lint screen before or after every load.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing/drying compartment.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or operate the appliance if it is damaged. Contact qualified service personnel for repair.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.

3. PRODUCT OVERVIEW

3.1 Key Features

The Indesit XWDE-961480XSGCC Washer Dryer offers a range of features designed for effective and convenient laundry care:

Product Features



Wash&Dry 45

A fast, effective washing and drying action for lightly soiled items. In just 45 minutes, garments are washed, dried and ready for your next adventure.



Antistain Option

Fast, efficient, powerful stain removal on all your heavy soiled items.



Antiodours Option

The perfect way to freshen up your garments and effectively removing smoke, sweat and fried food smells. AntiOdours is a great way to freshen up essential tops, trousers and dresses before heading out.



Express Cleaning

Express Cleaning lets you enjoy perfectly clean, perfectly dry clothes in just 60 minutes.



Special Sport

Designed for all your non-iron sportswear, select the Special Sport cycle for fresh, clean kit in just 45 minutes.



Autoclean Cycle

Cleaning and protecting your washer dryer at the touch of a button, keep your machine in tip-top condition with no need for harsh chemicals.



Delay

Schedule the laundry to a time that suits you with the Delay option. Simply set the program and let your machine do the rest.



Delicates

For your most precious, delicate garments – the Delicates cycle provides excellent washing and drying action, as well as unparalleled care.



Cotton 40

Cotton 40 is a super cycle that provides extra care to cottons while removing stains at 40°C and in just 45 minutes.



Dark Cycle

Keep your dark garments vibrant and vitalised with the special Dark Cycle, reducing fade on the clothes you love.



Wool Care

Extremely delicate action to wash woollen garments, ensuring a perfect clean without making your clothes lose their original softness. This cycle has been approved by the Woolmark Company as a valid wash to use on woollen garments.

Figure 2: Product Features

- **Wash&Dry 45:** A fast, effective washing and drying action for lightly soiled items, completing the cycle in just 45 minutes.
- **Antistain Option:** Provides powerful stain removal on heavily soiled items.
- **Antiodours Option:** Effectively removes smoke, sweat, and fried food smells, ideal for freshening up garments.
- **Express Cleaning:** Delivers perfectly clean clothes in just 60 minutes.
- **Special Sport:** Designed for non-sportswear, offering a clean kit in 45 minutes.
- **Autoclean Cycle:** Cleans the washer dryer at the touch of a button, maintaining hygiene without harsh chemicals.
- **Delay:** Schedule laundry to start at a convenient time.
- **Delicates:** Gentle care for delicate garments, providing excellent washing and drying.
- **Cotton 40:** A super cycle for cottons, removing stains at 40°C in 45 minutes.

- **Dark Cycle:** Helps keep dark garments vibrant and revitalized.
- **Wool Care:** Extremely delicate action to wash woolen garments, certified by Woolmark.

3.2 Components

Familiarize yourself with the main components of your washer dryer:





Figure 3: Control Panel, Detergent Dispenser, and Drum

- **Control Panel:** Located on the front, it features a program selector dial, function buttons, and a digital display for cycle information.
- **Detergent Dispenser Drawer:** Pull-out drawer for adding detergent, fabric softener, and other laundry additives.
- **Drum:** Stainless steel drum where laundry is washed and dried.
- **Door:** Front-loading door for accessing the drum.
- **Filter:** Located at the bottom front (behind a cover), used to collect lint and small objects.

4. SETUP

4.1 Unpacking and Positioning

- Carefully remove all packaging materials.
- Remove the transport bolts from the rear of the appliance. Keep them for future transport.
- Position the washer dryer on a firm, level floor. Adjust the feet to ensure the appliance is stable and level.

4.2 Dimensions

Ensure adequate space for installation and operation. The dimensions of the appliance are:

Product Dimension in Centimeter



Figure 4: Product Dimensions

- **Depth:** 60.5 cm
- **Width:** 73.41 cm
- **Height:** 85 cm
- **Weight:** 73.41 kg

4.3 Water and Drain Connections

- Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure a tight seal.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during operation.

4.4 Electrical Connection

- Plug the appliance into a grounded electrical outlet.
- Ensure the voltage and frequency match the specifications on the rating plate of the appliance.
- Do not use extension cords or multiple adapters.

4.5 Initial Use

Before washing clothes for the first time, run a short wash cycle without laundry and with a small amount of detergent to clean the drum and remove any manufacturing residues.

5. OPERATING INSTRUCTIONS

5.1 Loading Laundry

- Open the door and load laundry into the drum. Do not overload the machine.
- The maximum wash capacity is 9 kg, and the maximum dry capacity is 6 kg.
- Close the door firmly.

5.2 Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment.
- Add fabric softener to the designated compartment (if desired).
- Close the dispenser drawer gently.

5.3 Program Selection

Turn the program selector dial to choose the desired wash or wash & dry program. The digital display will show the estimated cycle time.

- **Common Programs:** Cotton, Delicate, Quick Wash, Rinse.
- **Special Programs:** Wash&Dry 45, Antistain, Antiodours, Express Cleaning, Special Sport, Autoclean, Delay, Delicates, Cotton 40, Dark Cycle, Wool Care.

5.4 Function Buttons

Use the function buttons on the control panel to customize your wash cycle, such as adjusting temperature, spin speed, or selecting additional options like Antistain or Delay.

5.5 Starting a Cycle

- After selecting the program and any desired options, press the Start/Pause button to begin the cycle.
- The door will lock, and the cycle will commence.

5.6 End of Cycle

At the end of the cycle, the appliance will signal with an audible tone (if enabled) and the display will indicate completion. The door will unlock, allowing you to remove your laundry.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washer dryer.

6.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

6.2 Cleaning the Detergent Dispenser

- Pull out the dispenser drawer completely.
- Rinse it under running water to remove any detergent or softener residue.
- Clean the housing of the dispenser drawer with a brush.
- Reinsert the drawer.

6.3 Cleaning the Filter

- Periodically clean the filter located at the bottom front of the appliance.
- Place a shallow container beneath the filter to catch any residual water.
- Unscrew the filter slowly and remove any lint or foreign objects.
- Clean the filter under running water and screw it back in securely.

6.4 Drum Cleaning (Autoclean Cycle)

Use the dedicated Autoclean cycle to maintain the cleanliness of the drum and internal components. Run this cycle without any laundry or detergent.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed properly; Program not selected; Start/Pause button not pressed.	Check power plug and fuse; Ensure door is fully closed; Select a program; Press Start/Pause button.
Water not filling	Water tap closed; Water inlet hose kinked or blocked; Water pressure too low.	Open water tap; Straighten hose, check for blockages; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Filter blocked.	Straighten drain hose, check for blockages; Clean the filter (refer to Section 6.3).
Excessive vibration/noise	Appliance not level; Transport bolts not removed; Overloaded drum; Uneven load.	Adjust leveling feet; Remove transport bolts (refer to Section 4.1); Reduce load; Redistribute laundry in the drum.
Clothes not drying properly	Overloaded dryer; Lint filter blocked; Incorrect drying program selected.	Reduce load; Clean lint filter; Select appropriate drying program.

If the problem persists after attempting these solutions, please contact customer service.

8. SPECIFICATIONS

Technical specifications for the Indesit XWDE-961480XSGCC Washer Dryer:

Feature	Detail
Model	XWDE-961480XSGCC
Brand	Indesit

Feature	Detail
Type	Front Load Washer Dryer
Wash Capacity	9 kg
Dry Capacity	6 kg
Maximum Spin Speed	1400 RPM
Control Type	Push button front panel
Drum Material	Stainless Steel
Dimensions (D x W x H)	60.5 cm x 73.41 cm x 85 cm
Weight	73.41 kg
Fuel Type	Electric
Color	Silver
Cycle Options	Cotton, Delicate, Quick Wash, Rinse (and others listed in features)

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your appliance or contact your retailer. Keep your proof of purchase for warranty claims.

If you encounter any issues not covered in the troubleshooting section or require technical assistance, please contact Indesit customer support. Contact details can typically be found on the Indesit official website or in your purchase documentation.

