

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Moulinex](#) /

› [Moulinex Moulinette Ultimate Electric Chopper DP810810 - User Manual](#)

Moulinex DP810810

Moulinex Moulinette Ultimate Electric Chopper

Model: DP810810

User Manual

1. INTRODUCTION AND OVERVIEW

The Moulinex Moulinette Ultimate Electric Chopper, model DP810810, is designed for efficient and versatile food preparation. Equipped with exclusive Powelix Life titanium-coated blades and a powerful 1000W motor, this appliance offers exceptional durability and performance. Its 5-in-1 functionality allows you to cut, chop, mix, slice, and semi-mix various ingredients with ease, making it an ideal tool for daily kitchen tasks.

Key features include:

- Exclusive Powelix Life Technology: Ultra-sharp titanium-coated blades for superior chopping.
- Powerful 1000W Motor: Ensures efficient processing of even tough ingredients.
- 5-in-1 Functions: Cut, chop, mix, slice, and semi-mix for diverse culinary needs.
- Generous Capacity: Up to 550 ml (350g) for various preparations.
- Automatic Motor Protection: Safeguards against overheating for extended appliance life.
- Sealed Lid: Allows for mixing semi-liquid preparations without spills.
- Safety Locking System: Ensures secure operation.
- Easy to Clean: Components are designed for simple cleaning.



Image: The Moulinex Moulinette Ultimate Electric Chopper displayed with a variety of prepared foods, showcasing its versatility in the kitchen.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Moulinex Moulinette Ultimate Electric Chopper. Failure to follow these safety guidelines may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the appliance is connected to a grounded power outlet with the correct voltage (220 Volts). Do not immerse the motor unit in water or any other liquid. Always unplug the appliance from the power supply before assembling, disassembling, or cleaning.
- **Blade Safety:** The blades are extremely sharp. Handle them with extreme care, especially during assembly, disassembly, and cleaning. Always hold the blade unit by the plastic hub.
- **Child Safety:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children. Close supervision is necessary when any appliance is used near children.
- **Operation:** Never operate the appliance without the lid securely in place. Do not attempt to defeat the safety locking system. Avoid touching moving parts. Do not overload the appliance; refer to the maximum capacity markings.
- **Overheating Protection:** The motor is equipped with automatic protection against overheating. If the appliance stops during use, unplug it and allow it to cool down for at least 15 minutes before resuming operation.
- **Damage:** Do not use the appliance if the cord, plug, or any other part is damaged. Contact authorized service personnel for repair.
- **Stability:** Always place the appliance on a stable, flat, and dry surface during use.

3. PRODUCT COMPONENTS

Your Moulinex Moulinette Ultimate Electric Chopper consists of the following main components:

- **Motor Unit:** The base unit containing the 1000W motor and control button.
- **Chopping Bowl:** A transparent bowl with a capacity of up to 550 ml (350g).
- **Powelix Life Blades:** Two ultra-sharp, titanium-coated blades for efficient chopping.
- **Lid:** A sealed lid that ensures safe operation and prevents spills, especially for semi-liquid preparations.



Image: A close-up view of the ultra-sharp, titanium-coated Powelix Life blades, designed for superior chopping performance.

4. SETUP

Before first use, wash all removable parts (chopping bowl, blades, lid) in warm soapy water, rinse, and dry thoroughly. The motor unit should be wiped with a damp cloth.

1. Place the motor unit on a clean, dry, and stable surface.
2. Carefully place the chopping bowl onto the motor unit base, ensuring it is seated correctly.
3. Holding the blade unit by its plastic hub, carefully place the blades onto the central pin inside the chopping bowl. Ensure they are securely positioned.

4. Add your ingredients to the chopping bowl. Do not exceed the maximum fill line (approximately 550 ml or 350g for solid ingredients).
5. Place the lid onto the chopping bowl, aligning it properly and twisting or pressing down until it locks securely into place. The appliance will not operate if the lid is not correctly locked.
6. Plug the power cord into a suitable electrical outlet.



Image: The Moulinex Moulinette Ultimate Electric Chopper assembled with ingredients inside the bowl, ready for processing.

5. OPERATING INSTRUCTIONS

The Moulinex Moulinette Ultimate is designed for simple, one-touch operation. It offers 5-in-1 functions for various food preparation tasks.

1. Ensure the appliance is correctly assembled and plugged in as described in the Setup section.
2. To operate, press down firmly on the top of the motor unit (the lid). The appliance will start chopping as long as you maintain pressure.
3. Use short, pulsing bursts for coarse chopping or to achieve desired consistency. For finer results, hold the button down for a longer duration.
4. **For Chopping/Cutting:** Process ingredients like onions, garlic, herbs, nuts, or meat. Use short pulses

for coarse results, longer pulses for finer.

5. **For Mixing/Semi-mixing:** The sealed lid allows for mixing semi-liquid preparations such as sauces or purees. Ensure the liquid level does not exceed the maximum fill line.
6. **For Slicing:** While primarily a chopper, the powerful blades can achieve very fine slicing for certain soft ingredients with continuous operation.
7. Once the desired consistency is achieved, release the pressure on the motor unit. The blades will stop rotating.
8. Unplug the appliance from the power outlet.
9. Carefully remove the lid, then carefully remove the blade unit by its plastic hub.
10. Empty the contents of the chopping bowl.

Important: Do not operate the appliance continuously for more than 30 seconds to prevent motor strain. Allow a short break between cycles if prolonged processing is required.



Image: A hand pressing the top of the Moulinex Moulinette Ultimate Electric Chopper, demonstrating the simple activation method.



Image: The Moulinex Moulinette Ultimate Electric Chopper actively mincing meat, illustrating its powerful chopping capability.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Moulinex Moulinette Ultimate.

1. **Always unplug the appliance** before cleaning.
2. **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or wash it under running water.
3. **Chopping Bowl, Blades, and Lid:** These parts are dishwasher safe. Alternatively, they can be washed by hand in warm soapy water. Rinse thoroughly and dry immediately.
4. **Handling Blades:** Exercise extreme caution when cleaning the blades due to their sharpness. Use a brush if necessary to remove food residue.
5. **Storage:** Store the assembled appliance in a dry place, out of reach of children.

7. TROUBLESHOOTING

If you encounter any issues with your Moulinex Moulinette Ultimate, please refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; Lid not securely locked; Motor overheated.	Check power connection; Ensure lid is correctly locked; Unplug and let cool for 15 minutes.
Ingredients are not chopped evenly.	Too many ingredients; Ingredients too large; Insufficient processing time.	Reduce quantity; Cut ingredients into smaller pieces; Use longer pulses.
Appliance stops during operation.	Motor overheating protection activated; Overloaded.	Unplug and let cool for 15 minutes; Reduce ingredient quantity.
Lid appears fragile or difficult to secure.	Improper alignment; Wear and tear on locking tabs.	Ensure correct alignment before pressing; Handle lid carefully to avoid damage to locking tabs. If damaged, contact customer support.

If the problem persists after following these steps, please contact Moulinex customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	DP810810
Brand	Moulinex
Power	1000 Watts
Capacity	Up to 550 ml (350g)
Blade Material	Titanium (Powelix Life Technology)
Number of Speeds	1 (Pulse operation)
Dimensions (L x W x H)	17 x 17 x 25.5 cm
Weight	2.48 kilograms
Voltage	220 Volts
Power Source	Corded Electric
Dishwasher Safe Parts	Yes (Bowl, Blades, Lid)
Special Feature	Safety Lock, Overheat Protection

9. WARRANTY AND SUPPORT

Moulinex is committed to providing quality products and support. Your Moulinette Ultimate Electric Chopper is

designed for durability and comes with a commitment to repairability.

- **Repairability:** Moulinex products are designed to be repairable for **15 years at a fair price**. This commitment is supported by a network of **6200 authorized service centers worldwide**.
- **Customer Service:** For any questions, concerns, or to locate an authorized service center, please visit the official Moulinex website or contact their customer support line.
- **Proof of Purchase:** Always retain your proof of purchase for warranty claims or service requests.

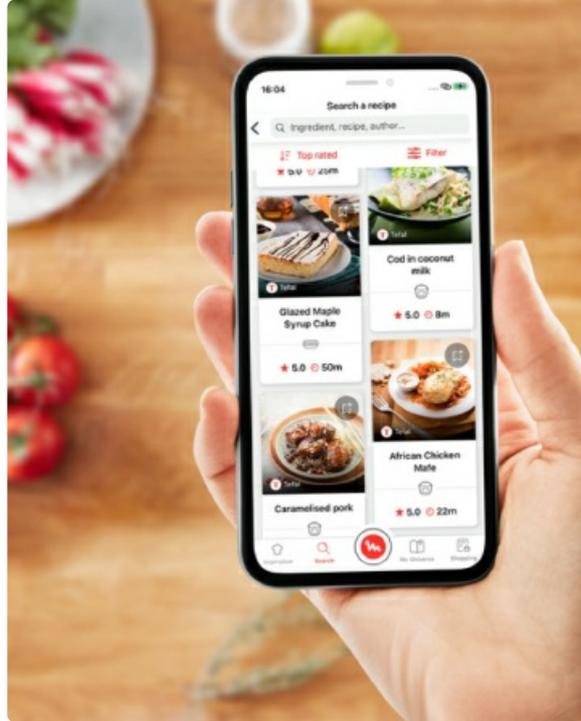


Image: Moulinex's commitment to 15-year repairability, supported by a global network of authorized service centers.