



Manuals.plus /

› Remax /

› Remax RB-S7 Bluetooth Wireless Earphones User Manual

Remax RB-S7

Remax RB-S7 Bluetooth Wireless Earphones User Manual

Model: RB-S7

INTRODUCTION

Thank you for choosing the Remax RB-S7 Bluetooth Wireless Earphones. This manual will guide you through the features, setup, and operation of your new earphones. Please read these instructions carefully before use and retain them for future reference.

PRODUCT OVERVIEW

The Remax RB-S7 earphones feature a magnetic design for convenient storage and wireless Bluetooth connectivity for a seamless audio experience. They are designed for in-ear comfort and include a microphone for calls and active noise-cancelling capabilities.



Image: Close-up view of the Remax RB-S7 Bluetooth Wireless Earphones, showing the in-ear design and magnetic earpieces.



Image: The retail packaging for the Remax RB-S7 Bluetooth Wireless Earphones, displaying the product and key features.

SETUP

1. Charging the Earphones

Before first use, ensure the earphones are fully charged. Connect the charging cable (not included, typically Micro USB or USB-C) to the charging port on the earphones and to a USB power source. The indicator light will show charging status (e.g., red for charging, blue for fully charged).

2. Bluetooth Pairing

1. Ensure the earphones are turned off.
2. Press and hold the multi-function button (usually the power button) until the indicator light flashes red and blue

alternately, indicating pairing mode.

3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "Remax RB-S7" from the list of found devices.
5. Once paired, the indicator light will typically flash blue slowly or turn off, and you may hear a confirmation tone.

Note: If prompted for a password, enter "0000".

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the multi-function button for approximately 3 seconds until the blue indicator light flashes.
- **Power Off:** Press and hold the multi-function button for approximately 5 seconds until the red indicator light flashes and then turns off.

Call Management

- **Answer/End Call:** Short press the multi-function button.
- **Reject Call:** Press and hold the multi-function button for 2 seconds.
- **Redial Last Number:** Double-press the multi-function button.

Music Playback

- **Play/Pause:** Short press the multi-function button.
- **Next Track:** Press and hold the Volume + button.
- **Previous Track:** Press and hold the Volume - button.

Volume Control

- **Increase Volume:** Short press the Volume + button.
- **Decrease Volume:** Short press the Volume - button.

MAINTENANCE

- Keep the earphones dry. Avoid exposure to moisture or liquids.
- Clean the earphones with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the earphones in a cool, dry place when not in use. The magnetic design helps prevent tangling.
- Avoid extreme temperatures, as this can shorten battery life and affect performance.

TROUBLESHOOTING

Problem	Possible Solution
Earphones do not power on.	Ensure the earphones are fully charged. Connect to a power source and check the charging indicator.
Cannot pair with device.	<ul style="list-style-type: none"> • Ensure earphones are in pairing mode (red and blue flashing light). • Make sure Bluetooth is enabled on your device. • Move earphones closer to your device. • Forget "Remax RB-S7" from your device's Bluetooth list and try pairing again.
No sound or poor sound quality.	<ul style="list-style-type: none"> • Check the volume levels on both the earphones and your connected device. • Ensure the earphones are properly paired and connected. • Try moving closer to your device to avoid interference. • Restart both the earphones and your device.
Microphone not working.	<ul style="list-style-type: none"> • Ensure the earphones are properly connected for calls. • Check microphone permissions on your connected device for the app you are using.

SPECIFICATIONS

Feature	Detail
Brand	Remax
Model Number	RB-S7
Connectivity	Wireless (Bluetooth)
Form Factor	In-Ear
Microphone	Included
Noise Control	Active Noise Cancellation
Control Type	Volume Control, Touch Control
Cable Feature	Without Cable
Compatible Devices	All Bluetooth-enabled devices
Material	Plastic
Color	White

SAFETY INFORMATION

- Do not disassemble or modify the earphones. This may cause damage or injury.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Keep out of reach of children.
- Dispose of the product responsibly according to local regulations.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact your retailer. Keep your proof of purchase for warranty claims.