

[manuals.plus](#) /› [BLACK+DECKER](#) /› [BLACK+DECKER Dustbuster Handheld Vacuum HHVK320J10 User Manual](#)**BLACK+DECKER HHVK320J10**

BLACK+DECKER Dustbuster Handheld Vacuum

Model: HHVK320J10

Brand: BLACK+DECKER

INTRODUCTION

The BLACK+DECKER Dustbuster Advanced Clean+ Cordless Handheld Vacuum (Model HHVK320J10) is designed for efficient and convenient cleaning of hard-to-reach areas. This 12V handheld vacuum offers powerful suction and extended runtime, making it suitable for various cleaning tasks around the home and in vehicles. Its user-friendly design ensures easy operation and maintenance.



Image: The BLACK+DECKER Dustbuster Handheld Vacuum, Model HHVK320J10, shown with its included charger, pre-filter, and main filter.

PRODUCT OVERVIEW

The HHVK320J10 Dustbuster is equipped with features designed for enhanced cleaning performance and user convenience:

- **Powerful Suction:** Up to 4 times more suction power compared to leading hand vacuums.
- **Power Boost Mode:** Provides additional power with the touch of a button for tougher messes.
- **Extended Crevice Tool:** An extra-long, built-in crevice tool allows access to tight and hard-to-reach spaces.
- **Large Dustbin:** An XL 750 ml dust bin reduces the frequency of emptying.
- **Easy Emptying:** One-touch easy empty mechanism for hygienic disposal of dirt without direct contact.
- **Longer Runtime:** Up to 90% more runtime compared to previous models.
- **Battery Indicator:** Keeps you informed of the remaining battery life.

Up To 4X More Suction Power

Than our leading hand vacuum.*

POWERBOOST™

More suction with the push of a button.

Charging — Indicator Light



Extra Large Dustbin

Pick up more debris and empty less often.

One-Touch Easy-Empty Design

For no contact with dirt and dust.

Extra-Long Crevice Tool

For hard-to-reach places.

*BLACK + DECKER™ hand vacuum HNV115.

Image: A diagram highlighting key features of the Dustbuster, including Powerboost, Charging Indicator Light, Extra Large Dustbin, Extra-Long Crevice Tool, and One-Touch Easy-Empty design.

SETUP

- Unpacking:** Carefully remove all components from the packaging. Ensure the vacuum, charger, filter, and pre-filter are present.
- Initial Charge:** Before first use, fully charge the vacuum. Connect the charger to the vacuum's charging port and plug it into a standard electrical outlet. The charging time is approximately 5 hours. The battery indicator light will show charging status.
- Filter Installation:** Ensure the main filter and pre-filter are correctly installed in the dustbin before operation. Refer to the maintenance section for proper filter assembly.



Image: The handheld vacuum plugged into a wall outlet for charging, resting on a kitchen counter.

OPERATION

- 1. Power On/Off:** Press the power button once for standard suction. Press it a second time to activate Power Boost mode for increased suction. Press a third time to turn the vacuum off.
- 2. Using the Crevice Tool:** The integrated crevice tool can be extended for reaching into narrow gaps, corners, and other confined spaces. Simply pull the nozzle forward until it locks into place.
- 3. Multi-Surface Cleaning:** The vacuum is suitable for various surfaces including hard floors, carpets, upholstery, and car interiors.

Extra Long Crevice Tool

For hard to reach spaces.



Image: The extra-long crevice tool being used to clean debris from a sofa cushion.



Multi-Surface Cleaning

Great for furniture, carpet, car interiors,
and high-traffic surfaces.



Image: A collage demonstrating the vacuum's versatility for cleaning furniture, car interiors, and high-traffic surfaces.



Image: The vacuum being used to clean the floor mat inside a car.

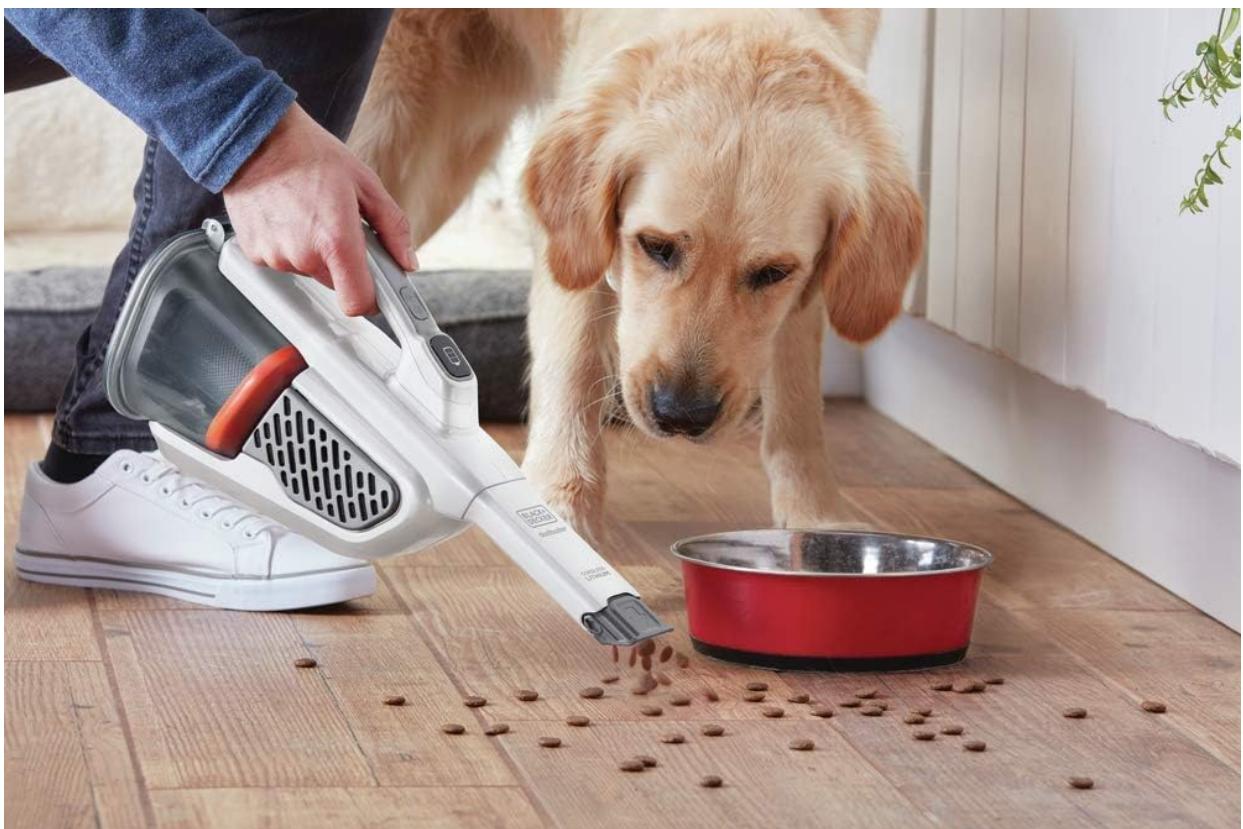


Image: The vacuum effectively picking up spilled pet food from a wooden floor.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum.

- 1. Emptying the Dustbin:** To empty the dustbin, press the one-touch release button. The dustbin will open,

allowing you to dispose of collected debris without touching the dirt. Empty the dustbin after each use or when it reaches the MAX fill line.

2. **Cleaning the Filters:** The vacuum includes a main filter and a pre-filter. These filters can be rinsed under running water. Allow them to air dry completely for at least 24 hours before reinserting them into the vacuum. Do not use a brush or any abrasive materials to clean the filters, as this may damage them.



Image: A person rinsing the orange main filter and the grey pre-filter under a kitchen faucet.

TROUBLESHOOTING

If you encounter issues with your BLACK+DECKER Dustbuster, refer to the following common solutions:

| Problem | Possible Cause | Solution |
|--------------------------|----------------------|--|
| Vacuum does not turn on. | Battery is depleted. | Charge the vacuum fully (approx. 5 hours). |
| Reduced suction power. | Dustbin is full. | Empty the dustbin. |
| Reduced suction power. | Filters are clogged. | Clean and dry the filters thoroughly. |

| Problem | Possible Cause | Solution |
|------------------------|-------------------------------------|---|
| Reduced suction power. | Nozzle or inlet is blocked. | Inspect the nozzle and the inlet where it meets the body for any blockages (e.g., dust, hair, larger debris) and carefully remove them. |
| Short runtime. | Battery not fully charged or aging. | Ensure the vacuum is fully charged before use. If the issue persists, battery may need replacement (contact support). |

For issues not listed here, or if solutions do not resolve the problem, please contact BLACK+DECKER customer support.

SPECIFICATIONS

| Feature | Specification |
|------------------------|---|
| Brand | BLACK+DECKER |
| Model Name | HHVK320J10 |
| Color | White |
| Form Factor | Handheld |
| Power Source | Battery Powered (Cordless) |
| Battery Type | Lithium-Ion |
| Capacity | 750 Milliliters |
| Wattage | 120 watts |
| Amperage | 3.6 Amps |
| Noise Level | 80 dB |
| Product Dimensions | 15.79" L x 7.89" W x 6.57" H |
| Item Weight | 2.4 pounds |
| Filter Type | Cloth |
| Included Components | Filter, Charger, Pre-Filter, Crevice tool |
| Number of Power Levels | 2 |
| Control Method | Touch |
| Recommended Uses | Hard Floor, Car, Upholstery |

WARRANTY & SUPPORT

This BLACK+DECKER Dustbuster Handheld Vacuum (Model HHVK320J10) comes with a **2-year limited warranty**.

For detailed warranty information, product registration, or technical support, please visit the official BLACK+DECKER website or refer to the full user manual.

You can also download the complete User Manual in PDF format: [Download User Manual \(PDF\)](#)

© 2025 BLACK+DECKER. All rights reserved.