

[Manuals.plus](#) /

› [KOMOK](#) /

› KOMOK Electric Pruning Shears User Manual (Model 32mm)

KOMOK 32mm

KOMOK Electric Pruning Shears User Manual

Model: 32mm

INTRODUCTION

This manual provides essential information for the safe operation, maintenance, and care of your KOMOK Electric Pruning Shears. Please read this manual thoroughly before first use and retain it for future reference.

SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in serious injury or property damage.

- Always wear appropriate personal protective equipment, including safety glasses, gloves, and sturdy footwear, when operating the pruning shears.
- Keep hands and fingers away from the blades during operation. The blades are extremely sharp and powerful.
- Ensure the safety switch is engaged when the tool is not in use or during maintenance.
- Do not allow children or untrained individuals to operate this tool. This tool is for adult use only.
- Avoid operating the shears in wet conditions or near flammable liquids or gases.
- Inspect the tool for damage before each use. Do not operate if damaged.
- Use only original KOMOK batteries and chargers.
- When transporting or storing, ensure the blades are closed and the safety switch is engaged.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Cordless Electric Pruner
- 2 x Rechargeable Lithium Batteries (25.2V, 2AH)
- 1 x US Charge Adapter
- 2 x Wrench Tools
- 1 x Storage Case
- 1 x Pair of Work Gloves

- 1 x User Manual

ADVANCED ELECTRIC PRUNER SHEARS



2 x
Backup batteries



2 x
Wrench tool



1 x
Charge adapter



1 x
Storage case



1 x
Work gloves



1 x
User's manual

Figure 1: Included Components

SETUP

1. Charge the Batteries:

Before first use, fully charge both lithium batteries. Connect the charge adapter to a power outlet and then to the battery. The charging indicator will show the charging status. A full charge takes approximately 2 hours. Ensure batteries are fully charged for optimal performance and extended lifespan.

LARGE CAPACITY BATTERY

2 Pcs 21V Lithium-Ion Battery Rechargeable



2-3 Hours
Quick Charging



8-10 Hours
Long battery life



CE/ROHS/MSDS/UN38.3 Certification



Over Voltage
Protection



Over Current
Protection



Over
Temperature
Protection



Charging
& Discharging
Protection

Figure 2: Battery Charging

2. Install the Battery:

Once charged, slide a battery into the battery compartment at the base of the pruner handle until it clicks securely into place. Ensure the battery release button is fully engaged.

3. Initial Inspection:

Before turning on, visually inspect the blades for any damage or debris. Ensure the blades are clean and move freely.

OPERATING INSTRUCTIONS

1. Power On:

Locate the safety switch, typically on the side or bottom of the handle. Slide the switch to the "ON" position. The LED display will illuminate, showing the number of cuts made and the current battery percentage.

MAX CUTTING CAPACITY:32MM

Professional Cordless Electric Pruning Shears



Figure 3: Pruner Components and LED Display

2. Operating the Blades:

To close the blades and make a cut, pull and hold the trigger. Release the trigger to allow the blades to open. The pruner features a blade locking function to prevent accidental injuries when not in use.



Figure 4: Trigger Operation and Blade Lock

3. Cutting Capacity:

The KOMOK Electric Pruning Shears are designed to cut branches up to 1.26 inches (32mm) in diameter. Do not attempt to cut branches exceeding this capacity to avoid damage to the tool and potential injury.



Figure 5: Cutting Diameter Demonstration

4. Brushless Motor Advantage:

The pruner is equipped with an 800W brushless motor, providing efficient and powerful cutting performance with extended lifespan compared to conventional brush motors.



Figure 6: Brushless Motor

MAINTENANCE

- **Blade Cleaning:**

After each use, clean the blades to remove sap, debris, and plant residue. The SK5 high carbon steel blades with DLC coating are designed to resist gumming and rust. Use a resin remover or a damp cloth to wipe the blades clean. Ensure the tool is powered off and the battery is removed before cleaning.



Figure 7: SK5 Blades with DLC Coating

- **Lubrication:**

Periodically apply a small amount of lubricating oil to the blade pivot point and cutting surfaces to ensure smooth operation and prevent rust. Refer to the oil filling port shown in Figure 3.

- **Blade Sharpening:**

Over time, the blades may become dull. Sharpen them using a suitable sharpening tool, following the original blade angle. If unsure, consult a professional or replace the blades.

- **Storage:**

Store the pruning shears in their original storage case in a dry, secure location, out of reach of children. Ensure the battery is removed and the safety switch is engaged before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Pruner does not turn on.	Battery not charged or improperly installed. Safety switch not engaged.	Ensure battery is fully charged and correctly inserted. Check if the safety switch is in the "ON" position.
Blades do not cut effectively.	Blades are dull or dirty. Cutting material exceeds capacity.	Clean and sharpen blades. Do not attempt to cut branches larger than 1.26 inches (32mm).
Battery life is shorter than expected.	Battery not fully charged. Old or damaged battery.	Ensure battery is fully charged before use. Consider replacing old batteries.
Tool overheats.	Continuous heavy use. Blocked ventilation.	Allow the tool to cool down. Ensure ventilation slots are clear of debris. Avoid prolonged heavy cutting.

SPECIFICATIONS

Brand:	KOMOK
Model:	32mm
Blade Material:	SK5 High Carbon Steel with DLC Coating
Max Cutting Diameter:	1.26 inches (32mm)
Motor Type:	Brushless Motor
Motor Power:	800W
Battery Type:	25.2V, 2AH Lithium-Ion (2 included)
Charging Time:	Approx. 2 hours
Working Time:	8-10 hours (per charge with two batteries)
Item Weight (with one battery):	Approx. 2.6 pounds (1.18 kg)
Product Dimensions:	11.02"L x 4.49"W (28cm L x 11.4cm W)

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: General overview and demonstration of the KOMOK Electric Pruning Shears in use.

WARRANTY AND SUPPORT

KOMOK provides an **18-month warranty** for this product. For any questions, technical assistance, or warranty claims, please contact KOMOK customer service. Our support team is available **7 days a week, 24 hours a day**. Please refer to your purchase documentation for specific contact details or visit the official KOMOK website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07RB5MQB2>

More documents and user manuals: <https://manuals.plus/>