

Calvas 6711A90032L

Calvas LG Air Conditioner Remote Control User Manual

Model: 6711A90032L

Brand: Calvas

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Calvas LG Air Conditioner Remote Control, model 6711A90032L. This remote is designed to be compatible with various LG air conditioning units, including models 6711A20096T, 6711A20077U, and 6711A20077L. Please read these instructions carefully before use to ensure optimal performance and longevity of your device.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating battery insertion.

2.2 Initial Use

Once batteries are installed, the remote control is ready for use. Point the remote directly at your LG air conditioning unit's infrared receiver. No additional pairing is typically required for this universal replacement remote.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions on your remote control:



Image: Front view of the remote control, highlighting various function buttons.

- **ON-OFF Button:** Powers the air conditioner on or off.
- **Mode Selection Buttons (Icons):** Cycles through operating modes such as Cool (snowflake), Fan (fan icon), Dry (water drop), and Heat (sun).
- **Temperature Adjustment Buttons (Up/Down Arrows):** Increases or decreases the desired temperature setting.
- **Fan Speed Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Swing Button:** Controls the louver movement for air direction.
- **PLASMA Button:** Activates or deactivates the Plasma filter function (if available on your AC unit).
- **AUTO CLEAN Button:** Initiates the automatic cleaning function for the indoor unit.
- **SET Button:** Confirms settings or enters a setting mode.
- **CANCEL Button:** Exits a setting mode or cancels an operation.
- **RESET Button:** Resets the remote control to default settings. Use a pointed object to press this recessed button.
- **2nd F Button:** Activates secondary functions for certain buttons (refer to your AC unit's manual for specific combinations).

3.1 Basic Operation Steps

1. **To Turn On/Off:** Press the **ON-OFF** button.
2. **To Select Mode:** Press the **Mode Selection** button repeatedly until the desired mode icon appears on the remote's display (if applicable) or the AC unit responds.
3. **To Adjust Temperature:** Use the **Up/Down Arrow** buttons to set your preferred temperature.

4. MAINTENANCE

4.1 Cleaning the Remote Control

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these may damage the surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's range decreases or if the air conditioner does not respond to commands. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries or different types of batteries.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstacles between the remote control and the air conditioner's receiver.
 - Make sure you are within the effective operating range (up to 9 meters).
- **Limited range or intermittent operation:**
 - Replace batteries.
 - Ensure the remote's infrared emitter and the AC unit's receiver are clean and unobstructed.
- **Remote display is dim or blank:**
 - Replace batteries.

6. SPECIFICATIONS

Model Number	6711A90032L
Usage	Air Conditioner
Wireless Communication	Infrared (IR)
Frequency	433 MHz
Number of Channels	4
Batteries Required	2 x AAA (Alkaline, not included)
Maximum Range	9 Meters
Item Weight	90 Grams
Special Feature	Digital Display

7. WARRANTY AND SUPPORT

All products undergo testing prior to shipment to ensure quality. If you are not satisfied with your item, you may return it within 7 days for a replacement or refund. The buyer is responsible for shipping costs associated with returns.

If the item is found to be defective within 3 months of purchase, a replacement will be provided without additional charge, or an alternative offer may be extended.

For further assistance or inquiries, please refer to your purchase platform or contact the seller directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question