



Manuals.plus /

- › Ochoos /
- › Ochoos MIDEA Air Conditioner Remote Control User Manual

## Ochoos RN02H /BG

# Ochoos MIDEA Air Conditioner Remote Control User Manual

Model: RN02H /BG | Brand: Ochoos

## 1. INTRODUCTION

---

This user manual provides detailed instructions for the operation and maintenance of your Ochoos MIDEA Air Conditioner Remote Control. This remote is designed to be compatible with various MIDEA air conditioner models, including RN02A, RN02B, RN02C, RN02D, RN02E, and RN02H /BG. Please read this manual carefully before using the remote control to ensure proper functionality and to maximize its lifespan.



Figure 1.1: Front view of the Ochoos MIDEA Air Conditioner Remote Control.

## 2. SETUP

---

### 2.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two AAA batteries, matching the (+) and (-) terminals as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2.1: Battery compartment with cover removed, showing battery insertion.

**Important:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the unit.

### 3. OPERATING INSTRUCTIONS

---

To operate your air conditioner, point the remote control directly at the air conditioner's receiver. Ensure there are no obstructions between the remote and the unit. The maximum effective range is approximately 9 meters.



Figure 3.1: Overview of the remote control buttons.

### 3.1 Button Functions

- **ON/OFF:** Press to turn the air conditioner on or off.
- **MODE:** Cycles through available operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **FAN:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **TEMP ▲/▼:** Increases or decreases the set temperature.
- **ECO:** Activates or deactivates the energy-saving mode.
- **TIMER ON:** Sets a timer for the air conditioner to turn on automatically.
- **TIMER OFF:** Sets a timer for the air conditioner to turn off automatically.
- **SLEEP:** Activates the sleep mode, which adjusts temperature and fan speed for comfortable sleep.
- **FRESH:** Activates or deactivates the fresh air function (if available on your AC unit).
- **SWING DIRECT:** Controls the horizontal or vertical swing of the air deflector.
- **TURBO SELF CLEAN:** Initiates a self-cleaning cycle for the indoor unit (if supported).
- **LED FOLLOW ME:** Activates a feature where the remote's temperature sensor influences the AC's operation (if supported).
- **SHORTCUT BUTTON:** Used to restore the current settings or resume a previous setting. If pressed for more than 2 seconds, the system will automatically restore the current operation setting.

## 4. MAINTENANCE

---

### 4.1 Cleaning the Remote Control

To maintain the appearance and functionality of your remote control, clean it regularly.

- Wipe the surface of the remote control with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote's surface or internal components.

### 4.2 Battery Replacement

Replace the batteries when the remote control's display becomes dim or its response time slows down. Always replace both batteries at the same time with new AAA batteries.

## 5. TROUBLESHOOTING

---

If you experience issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control not responding.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity.
Remote control has limited range or intermittent response.	Weak batteries, obstruction between remote and AC unit, or remote too far from AC unit.	Replace batteries. Ensure clear line of sight to the AC unit. Move closer to the AC unit (within 9 meters).
Air conditioner does not respond to specific commands.	Incorrect mode selected, or feature not supported by your specific AC model.	Verify the selected mode. Refer to your air conditioner's manual for supported features. Try resetting the remote by removing and reinserting batteries.

## 6. SPECIFICATIONS

---

Below are the technical specifications for the Ochoos MIDEA Air Conditioner Remote Control:

- **Brand:** Ochoos
- **Model Number:** RN02H /BG (also compatible with RN02A, RN02B, RN02C, RN02D, RN02E)
- **Communication:** Wireless IR (Infrared)
- **Frequency:** 433 MHz
- **Power Source:** 2 x AAA Batteries (3VDC)
- **Compatible Devices:** MIDEA Air Conditioners
- **Maximum Range:** 9 Meters
- **Item Weight:** Approximately 90 Grams



Figure 6.1: Back label of the remote control with model and voltage information.

## 7. WARRANTY INFORMATION

---

Warranty information for this product is not available in the provided data. Please refer to your purchase documentation or contact the seller directly for details regarding warranty coverage.

## 8. SUPPORT

---

For technical support or further assistance, please contact the retailer or manufacturer. Specific support contact details are not available in this manual.