

## Monoprice 136639

# Monoprice Steel Computer PC Tower Mobile Stand User Manual

Model: 136639

Brand: Monoprice

## INTRODUCTION

The Monoprice Steel Computer PC Tower Mobile Stand is designed to optimize your workspace by providing a stable, mobile, and elevated platform for your computer tower. This stand helps reclaim desk space, improves air circulation around your PC, and protects it from dust and potential liquid spills on the floor. Its adjustable width accommodates various computer case sizes, and built-in casters allow for easy repositioning.

## FEATURES

- **Space Optimization:** Moves computer case from desk to floor, freeing up valuable desk space.
- **Enhanced Protection:** Elevates PC from floor, reducing exposure to dust and liquid spills.
- **Improved Airflow:** Promotes better air circulation around the computer tower.
- **Adjustable Width:** Fits most computer cases with widths between 4.7 inches and 8.2 inches.
- **Mobility:** Equipped with built-in casters for easy movement and access to ports.
- **Durable Construction:** Made from quality powder-coated steel for long-lasting use.

## PACKAGE CONTENTS

Please verify that all components are present before assembly:

- Monoprice Steel Computer PC Tower Mobile Stand (Main Frame)
- Adjustable Side Panel(s)
- Casters (Wheels) with locking mechanism
- Thumb Screws (for width adjustment)
- Protective Pads (for inner surfaces)



*Image: The Monoprice Steel Computer PC Tower Mobile Stand, showcasing its black powder-coated steel construction and four integrated casters.*

## SETUP AND ASSEMBLY

---

The Monoprice PC Tower Mobile Stand requires minimal assembly. Follow these steps to set up your stand:

1. **Attach Casters:** Carefully screw the casters into the designated holes on the underside of the main stand frame. Ensure they are securely tightened.
2. **Adjust Width:** Place your computer tower on the stand. Use the thumb screws to adjust the width of the stand to snugly fit your PC tower. The stand is designed to hold towers between 4.7 inches and 8.2 inches wide.
3. **Apply Protective Pads:** For added protection against scratches, apply the provided protective pads to the inner surfaces of the stand where it will contact your computer tower.
4. **Secure Tower:** Once the width is adjusted, ensure the thumb screws are tightened to secure the tower firmly within the stand.



*Image: A view demonstrating the adjustable width feature of the stand, allowing it to accommodate various PC tower sizes.*



*Image: An underside view of the stand, highlighting the robust casters and the base structure.*

## OPERATION

---

Using your Monoprice PC Tower Mobile Stand is straightforward:

- **Positioning:** Place the stand with your computer tower in your desired location, typically under a desk or in an accessible area.
- **Mobility:** To move your computer tower, simply unlock the casters (if applicable) and roll the stand to the new position. This is particularly useful for accessing rear ports or cleaning.
- **Stability:** Once in position, engage the locking mechanism on the casters to prevent unintended movement.



*Image: The mobile stand positioned under a desk, holding a black computer tower, demonstrating its space-saving utility.*



*Image: Another example of the mobile stand in use, supporting a silver computer tower next to a filing cabinet.*

## MAINTENANCE

---

To ensure the longevity and optimal performance of your Monoprice PC Tower Mobile Stand, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the stand with a soft, damp cloth to remove dust and dirt. Avoid abrasive cleaners or solvents that could damage the powder-coated finish.
- **Caster Check:** Periodically check the casters for any accumulated debris (e.g., hair, lint) that might hinder smooth movement. Clean as necessary.
- **Tightness:** Occasionally verify that the thumb screws and caster attachments remain tight to ensure stability.

## TROUBLESHOOTING

---

If you encounter any issues with your Monoprice PC Tower Mobile Stand, refer to the following common solutions:

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Thumb screws not tightened; casters loose.	Ensure thumb screws are fully tightened to secure the PC tower. Check and tighten all caster attachments.
Castors do not roll smoothly.	Debris caught in casters; casters locked.	Inspect casters for hair, lint, or other debris and remove. Ensure caster locks are disengaged.



Problem	Possible Cause	Solution
PC tower does not fit.	Tower width outside adjustable range.	Verify your PC tower's width is between 4.7" and 8.2". If not, this stand may not be compatible.

## SPECIFICATIONS

Attribute	Detail
Product Dimensions	10.8 x 5.5 x 6.2 inches (L x W x H)
Adjustable Width Range	4.7 inches ~ 8.2 inches
Item Weight	3.62 pounds
Material	Powder-Coated Steel
Color	Black
Model Number	136639

## WARRANTY AND SUPPORT


Monoprice stands behind its products. For warranty information, technical support, or to inquire about replacement parts, please visit the official Monoprice website or contact their customer service directly. Please have your model number (136639) ready when contacting support.






Monoprice Official Website: [www.monoprice.com](http://www.monoprice.com)

© 2024 Monoprice. All rights reserved.

This manual is for informational purposes only. Monoprice is not responsible for any damages or injuries resulting from improper use or assembly of this product.

### Related Documents - 136639

	<p><a href="#">Monoprice 12579 Decor Insert with Flexible Opening, Black - Quick Installation Guide</a></p> <p>This quick installation guide from Monoprice provides step-by-step instructions for installing the 12579 Decor Insert with Flexible Opening in Black. Learn how to manage AV cables and achieve a finished look for your wall installation.</p>
---	--

 <p>MONOPRICE Triple Monitor Pyramid Free Standing Desk Mount P/N 15707 User's Manual</p>	<p><a href="#">Monoprice Triple Monitor Pyramid Free Standing Desk Mount User Manual</a></p> <p>User manual for the Monoprice Triple Monitor Pyramid Free Standing Desk Mount (P/N: 15707). Features, specifications, installation guide, package contents, and safety information for mounting up to three 15"-30" monitors.</p>
 <p>MONOPRICE Cable Plate with Flexible Opening, 2-Gang, Black P/N 12583 Quick Installation Guide</p>	<p><a href="#">Monoprice Cable Plate with Flexible Opening, 2-Gang, Black - Quick Installation Guide (P/N 12583)</a></p> <p>Step-by-step installation guide for the Monoprice Cable Plate with Flexible Opening (2-Gang, Black, P/N 12583). Learn how to safely install low voltage cables behind your flat panel TV and audio/video devices.</p>
 <p>BLACKBIRD 4K HDMI 2.0 2x1 USB 3.0 KVM Switch P/N 42643 User's Manual</p>	<p><a href="#">Blackbird 4K HDMI 2.0 2x1 USB 3.0 KVM Switch User Manual</a></p> <p>User manual for the Monoprice Blackbird 4K HDMI 2.0 2x1 USB 3.0 KVM Switch (PN 42643). This guide covers safety warnings, introduction, features, package contents, product overview, installation, operation, technical support, specifications, and regulatory compliance.</p>
 <p>MONOPRICE Adjustable Underdesk Keyboard Tray P/N 24639 User Manual</p>	<p><a href="#">Monoprice Adjustable Underdesk Keyboard Tray 24639 User Manual</a></p> <p>User manual for the Monoprice Adjustable Underdesk Keyboard Tray (P/N 24639), detailing installation, parts, and features. Learn how to mount and adjust your keyboard tray for optimal ergonomics.</p>
 <p>MONOPRICE Harmony Mini Bluetooth® Wireless Speaker P/N 33828 User's Manual</p>	<p><a href="#">Monoprice Harmony Mini Bluetooth Wireless Speaker User Manual (Model 33828)</a></p> <p>User manual for the Monoprice Harmony Mini Bluetooth Wireless Speaker (Model 33828). Provides instructions on safety, features, charging, Bluetooth pairing, audio playback, phone calls, technical support, specifications, and regulatory compliance.</p>