

[manuals.plus](#) /› [Baumatic](#) /› [Baumatic BMEMWFS25SS 25 Litre Freestanding Microwave Oven & Grill User Manual](#)

Baumatic BMEMWFS25SS

Baumatic BMEMWFS25SS 25 Litre Freestanding Microwave Oven & Grill User Manual

Model: BMEMWFS25SS

1. INTRODUCTION

Thank you for choosing the Baumatic BMEMWFS25SS 25 Litre Freestanding Microwave Oven & Grill. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions thoroughly before use and retain them for future reference.

Important Safety Instructions

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly earthed.
- Do not use corrosive chemicals or vapors in this appliance.
- This appliance is intended for household use only.

2. PRODUCT OVERVIEW

The Baumatic BMEMWFS25SS is a versatile 25-litre freestanding microwave oven with an integrated grill function. It features a stainless steel and black glass finish, an LED display, and an electronic jog dial for easy operation.



Image: Front view of the Baumatic BMEMWFS25SS microwave oven, showing the control panel with LED display, jog dial, and buttons, alongside the microwave door.

Components and Controls

- **LED Display:** Shows time, cooking settings, and indicators.
- **Electronic Jog Dial:** Used to adjust time, power levels, and select menu options.
- **Control Buttons:** For various functions such as Microwave, Grill, Combination, Auto Menus, Clock, Start, Stop/Cancel, and Quick Cook.
- **Oven Door:** With a viewing window.
- **Turntable:** Glass plate for even cooking.
- **Turntable Support:** Ring with rollers.
- **Grill Rack:** For use during grill cooking.

3. SETUP

Unpacking

- Carefully remove the microwave oven and all packing materials from the carton.
- Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
- Remove any protective film from the surface of the cabinet and door.

Placement

- Place the oven on a stable, level surface that can support its weight and the heaviest food item likely to be cooked in the oven.
- Ensure adequate ventilation. Leave a minimum of 20 cm clearance above the oven, 10 cm at the rear, and 5 cm on both sides. Blockage of air vents can damage the oven.
- Keep the oven away from heat and steam sources.
- Do not place the oven near a radio or TV, as microwave operation may cause interference.

Electrical Connection

- Plug the power cord into a standard 230V, 50Hz grounded electrical outlet.
- Do not use extension cords or adapters.

Turntable Assembly

1. Place the turntable support ring in the center of the oven cavity.
2. Place the glass turntable plate on top of the support ring, ensuring it sits securely in the center hub.

4. OPERATING INSTRUCTIONS

Setting the Clock

1. Press the 'Clock' button.
2. Turn the Electronic Jog Dial to set the hour. Press 'Clock' again.
3. Turn the Electronic Jog Dial to set the minutes. Press 'Clock' to confirm.

Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable. Close the door.
2. Press the 'Microwave' button repeatedly to select the desired power level (5 levels available).
3. Turn the Electronic Jog Dial to set the cooking time.
4. Press the 'Start' button to begin cooking.

Grill Function

1. Place food on the grill rack (if applicable) or a heat-resistant dish.
2. Press the 'Grill' button (1 power level available).
3. Turn the Electronic Jog Dial to set the grilling time.
4. Press the 'Start' button to begin grilling.

Combination Cooking

This oven offers 2 combination microwave and grill power levels.

1. Place food in a suitable container.
2. Press the 'Combi' button repeatedly to select the desired combination mode.
3. Turn the Electronic Jog Dial to set the cooking time.
4. Press the 'Start' button to begin.

Auto Menus

The oven has 8 pre-programmed auto menus for common food items.

1. Press the 'Auto Menu' button.
2. Turn the Electronic Jog Dial to select the desired menu number.
3. Press 'Auto Menu' again to confirm.
4. Turn the Electronic Jog Dial to select the food weight or quantity.
5. Press the 'Start' button to begin.

30 Second Quick Cook Feature

For quick heating, simply press the '30 Sec Quick Cook' button. Each press adds 30 seconds of cooking time at full microwave power.

Defrost Function

The defrost function allows you to thaw frozen food efficiently.

1. Place frozen food in a microwave-safe container.
2. Press the 'Defrost' button (if available, or refer to auto menus for defrost options).
3. Turn the Electronic Jog Dial to select the weight of the food.
4. Press the 'Start' button.

Child Safety Lock

To prevent unsupervised operation, activate the child safety lock.

- **To activate:** Press and hold the 'Stop/Cancel' button for 3 seconds. A lock indicator will appear on the display.
- **To deactivate:** Press and hold the 'Stop/Cancel' button for 3 seconds again. The lock indicator will disappear.

5. MAINTENANCE

Cleaning the Oven

- Always unplug the oven before cleaning.
- **Oven Interior:** Wipe the interior cavity after each use with a damp cloth. For stubborn stains, use a mild detergent. Avoid abrasive cleaners.
- **Oven Exterior:** Clean the exterior with a soft, damp cloth. Do not allow water to enter the ventilation openings.
- **Door and Door Seals:** Wipe the door, door seals, and adjacent parts frequently with a damp cloth to remove spills and splatters.
- **Turntable:** The glass turntable and turntable support can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Grill Rack:** Wash the grill rack in warm soapy water.

General Care

- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Regularly check the power cord for any signs of damage. If damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

6. TROUBLESHOOTING

If you encounter issues with your microwave oven, please consult the following table before contacting customer service.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating	Door not closed properly; Incorrect cooking time/power level set.	Ensure door is firmly closed; Adjust cooking time and power level as needed.
Turntable not rotating	Turntable not correctly placed; Turntable support dirty or damaged.	Ensure turntable is correctly seated on the support; Clean turntable support and rollers; Check for damage.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Steam accumulating on door	Normal during cooking, especially high moisture foods.	Wipe with a soft cloth after cooking.

7. SPECIFICATIONS

Feature	Specification
Model Number	BMEMWFS25SS
Capacity	25 Litres
Microwave Power Output	900 Watts
Grill Power Output	1000 Watts
Power Consumption	1450 Watts
Power Supply	230 V ~ 50 Hz
External Dimensions (W x D x H)	513 x 410 x 307 mm
Turntable Plate Diameter	315 mm
Net Weight	Approx. 17 kg
Material	Stainless Steel & Black Glass Finish
Control Type	Electronic 'Jog' Dial, Buttons

Feature	Specification
Special Features	8 Auto Menus, 5 Microwave Power Levels, 1 Grill Power Level, 2 Combination Power Levels, 30 Second Quick Cook, Child Safety Lock, Defrost Function

8. WARRANTY AND SUPPORT

Warranty Information

This Baumatic appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

Customer Support

For technical assistance, spare parts, or service inquiries, please contact Baumatic customer support. Contact details can typically be found on the Baumatic official website or in your product documentation.

When contacting support, please have your model number (BMEMWFS25SS) and serial number (if applicable) ready.