

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sony](#) /
- › [Sony MHC-V82D Powerful Party Speaker User Manual](#)

Sony MHC-V82D

Sony MHC-V82D Powerful Party Speaker User Manual

INTRODUCTION

This manual provides essential information for the safe and effective use of your Sony MHC-V82D Powerful Party Speaker. Please read these instructions thoroughly before operating the unit and retain them for future reference. The MHC-V82D is designed to deliver powerful 360-degree sound with features like JET Bass Booster, 360-degree party lights, Taiko Mode, and various control options.



Front view of the Sony MHC-V82D Powerful Party Speaker, showcasing its design and illuminated speakers.



Overview of key features including 360-degree sound, JET Bass Booster, Karaoke, Taiko Drum, Motion Control, Gesture Control, Voice Control, MEGA BASS, Guitar Input, Splash Proof, Bluetooth, NFC, Music Center App, USB Play, and DVD.

SAFETY INFORMATION

Observe the following safety precautions to prevent electric shock, fire, or damage to the unit:

- **Power Source:** Connect the unit only to the specified AC power supply.
- **Ventilation:** Ensure adequate space around the unit for proper ventilation. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the unit to rain or moisture. While the control panel is splash-proof, the entire unit is not waterproof.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- **Cleaning:** Disconnect the power cord from the outlet before cleaning. Use a dry cloth only.
- **Servicing:** Do not attempt to service the unit yourself. Refer all servicing to qualified service personnel.

WHAT'S IN THE BOX

Verify that all the following items are included with your Sony MHC-V82D speaker:

- AC power cord (1 U)
- Operating Manual (1 U)
- Setup guide (1 U)
- Remote Control (1 U)
- FM Antenna (1 U)
- AAA Batteries (2 U)

SETUP

1. Placement

Place the speaker on a stable, flat surface. Ensure there is sufficient space around the unit for proper ventilation. The unit is designed for floor standing placement.



The speaker features wheels and a handle for convenient relocation.

2. Power Connection

1. Connect the supplied AC power cord to the AC IN port on the rear of the speaker.
2. Plug the other end of the AC power cord into a wall outlet.

3. Connecting Audio Sources

The MHC-V82D offers multiple connectivity options:

- **Bluetooth:** Enable Bluetooth on your device and select 'MHC-V82D' from the list of available devices to pair.
- **NFC:** For one-touch wireless listening, touch your NFC-compatible device to the N-Mark on the speaker.
- **USB:** Insert a USB device into the USB port for audio playback.
- **HDMI:** Connect to a television or other HDMI-compatible device using an HDMI cable (not supplied).
- **Audio Input:** Use the AUDIO IN ports to connect external audio devices.



Rear panel of the speaker, illustrating the various input and output ports for connectivity.



The speaker positioned next to a television, demonstrating its integration into a home entertainment setup.

OPERATING THE SPEAKER

1. Basic Controls

The main controls are located on the top panel of the speaker:

- **Power Button:** Turns the unit on or off.
- **Function Button:** Selects the input source (e.g., Bluetooth, USB, DVD, Audio In).
- **Volume +/-:** Adjusts the master volume level.
- **Playback Controls:** Play/Pause, Skip Forward/Backward for media playback.



The illuminated top control panel, showing buttons for various functions including volume, playback, and input selection.

2. Sound Features

- **360° Sound:** The speaker is designed to project sound in all directions, filling the room with audio.
- **JET Bass Booster:** Enhances low-frequency sounds for a more powerful bass experience.
- **MEGA BASS:** Activates an additional bass boost for deeper, more resonant sound.



Visual representation of the speaker's 360-degree sound projection, creating an immersive audio experience.

3. Party Features

- **360° Party Light:** The speaker emits multi-directional lights that synchronize with the music, creating a dynamic visual atmosphere.
- **Taiko Mode:** Tap the top panel to play along with the music using various drum sounds.
- **Karaoke & Guitar Input:** Connect a microphone or guitar to the dedicated inputs to sing or play along. Adjust mic pitch and echo effects.



The speaker displaying its vibrant 360-degree party lights, enhancing the ambiance.



Demonstration of Taiko Mode, where users can interact with the control panel to create drum sounds.

4. Advanced Control

- **Gesture Control:** Use vertical and horizontal hand gestures over the control panel to change tracks, adjust volume, or control party lights.
- **Voice Control:** Utilize voice commands via the Fiestable app to manage music and lighting effects.
- **Music Center App:** Download the Sony Music Center app to your smartphone for remote control and access to additional features.



A hand demonstrating the gesture control feature on the speaker's top panel.

MAINTENANCE

1. Cleaning

To maintain the appearance and performance of your speaker:

- Wipe the exterior surfaces with a soft, dry cloth.
- Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene.
- Ensure the unit is unplugged from the power outlet before cleaning.

2. Splash-Proof Control Panel

The top control panel is designed to be splash-proof, allowing for worry-free use during parties. However, the entire unit is not waterproof. Avoid submerging the speaker or exposing it to heavy water spray.



Illustration of the splash-proof design of the speaker's control panel, capable of withstanding minor liquid exposure.

TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions:

- **No Power:**
 - Ensure the AC power cord is securely connected to both the speaker and a working wall outlet.
 - Check if the power outlet is functional by plugging in another device.
- **No Sound:**
 - Verify that the volume is not set to minimum or muted.

- Check the selected input source (e.g., Bluetooth, USB, HDMI) matches your audio source.
- Ensure audio cables (if used) are properly connected.

- **Bluetooth Pairing Issues:**

- Make sure the speaker is in Bluetooth pairing mode.
- Ensure your Bluetooth device is within range (typically 10 meters) and Bluetooth is enabled.
- Delete the speaker from your device's Bluetooth list and attempt to pair again.

- **Remote Control Not Working:**

- Check if the batteries are correctly inserted and not depleted. Replace if necessary.
- Ensure there are no obstructions between the remote control and the speaker's sensor.

SPECIFICATIONS

Model Name	MHC-V82D
Speaker Type	Party Speaker
Connectivity Technology	Bluetooth, NFC, Wireless
Special Features	Bluetooth, Wireless, 360° Sound, JET Bass Booster, 360° Party Light, Taiko Mode, Karaoke & Guitar Input, Gesture Control, Voice Control, Splash-proof Control Panel
Audio Output Mode	Surround
Subwoofer Diameter	12 Inches
Control Method	Touch
Power Source	AC
Product Dimensions (LxWxH)	113 x 42 x 50 cm
Item Weight	26.5 kg
Material	Plastic
Colour	Black

WARRANTY AND SUPPORT

1. Warranty Information

The Sony MHC-V82D speaker comes with a **1 Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

2. Manufacturer and Importer

Manufacturer: Sony Corporation, 1-7-1, Konan, Minato-ku, Tokyo, 108-0075, Japan

Imported By: SONY INDIA PRIVATE LIMITED, A-18, Mohan Cooperative Industrial Estate, Mathura Road, New Delhi - 110083

For further support, please refer to the contact information provided in the included setup guide or visit the official Sony support website.

