Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > OVENTE /
- > OVENTE KG612S 1.7L Electric Glass Kettle Instruction Manual

OVENTE KG612S

OVENTE KG612S 1.7L Electric Glass Kettle Instruction Manual

Model: KG612S

1. Introduction

Thank you for choosing the OVENTE KG612S 1.7L Electric Glass Kettle. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions carefully before first use and retain for future reference.

The OVENTE KG612S kettle is designed for rapid water boiling, featuring a durable borosilicate glass body, 1500W heating element, and innovative ProntoFill technology for convenient refilling. It includes advanced safety features such as automatic shut-off and boil-dry protection, along with illuminating blue LED lights during operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the kettle base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact OVENTE customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always ensure the lid is securely closed before operating the kettle.

- Scalding may occur if the lid is removed during the heating cycle.
- This appliance is for household use only.
- Do not overfill the kettle above the MAX fill line to prevent boiling water from overflowing.
- The kettle features Automatic Shut-Off and Boil-Dry Protection for enhanced safety.

3. Parts Diagram

Familiarize yourself with the components of your OVENTE Electric Glass Kettle:

- Kettle Body: Made of durable borosilicate glass with stainless steel accents.
- Handle: Ergonomically designed for a comfortable grip.
- **Lid:** Features ProntoFill technology for easy water refilling without removal. The lid is also fully removable for thorough cleaning.
- Power Base: 360° rotary base with integrated cord storage and temperature control buttons.
- On/Off Switch: Located on the handle for easy operation.
- Water Level Indicator: Markings on the glass body for minimum (0.5L) and maximum (1.7L) fill levels.
- Blue LED Lights: Illuminates the kettle during the heating process.
- Tea Infuser (Optional/Included): A removable stainless steel infuser for brewing loose-leaf or bagged tea directly
 in the kettle.

4. INITIAL SETUP

Before using your OVENTE kettle for the first time, please follow these steps:

- 1. Unpack: Carefully remove all packaging materials from the kettle and its accessories.
- 2. **Initial Cleaning:** It is strongly recommended to clean your kettle before first use. Fill the kettle with water to the MAX line, boil it, then discard the water. Repeat this process 2-3 times to remove any manufacturing residues.
- 3. **Place the Base:** Position the power base on a dry, flat, and stable surface away from the edge of the counter. Ensure the power cord is neatly stored in the base's cord storage area to prevent tangling.

5. OPERATING INSTRUCTIONS

5.1 Filling the Kettle

The OVENTE KG612S features innovative ProntoFill technology for easy water refilling:

- **ProntoFill:** Simply pour water directly into the center opening of the lid. The lid's design gently funnels water inside without needing to remove it.
- **Traditional Fill:** For thorough cleaning or if preferred, the entire lid can be removed by pulling it upwards. Fill the kettle with the desired amount of water, ensuring it is between the MIN (0.5L) and MAX (1.7L) marks.



Image: The ProntoFill lid allows for easy water refilling directly through the top without removing the lid.



Image: The kettle features a wide-mouth opening for convenient filling and cleaning when the lid is removed.

5.2 Boiling Water

- 1. Place the filled kettle securely onto the power base.
- 2. Plug the power base into a standard electrical outlet.
- 3. Select your desired temperature using the buttons on the power base:
 - 170°F: Ideal for Green Tea.
 - 185°F: Ideal for Oolong Tea.
 - o 200°F: Ideal for French Press Coffee.
 - o 212°F: For boiling water (e.g., Dark Tea, instant noodles).
- 4. Press the 'Start' button to begin the heating process. The blue LED lights will illuminate, indicating that the kettle is heating.
- 5. The kettle will automatically shut off once the selected temperature is reached or if it runs dry (Boil-Dry Protection). The blue LED lights will turn off.



 ${\it Image: The kettle illuminates with blue LED lights while water is boiling.}$

5.3 Keep Warm Function

After boiling, you can use the 'Keep Warm' function to maintain the water temperature:

- After the water has reached the desired temperature, press the 'Keep Warm' button on the power base. The kettle will maintain the water at approximately 200°F.
- To cancel the 'Keep Warm' function, press the 'Cancel' button or lift the kettle from its base.

5.4 Using the Tea Infuser

For brewing tea directly in your kettle:

- 1. Remove the ProntoFill lid from the kettle.
- 2. Place your desired amount of loose-leaf or bagged tea into the stainless steel infuser.
- 3. Insert the infuser into the kettle and replace the lid, ensuring it is securely seated.
- 4. Fill the kettle with water up to the maximum tea infuser line (1.2L) to ensure proper brewing.
- 5. Select the appropriate temperature for your tea type (e.g., 170°F for green tea, 212°F for black tea) and press 'Start'.
- 6. Once brewing is complete, you can lift the infuser to stop the steeping process without removing it entirely, or remove it completely for serving.



Image: The removable tea infuser allows for direct brewing of loose-leaf or bagged tea.

5.5 Official Product Videos

Your browser does not support the video tag.

Video: An overview of the OVENTE Glass Electric Tea Kettle (KG612S), demonstrating its features and ease of use.

Your browser does not support the video tag.

Video: Demonstrating the ProntoFill feature of the Ovente Glass Electric Kettle (KG612S), highlighting its convenience.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your kettle.

- 1. Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- 2. Cleaning the Interior: To remove mineral deposits (scale), fill the kettle with 2 cups of white vinegar and 2 cups of water. Let it soak for 20-30 minutes without boiling. Discard the solution and rinse thoroughly with fresh water. For stubborn deposits, boil the vinegar solution, then let it soak and rinse.
- 3. **Cleaning the Exterior:** Wipe the exterior of the kettle with a clean, damp cloth. Do not use abrasive cleaners or scouring pads as they may scratch the surface.

- 4. **Cleaning the Lid and Infuser:** The lid and tea infuser can be removed and hand-washed with warm, soapy water. Rinse thoroughly.
- 5. **Do NOT immerse** the kettle body or power base in water or any other liquid.



Image: The wide opening allows for easy access to clean the interior of the kettle.

7. TROUBLESHOOTING

If your kettle is not functioning as expected, please refer to the following common issues and solutions:

• Kettle does not turn on:

- Ensure the kettle is properly seated on the power base.
- Check that the power cord is securely plugged into a working electrical outlet.
- Verify that the on/off switch is in the 'on' position and a temperature has been selected.

Water is not heating:

- Confirm that the kettle has water above the MIN fill line. The boil-dry protection feature will prevent heating if the kettle is empty.
- Ensure the lid is securely closed.
- Kettle turns off prematurely:

• This may be due to excessive scale buildup. Refer to the 'Maintenance and Cleaning' section to descale your kettle.

• Water has a strange taste/smell:

- Perform the initial cleaning process (boiling and discarding water 2-3 times) to remove any residual odors.
- Ensure the kettle is regularly descaled as per the 'Maintenance and Cleaning' section.

8. Specifications

Brand	OVENTE
Model Name	KG612S
Capacity	1.7 Liters
Power	1500W
Material	Borosilicate Glass, Stainless Steel
Color	Silver
Product Dimensions	8.25"L x 5.55"W x 9.75"H
Item Weight	2.57 pounds
Special Features	Automatic Shut-Off, Boil Dry Protection, Indicator Light, Water Level Indicator, ProntoFill Lid, Variable Temperature Control
Included Components	ProntoFill lid, Tea Infuser

9. WARRANTY AND CUSTOMER SUPPORT

OVENTE warranties that the product shall be free from defects in material and workmanship under normal use and conditions, for **2 years** from the original purchase date.

For customer support, please refer to the contact information provided on your product packaging or visit the official OVENTE website.

Related Documents - KG612S



Ovente KG733 Series Temperature Control Electric Kettle with Integrating Teapot User Manual
User manual for the Ovente KG733 Series Temperature Control Electric Kettle with Integrating
Teapot. Includes important safety information, parts and features, operating instructions, cleaning

and descaling guides, electrical specifications, and warranty details.



Ovente FSW Hailey French Press User Manual

A comprehensive guide to using, caring for, and maintaining your Ovente FSW Hailey French Press coffee maker. Learn about its parts, features, and get answers to frequently asked questions.



Ovente 4-Sandwich Digital Panini Grill GP1000 Series User Manual

User manual for the Ovente 4-Sandwich Digital Panini Grill with Temperature Control, GP1000 Series. Provides essential safety guidelines, product features, operating instructions, tips for use, care and maintenance advice, and warranty information.



Ovente Electric 2-Tray Buffet Server FW152 Series User Manual

Comprehensive user manual for the Ovente Electric 2-Tray Buffet Server with Warming Tray (Model FW152 Series). Includes detailed safety instructions, parts and features, operating guide, care and maintenance tips, electrical specifications, and warranty information.



Ovente HS560 Series Multi-Purpose Immersion Hand Blender - User Manual, Features, and Warranty

Comprehensive guide for the Ovente HS560 Series Multi-Purpose Immersion Hand Blender. Details features, usage instructions, safety precautions, care, maintenance, and warranty information for this powerful 300-watt kitchen appliance.



Ovente OFD4025 Series Digital Air Fryer Rotisserie Oven User Manual

User manual and guide for the Ovente OFD4025 Series Digital Air Fryer Rotisserie Oven, covering important safeguards, parts and features, operating instructions, care and maintenance, and warranty information.