

[Manuals.plus](#) /

› [Acctim](#) /

› Acctim 15869 Alta Blue Alarm Clock with Indoor Temperature Instruction Manual

Acctim 15869

Acctim 15869 Alta Blue Alarm Clock with Indoor Temperature Instruction Manual

Model: 15869

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Acctim 15869 Alta Blue Alarm Clock. Designed with a smooth, matt finish and retro styling, this digital alarm clock features Acctim's reflection luminous display technology for enhanced nighttime viewing, reducing harsh glare. It includes a double couples alarm, calendar, indoor temperature display, crescendo alarm, and snooze function.

PACKAGE CONTENTS

- Acctim 15869 Alta Blue Alarm Clock
- Instruction Manual (this document)

Note: 2 x AA batteries are required and are not included in the package.

PRODUCT OVERVIEW



Figure 1: Front view of the Acctim Alta alarm clock, showing the digital display with time, date, day, and indoor temperature.



Figure 2: Rear view of the alarm clock, highlighting the control buttons (UP, ALT1, DOWN, AL2, MODE, SNOOZE/LIGHT) and the battery compartment.

SETUP

1. Battery Installation

1. Locate the battery compartment on the rear of the clock.

2. Open the battery compartment cover.
3. Insert 2 x AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Initial Power On

Once batteries are installed, the clock will power on automatically and display default time and date settings. The reflection luminous display will activate.

OPERATING INSTRUCTIONS

Setting Time and Date

1. Press the **MODE** button repeatedly until the time display flashes.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **MODE** again to move to minutes, then adjust with **UP** or **DOWN**.
4. Continue pressing **MODE** to cycle through year, month, and day settings, adjusting each with **UP** or **DOWN**.
5. Press **MODE** one last time to exit setting mode.

Setting Alarms (AL1 and AL2)

The clock features two independent alarms (AL1 and AL2).

1. Press the **AL1** button to enter Alarm 1 setting mode. The alarm time will flash.
2. Use **UP** or **DOWN** to set the desired hour for Alarm 1.
3. Press **AL1** again to move to minutes, then adjust with **UP** or **DOWN**.
4. Press **AL1** to confirm and exit Alarm 1 setting.
5. Repeat steps 1-4 using the **AL2** button to set Alarm 2.

To activate or deactivate an alarm, press the respective **AL1** or **AL2** button briefly when not in setting mode. An alarm icon will appear on the display when active.

Snooze Function

When an alarm sounds, press the large **SNOOZE/LIGHT** button on top of the clock to activate the snooze function. The alarm will pause for approximately 9 minutes and then sound again. This can be repeated.

Display Backlight

Press the **SNOOZE/LIGHT** button briefly to illuminate the display for easier viewing in low light conditions. The reflection luminous display provides continuous visibility without harsh glare.

Temperature Display

The clock continuously displays the indoor temperature. No specific action is required to view this feature.

MAINTENANCE

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.
- If the display becomes dim or functions erratically, replace the batteries.
- Do not attempt to disassemble the clock; this will void the warranty.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly installed.	Replace batteries with new AA batteries, ensuring correct polarity.
Alarm does not sound or is too quiet.	Alarm is not activated or volume is low (if applicable).	Ensure alarm is activated (icon visible). This model has a fixed crescendo alarm volume. Check batteries.
Time is incorrect.	Time not set correctly or batteries were removed.	Reset the time and date as per "Setting Time and Date" instructions.

SPECIFICATIONS

Feature	Detail
Brand	Acctim
Model Number	15869
Colour	Blue
Product Dimensions	4.8 x 10 x 5.9 cm (H x W x D)
Item Weight	140 g
Material	Plastic
Display Type	Digital (Reflection Luminous Display)
Special Features	Temperature Display, Calendar Display, Double Couples Crescendo Alarm, Snooze
Power Source	Battery Powered (2 x AA, not included)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the retailer where the product was purchased or visit the official Acctim website. Keep your proof of purchase for any warranty claims.

Acctim Official Website: www.acctim.com

© 2024 Acctim. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07RCY8NJW>

More documents and user manuals: **<https://manuals.plus/>**