

- Manuals.plus /
- > [Acctim](#) /
 - > Acctim Alta Retro Digital Alarm Clock Crescendo Alarm Date & Temperature Display Owl Grey 15867 User Manual

Acctim 15867

Acctim Alta Retro Digital Alarm Clock User Manual

Model: 15867

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Acctim Alta Retro Digital Alarm Clock. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

The Acctim Alta combines retro styling with modern digital features, offering a clear display, dual alarms, calendar, and indoor temperature readings. Its reflection luminous display technology is designed for comfortable viewing in various lighting conditions.

PRODUCT OVERVIEW



Figure 1: Front view of the Acctim Alta Retro Digital Alarm Clock, displaying time, date, and temperature.



Figure 2: Top view of the alarm clock, highlighting the control buttons (SNOOZE/LIGHT, UP, AL1, DOWN, AL2, MODE) and the battery compartment cover.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the clock (refer to Figure 2).
2. Slide open the battery compartment cover.
3. Insert two (2) AA batteries (not included), ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Upon successful battery installation, the display will illuminate, and the clock will be ready for initial setup.

OPERATING INSTRUCTIONS

Setting Time and Date

1. Press the **MODE** button repeatedly until the time display flashes.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **MODE** again to move to minutes, then use **UP** or **DOWN** to adjust.
4. Continue pressing **MODE** to cycle through setting the year, month, and day, adjusting each with the **UP** or **DOWN** buttons.
5. Press **MODE** one last time to exit setting mode and save your changes.

Setting Alarms (AL1 and AL2)

The clock features two independent alarms (AL1 and AL2) with a crescendo alarm function.

1. Press the **AL1** button to enter Alarm 1 setting mode. The alarm time will flash.
2. Use the **UP** or **DOWN** buttons to set the desired alarm hour.
3. Press **AL1** again to move to minutes, then adjust with **UP** or **DOWN**.
4. Press **AL1** one more time to confirm and activate Alarm 1. An alarm icon will appear on the display.
5. Repeat the process using the **AL2** button to set and activate Alarm 2.

To deactivate an alarm, press the corresponding **AL1** or **AL2** button until the alarm icon disappears from the display.

Snooze Function and Display Light

When an alarm sounds, press the large **SNOOZE/LIGHT** button located on the top of the clock to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes (typically 5-10 minutes, refer to product specifications for exact duration). Pressing any other button will turn off the alarm until the next set time.

Press the **SNOOZE/LIGHT** button at any time to briefly illuminate the display for easier viewing in low light conditions. The reflection luminous display technology ensures a soft, glare-free illumination.

Temperature Display

The clock automatically displays the indoor temperature. No specific setting is required for this feature. The temperature reading is shown on the right side of the display (refer to Figure 1).

MAINTENANCE

Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.

Battery Replacement

When the display dims or the clock functions become erratic, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always use fresh AA batteries and dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

- **Display is blank or dim:**
 - Check if batteries are inserted correctly with proper polarity.
 - Replace old or depleted batteries with new AA batteries.
- **Alarm does not sound:**
 - Ensure the alarm is activated (alarm icon visible on display).
 - Verify the alarm time is set correctly.
 - Check battery level.
- **Buttons are unresponsive:**
 - Remove and reinsert batteries to reset the device.
 - Ensure buttons are not stuck or obstructed.

• **Incorrect time/date:**

- Follow the "Setting Time and Date" instructions to re-adjust.

If problems persist after attempting these solutions, please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Acctim
Model Number	15867
Colour	Grey
Product Dimensions	4.8 x 10 x 5.9 cm (H x W x D)
Item Weight	130 g
Display Type	Digital
Style	Retro
Power Source	Battery Powered (2 x AA, not included)
Special Features	Snooze, Illuminated Display, Temperature Display, Dual Crescendo Alarm, Calendar Display

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Acctim customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.

Keep your proof of purchase for warranty claims.

© 2024 Acctim. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07RCYKFPC>

More documents and user manuals: <https://manuals.plus/>