

[Manuals.plus](#) /

› [Invicta](#) /

› Invicta Men's Pro Diver Quartz Watch Model 30023 Instruction Manual

Invicta 30023

Invicta Men's Pro Diver Quartz Watch Model 30023 Instruction Manual

Model: 30023

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Invicta Men's Pro Diver Quartz Watch, Model 30023. Please read this guide thoroughly to ensure proper use and longevity of your timepiece.



PACKAGE CONTENTS

- Invicta Men's Pro Diver Quartz Watch Model 30023
- Instruction Manual (this document)
- Invicta Watch Box



Image: The yellow Invicta watch box, open to show the interior watch cushion.

SETUP

1. Setting the Time and Date

1. **Unscrew the Crown:** The watch features a screw-down crown for enhanced water resistance. Gently rotate the crown counter-clockwise until it releases from the case.
2. **Set the Date:** Pull the crown out to the first click position. Rotate the crown clockwise or counter-clockwise (depending on the movement) to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can damage the

movement.

3. **Set the Time:** Pull the crown out to the second click position. Rotate the crown to set the correct time. Ensure the AM/PM is correctly set by observing if the date changes when passing midnight.
4. **Secure the Crown:** Once the time and date are set, push the crown back into the first position, then gently push and rotate it clockwise to screw it back down tightly against the watch case. This is crucial for maintaining water resistance.

2. Adjusting the Bracelet

The stainless steel bracelet may need adjustment to fit your wrist comfortably. This typically involves removing or adding links. It is recommended to have this procedure performed by a professional watchmaker or jeweler to prevent damage to the bracelet or watch.

Your browser does not support the video tag.

Video: An official product video showcasing the Invicta Men's Pro Diver Quartz Watch Model 30023, highlighting its design and features.

OPERATING INSTRUCTIONS



Image: A rotating view of the Invicta Pro Diver Quartz Watch Model 30023, showing its black dial and two-tone bracelet from various angles.

1. Timekeeping

Your Invicta Pro Diver watch is powered by a reliable quartz movement, ensuring accurate timekeeping. Once the time is set, the watch will operate continuously until the battery requires replacement.

2. Water Resistance

This watch is water resistant up to 100 meters (330 feet). This makes it suitable for swimming and snorkeling, but not for scuba diving. Always ensure the screw-down crown is fully secured before any exposure to water to prevent water ingress.

3. Unidirectional Rotating Bezel

The bezel rotates in one direction (counter-clockwise) and can be used to measure elapsed time. Align the zero marker on the bezel with the minute hand at the start of an event. The minute hand's position against the bezel's scale will then indicate the elapsed time.

MAINTENANCE

1. Cleaning

Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dirt and perspiration. For stainless steel, a slightly damp cloth can be used, followed by drying. Avoid using harsh chemicals or abrasive materials.

2. Battery Replacement

As a quartz watch, it is powered by a battery. When the watch stops or the second hand begins to skip, it indicates a low

battery. Battery replacement should be performed by a qualified watch technician to ensure the movement is not damaged and the water resistance seal is properly re-established.

3. Water Resistance Check

It is recommended to have the water resistance seals checked annually by a professional, especially if the watch is frequently exposed to water or if the crown has been unscrewed often. Gaskets can degrade over time, affecting the watch's water resistance.

TROUBLESHOOTING

- **Watch Not Running:**
 - Check if the crown is pushed in and fully screwed down.
 - The battery may need replacement. Consult a professional watch technician.
- **Water Inside the Watch:**
 - Immediately take the watch to a professional watchmaker. Do not attempt to open it yourself. This indicates the crown was not properly secured or the seals are compromised.
- **Inaccurate Timekeeping:**
 - Ensure the time was set correctly.
 - A low battery can affect accuracy.
 - Exposure to strong magnetic fields can temporarily affect quartz movements.

SPECIFICATIONS

Feature	Detail
Model Number	30023
Case Material	Stainless Steel
Case Diameter	43 Millimeters
Case Thickness	12 Millimeters
Band Material	Stainless Steel (Two Tone)
Band Width	22 Millimeters
Band Length	185 Millimeters
Dial Color	Black
Crystal Type	Flame Fusion
Movement Type	Quartz
Water Resistance Depth	100 Meters (330 Feet)
Clasp Type	Foldover Clasp
Item Weight	170 Grams

WARRANTY AND SUPPORT

Manufacturer Warranty

Your Invicta watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For any questions, service, or repair needs not covered in this manual, please contact Invicta customer support or visit their official website. Authorized service centers are recommended for all repairs to maintain warranty validity and ensure proper functioning.

You can find more information and contact details on the [Invicta Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07RD81GHJ>

More documents and user manuals: <https://manuals.plus/>