

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Wohome](#) /

> [Wohome Sound Bar S88 20-Inch Home Theater Speaker Instruction Manual](#)

## Wohome S88

# Wohome Sound Bar S88 Instruction Manual

Model: S88 | Brand: Wohome

## 1. SAFETY INFORMATION

Please read all instructions carefully before using the Wohome Sound Bar S88. Retain this manual for future reference.

- Do not expose the soundbar to rain, moisture, or extreme temperatures.
- Ensure proper ventilation around the unit to prevent overheating.
- Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the soundbar during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Wohome Sound Bar S88
- Remote Control (batteries not included)
- Power Adapter
- Optical Cable
- AUX Cable
- Wall Mount Kit (screws included)
- User Manual

### 3. PRODUCT OVERVIEW

The Wohome Sound Bar S88 is a 20-inch ultra-slim soundbar designed to enhance your home audio experience. It features built-in full-range speakers and a bass reflex tube for clear sound and deep bass.



Image: Internal view highlighting the full-range drivers of the soundbar.

Equipped with DSP technology, it offers three equalizer modes (Music, Dialogue, Movie) and 3D surround sound for an immersive listening experience. Its compact design allows for versatile placement options.



Image: Sound waves emanating from the soundbar in a home environment.

## 4. SETUP

### 4.1 Placement Options

The soundbar can be placed in various locations to suit your home theater setup:

- **Tabletop Placement:** Position the soundbar on a flat surface directly in front of your TV or desktop monitor. Its ultra-slim design (2.9 inches high) fits easily under most screens.
- **Wall Mounting:** Use the provided wall mount kit to securely attach the soundbar to a wall below your TV.



Image: Demonstrates the soundbar placed on a cabinet and mounted on a wall.

#### 4.2 Connecting Your Sound Bar

The Wohome Sound Bar S88 offers multiple connection options:



Image: Close-up of the soundbar's rear panel with HDMI, AUX, Coaxial, USB, and Optical ports.

- **HDMI-ARC:** Connect an HDMI cable (not included) from your TV's HDMI-ARC port to the soundbar's HDMI-ARC port. This allows your TV remote to control the soundbar's volume and power.
- **Optical:** Use the provided optical cable to connect your TV's optical output to the soundbar's optical input.
- **Coaxial:** Connect a coaxial cable (not included) from your TV's coaxial output to the soundbar's coaxial input.
- **AUX:** Use the provided AUX cable to connect devices with a 3.5mm audio output.
- **USB:** Insert a USB drive into the USB port to play audio files directly.
- **Bluetooth 5.0:** For wireless connection, enable Bluetooth on your device (phone, tablet, PC) and pair with the soundbar (device name: S88).

#### 4.3 Power Connection

Connect the power adapter to the DC IN port on the soundbar, then plug the adapter into a wall outlet. The soundbar will enter standby mode.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Controls

The soundbar can be controlled using the buttons on the unit or the included remote control.



Image: Remote control and soundbar showing control buttons and connectivity to various devices.

- **Power:** Press the Power button on the remote or soundbar to turn the unit on/off.
- **Input Source:** Press the 'Input' button on the remote or 'Source' button on the soundbar to cycle through input modes (HDMI-ARC, Optical, Coaxial, AUX, USB, Bluetooth).
- **Volume:** Use 'VOL+' and 'VOL-' buttons on the remote or soundbar to adjust the volume.
- **Mute:** Press the Mute button on the remote to silence the audio.
- **Playback Controls (Bluetooth/USB mode):** Use Play/Pause, Previous, and Next buttons on the remote for media control.

### 5.2 Sound Modes (EQs)

Optimize your audio experience with three preset equalizer modes:

- **Music Mode:** Enhances music playback with balanced audio.
- **Dialogue Mode:** Optimizes vocal clarity for news and talk shows.
- **Movie Mode:** Provides a dynamic soundstage for movies and gaming.

All three sound modes support 3D surround sound for an immersive audio experience. Select your preferred mode using the remote control.

### 5.3 Bluetooth Pairing

1. Turn on the soundbar and switch to Bluetooth mode using the 'Input' button on the remote or 'Source' button on the soundbar. The LED indicator will flash blue.
2. Enable Bluetooth on your mobile device and search for available devices.
3. Select 'S88' from the list of devices to pair.
4. Once successfully paired, the LED indicator will turn solid blue.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your soundbar, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the soundbar. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Keep the ventilation openings clear of dust and debris.
- **Storage:** If storing the soundbar for an extended period, unplug it from the power outlet and store it in a cool, dry place.

## 7. TROUBLESHOOTING

If you encounter any issues with your soundbar, refer to the following troubleshooting steps:

Problem	Solution
No Power	Ensure the power adapter is securely connected to the soundbar and a working power outlet.
No Sound	Check the input source selection on the soundbar matches your device. Verify volume levels on both the soundbar and your connected device. Ensure cables are securely connected.
Distorted Sound	Reduce the volume. Check for loose cable connections. Try a different audio source or input mode.
Bluetooth Not Connecting	Ensure the soundbar is in Bluetooth pairing mode (flashing blue LED). Make sure your device's Bluetooth is enabled and within range. Forget the device on your phone and try pairing again.
Remote Control Not Working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the soundbar.

## 8. SPECIFICATIONS

Detailed specifications for the Wohome Sound Bar S88:



Image: Soundbar with key dimensions highlighted.

Feature	Detail
Model Name	S88
Speaker Type	Soundbar
Dimensions (L x W x H)	20 x 4 x 2.8 inches
Item Weight	6.61 pounds
Connectivity Technology	Auxiliary, Bluetooth, Coaxial, HDMI (ARC), Optical, USB

Feature	Detail
Wireless Communication	Bluetooth 5.0
Audio Output Mode	Stereo, Surround
Speaker Maximum Output Power	60 Watts
Special Feature	Equalizer (Music, Dialogue, Movie modes), 3D Surround Sound
Control Method	Remote
Power Source	Corded Electric

## 9. WARRANTY AND SUPPORT

Wohome provides lifetime technical support for the Sound Bar S88. If you have any questions or require assistance, please contact Wohome customer service via Amazon message or the contact information provided on your service card.

This product comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions.