

Philips HR7320/00

Philips HR7320/00 Daily Robot Food Processor Instruction Manual

Model: HR7320/00

1. INTRODUCTION

Thank you for choosing the Philips HR7320/00 Daily Robot Food Processor. This appliance is designed to simplify your food preparation tasks with its powerful 700W motor, 1.5-liter bowl, and versatile accessories. Please read this instruction manual carefully before first use and keep it for future reference. Proper use and maintenance will ensure optimal performance and longevity of your appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse the motor unit in water or other liquids.
- Keep hands and utensils away from moving blades or discs while processing food to prevent severe personal injury and/or damage to the food processor.
- Ensure the appliance is switched off and unplugged before assembling, disassembling, or cleaning.
- Do not use attachments not recommended or sold by Philips.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.

3. PRODUCT OVERVIEW

3.1 Components

Your Philips HR7320/00 Food Processor includes the following main components:

- Motor Unit (Base)
- Food Processor Bowl (1.5L capacity)
- Lid with feeding tube
- Pusher
- S-blade (chopping blade)
- 2-in-1 Stainless Steel Reversible Disc (for slicing and shredding)
- Dough Tool (for kneading)
- Emulsifying Disc (for whisking and emulsifying)
- Blender Jar (for blending liquids)
- Citrus Press (for juicing citrus fruits)

3.2 Controls

The motor unit features a control dial for selecting speed settings and a pulse function:

- **Speed Settings (1, 2):** Use these settings for continuous operation at different speeds.
- **Pulse (P):** Provides short bursts of maximum power for quick chopping or blending. Release the dial to stop.



Image: Philips HR7320/00 Daily Robot Food Processor, white, showing the motor unit, 1.5L bowl, lid, and control dial.

4. SETUP AND ASSEMBLY

Before using your food processor, ensure all parts are clean and correctly assembled.

1. **Place the Motor Unit:** Position the motor unit on a stable, flat, and dry surface.
2. **Assemble the Food Processor Bowl:**
 - Place the food processor bowl onto the motor unit, aligning the handle with the locking mechanism. Turn clockwise until it locks into place.
 - Insert the desired accessory (e.g., S-blade, reversible disc) onto the central shaft in the bowl.
 - Place the lid onto the bowl, ensuring the feeding tube aligns with the handle. Turn clockwise until it locks.
 - Insert the pusher into the feeding tube.
3. **Assemble the Blender Jar (if applicable):**
 - Ensure the blender blade unit is securely attached to the blender jar.
 - Place the blender jar onto the motor unit, aligning it correctly. Turn clockwise until it locks.
 - Place the blender lid onto the jar and secure it.
4. **Power Connection:** Plug the appliance into a power outlet.

Setup Demonstration Video

Your browser does not support the video tag.

Video: This video demonstrates the assembly and basic blending function of a Philips food processor. While the model shown may differ slightly (e.g., 800W motor, 2.1L capacity), the general assembly and operation principles are similar to the HR7320/00 model.

5. OPERATING INSTRUCTIONS

Always ensure the appliance is correctly assembled and locked before operation.

5.1 General Operation

1. Add ingredients to the food processor bowl or blender jar.
2. Select the desired speed setting (1 or 2) by turning the control dial.
3. For short bursts of power, turn the dial to the 'P' (Pulse) setting and release.
4. After use, turn the dial to '0/off' and unplug the appliance.

5.2 Specific Functions

- **Chopping (S-blade):** Use for chopping vegetables, meat, nuts, etc. Place the S-blade on the shaft, add ingredients, and process using pulse or speed 1.
- **Slicing/Shredding (2-in-1 Reversible Disc):** Attach the disc to the shaft. Place the lid with the pusher. Feed ingredients through the feeding tube. Use speed 1 or 2 depending on desired consistency.
- **Kneading (Dough Tool):** Attach the dough tool. Add flour and other dry ingredients, then gradually add liquids through the feeding tube while processing on speed 1.
- **Emulsifying/Whisking (Emulsifying Disc):** Use for whipping cream, egg whites, or making mayonnaise. Attach the emulsifying disc. Process on speed 2.
- **Blending (Blender Jar):** Use for smoothies, soups, and sauces. Add ingredients to the blender jar. Process on speed 1 or 2, or use the pulse function for crushing ice.

- **Juicing (Citrus Press):** Attach the citrus press cone to the shaft. Place a halved citrus fruit on the cone and press down gently while the appliance is running on speed 1.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures hygiene and extends the life of your food processor.

1. **Before Cleaning:** Always unplug the appliance from the power outlet.
2. **Disassembly:** Carefully disassemble all removable parts.
3. **Cleaning Parts:**
 - All removable parts (bowl, lid, pusher, blades, discs, blender jar, citrus press) are dishwasher safe.
 - Alternatively, wash them in warm water with a mild detergent. Use a cleaning brush for hard-to-reach areas. Handle blades with extreme care as they are very sharp.
4. **Cleaning Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or rinse it under the tap.
5. **Drying and Storage:** Ensure all parts are completely dry before reassembling or storing. Store the appliance and its accessories in a dry place.

7. TROUBLESHOOTING

If you encounter any issues with your Philips HR7320/00 Food Processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not switch on.	Not properly assembled or plugged in.	Ensure the bowl/lid/blender is correctly locked onto the motor unit. Check if the power plug is securely inserted into the outlet.
Motor stops during operation.	Overload protection activated.	Switch off and unplug. Remove some ingredients. Let the appliance cool down for 15 minutes before restarting.
Ingredients are not processed evenly.	Too many ingredients or incorrect speed.	Process smaller batches. Use the pulse function for better control. Ensure ingredients are cut into appropriate sizes.
Loud noise or vibration.	Improper assembly or unstable surface.	Check that all parts are correctly assembled and locked. Ensure the appliance is on a stable, flat surface.

8. SPECIFICATIONS

- **Model Number:** HR7320/00
- **Brand:** Philips
- **Power:** 700 W
- **Food Processor Bowl Capacity:** 1.5 Liters
- **Functions:** 19 (including chopping, slicing, shredding, kneading, emulsifying, blending, juicing)
- **Speed Settings:** 2 speeds + Pulse function
- **Main Accessories:** S-blade, 2-in-1 Stainless Steel Reversible Disc, Dough Tool, Emulsifying Disc,

Blender Jar, Citrus Press

- **Dishwasher Safe Parts:** Yes
- **Color:** White

9. WARRANTY AND SUPPORT

Your Philips HR7320/00 Daily Robot Food Processor comes with a **2-year manufacturer's warranty**. For detailed warranty information, product registration, or technical support, please visit the official Philips website or contact Philips customer service in your region. Keep your proof of purchase for warranty claims.