

[Manuals.plus](#) /

› [Northlight](#) /

› Northlight Hand Woven Resin Wicker Porch Swing with Chain Instruction Manual

Northlight B07RF2M8FG

Northlight Hand Woven Resin Wicker Porch Swing with Chain Instruction Manual

Model: B07RF2M8FG

1. PRODUCT OVERVIEW

Thank you for choosing the Northlight Hand Woven Resin Wicker Porch Swing. This swing is designed for outdoor use, offering a comfortable and durable seating solution for your porch or patio. It features a hand-woven resin wicker construction and comes with a sturdy hanging chain for easy installation.



Image 1.1: The Northlight Hand Woven Resin Wicker Porch Swing in Chocolate Brown, shown installed on a porch, highlighting its design and outdoor setting.

Key features include:

- Hand-woven resin wicker construction for durability and aesthetic appeal.
- All-weather resistant and waterproof design.
- Two-person seating capacity.
- Includes hanging chain for immediate installation.
- Dimensions: 51 inches wide x 23 inches deep x 22.5 inches high.

2. SAFETY INFORMATION

Please read and understand all safety instructions before installing and using the porch swing. Failure to follow these instructions may result in injury or damage to the product.

- **Weight Capacity:** Do not exceed the recommended weight capacity of the swing. This swing is designed for two persons.
- **Installation:** Ensure the swing is securely mounted to a structurally sound support beam or frame capable of safely holding the swing and its occupants. Consult a qualified professional if unsure about installation.

- **Inspection:** Regularly inspect the hanging chains, hooks, and the swing frame for any signs of wear, damage, or corrosion. Replace worn or damaged parts immediately.
- **Clearance:** Ensure adequate clearance around the swing to prevent collisions with walls, furniture, or other objects.
- **Children:** Supervise children at all times when they are using the swing.
- **Weather Conditions:** While the swing is all-weather resistant, extreme weather conditions (e.g., strong winds, heavy snow) may require temporary removal or additional securing to prevent damage.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- 1 x Northlight Hand Woven Resin Wicker Porch Swing
- 2 x Hanging Chains (pre-attached or included separately)
- *Note: Mounting hardware (e.g., ceiling hooks, bolts) is not included and must be purchased separately based on your specific installation surface.*

4. SETUP AND INSTALLATION

The Northlight Porch Swing comes fully assembled, requiring only proper installation of the hanging chains to a suitable support structure.

1. **Identify a Suitable Location:** Choose a location on your porch or patio with a sturdy overhead support beam or frame. The support must be capable of safely holding the weight of the swing and its occupants.
2. **Install Mounting Hardware (Not Included):** Securely install appropriate heavy-duty ceiling hooks or eye bolts into the chosen support structure. Ensure these are rated for outdoor use and can support at least 500 lbs (227 kg). The distance between the two mounting points should match the width of the swing's hanging points (approximately 48-50 inches).
3. **Attach Chains:** Connect the hanging chains from the swing to the installed mounting hardware. Ensure the chains are evenly distributed and securely fastened.
4. **Adjust Height:** Adjust the length of the chains to achieve the desired swing height. The swing seat should be at a comfortable height for sitting and getting off, typically 17-20 inches from the ground. Ensure the swing is level.
5. **Test Stability:** Before full use, gently test the swing's stability and the security of the mounting points. Gradually apply weight to ensure it is safely installed.



Image 4.1: The porch swing shown installed on a residential porch, demonstrating a typical setup. Note the hanging chains connected to an overhead structure.

5. OPERATING INSTRUCTIONS

Using your Northlight Porch Swing is straightforward:

- **Seating:** Sit gently on the swing, distributing your weight evenly. Avoid sudden movements or jumping onto the swing.
- **Swinging Motion:** Initiate a gentle swinging motion. Avoid excessive or aggressive swinging, which can strain the chains and mounting points.
- **Capacity:** Do not exceed the two-person seating capacity.
- **Exiting:** When exiting the swing, allow it to come to a complete stop before standing up.

6. MAINTENANCE

Proper maintenance will extend the life and appearance of your resin wicker porch swing.

- **Cleaning:** Clean the resin wicker regularly with a soft cloth, mild soap, and water. Rinse thoroughly with clean water and allow to air dry. Avoid harsh chemicals or abrasive cleaners, which can damage the material.
- **Chain Care:** Periodically check the hanging chains for rust or wear. If rust appears, clean it with a wire brush and apply a rust-inhibiting primer and paint. Replace severely corroded or damaged chains.
- **Winter Storage:** While the swing is all-weather resistant, storing it indoors or covering it during harsh winter months can further protect it from extreme temperatures and prolong its lifespan.
- **UV Protection:** Although resin wicker is UV-resistant, prolonged exposure to direct sunlight over many years can cause some fading. Consider using a protective cover when the swing is not in use for extended periods.



Image 6.1: A detailed view of the hand-woven resin wicker, illustrating the material's texture and construction, which benefits from regular cleaning.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Improper installation of mounting hardware or chains.	Re-check all mounting points and chain connections for security. Ensure the support structure is sound.
Squeaking noise during use.	Friction at chain connection points or mounting hardware.	Apply a silicone-based lubricant to the chain links and hooks where they connect to the swing and mounting hardware.
Wicker appears dull or dirty.	Accumulation of dirt, dust, or environmental debris.	Clean the wicker surface with mild soap and water, then rinse thoroughly. Refer to Section 6 for detailed cleaning instructions.

8. SPECIFICATIONS

Feature	Detail
Model Number	B07RF2M8FG
Product Dimensions	51 inches (W) x 23 inches (D) x 22.5 inches (H)
Item Weight	33 pounds
Material	Hand Woven Resin Wicker
Color	Chocolate Brown
Seating Capacity	2 persons
Weather Resistance	All-weather resistant, waterproof

9. WARRANTY AND SUPPORT

Northlight products are manufactured with quality and care. For specific warranty information regarding your porch swing, please refer to the documentation included with your purchase or visit the official Northlight website. If you require assistance, have questions, or need to report a defect, please contact Northlight customer support through their official channels.

For further information, you may visit the [Northlight Store on Amazon](#).