

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta RY8534WH Clean & Steam Multi Steam Mop Instruction Manual](#)

## Rowenta RY8534WH

# Rowenta RY8534WH Clean & Steam Multi Steam Mop Instruction Manual

## INTRODUCTION

---

The Rowenta RY8534WH Clean & Steam Multi is a versatile 3-in-1 appliance designed for comprehensive floor and surface cleaning. It combines vacuuming, steam cleaning, and a portable steam unit to effectively clean and sanitize various surfaces in your home. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance.



Image: The Rowenta RY8534WH Clean & Steam Multi in its upright position, highlighting its sanitizing feature.

## SAFETY INSTRUCTIONS

---

Please read and understand all safety instructions before using the appliance to prevent injury or damage.

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and individuals with reduced physical, sensory, or mental capabilities.
- Use only distilled or demineralized water in the water tank. Do not add detergents, perfumes, or other chemicals.
- Do not direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Unplug the appliance from the power outlet before cleaning, maintenance, or when not in use.
- Never leave the appliance unattended when it is plugged in or operating.
- Do not use the appliance if the power cord or plug is damaged, or if the appliance has been dropped or damaged in any way.

## PRODUCT OVERVIEW

---

The Rowenta RY8534WH Clean & Steam Multi offers a comprehensive cleaning solution with its integrated features and accessories.

### Key Features:

- **3-in-1 Action:** Vacuums, steam cleans, and sanitizes simultaneously, providing deep cleaning in one pass.
- **Portable Steam Cleaner:** Features a detachable steam unit for targeted cleaning of hard-to-reach areas, upholstery, and various surfaces.
- **Sanitizing Steam:** Utilizes the power of steam to eliminate viruses, germs, and bacteria without the need for chemical detergents.
- **Cyclonic Technology:** Ensures high air/dust separation, maintaining strong suction performance over time.
- **Adjustable Steam Flow:** Offers ECO and MAX settings to adapt steam output to different floor types and cleaning needs.
- **Wide Range of Accessories:** Includes multiple microfiber pads, a carpet glider, various brushes, a steam concentrator, and a window cleaning tool for versatile applications.
- **Easy Operation:** Equipped with controlled steam delivery triggers, an easily accessible on/off button for steam, and a rapid 30-second heat-up time.
- **Comfort and Practicality:** Designed with an ergonomic handle, wheels for easy transport, automatic pad replacement, a removable water tank, a parking base, and an accessory storage bag.



Image: The appliance in action, simultaneously vacuuming debris and steam cleaning a hard floor.

## SETUP

---

Follow these steps to prepare your Rowenta RY8534WH Clean & Steam Multi for first use.

1. **Assembly:** Connect the handle to the main body of the appliance until you hear an audible click, ensuring it is securely fastened.
2. **Fill Water Tank:** Remove the water tank from the appliance. Fill it with distilled or demineralized water up to the maximum fill line. Do not use tap water, detergents, or other chemical solutions. Reinsert the water tank firmly until it clicks into place.
3. **Attach Microfiber Pad:** Place a clean microfiber pad onto the cleaning head. Ensure it is properly aligned and secured by the hook-and-loop fasteners.
4. **Power Connection:** Plug the appliance's power cord into a suitable electrical outlet.



Image: Attaching a microfiber pad to the cleaning head.

## OPERATING INSTRUCTIONS

---

Learn how to use the various functions of your Clean & Steam Multi for effective cleaning.

1. **Power On and Heat-Up:** Press the main power button. The appliance will begin heating up, indicated by a light. It will be ready for use in approximately 30 seconds.
2. **Vacuuming Function:** To vacuum, simply push the appliance forward. The cyclonic suction will activate, collecting dust and debris into the dust container.
3. **Steam Cleaning Function:** Select the desired steam level (ECO for delicate floors like parquet, MAX for durable floors like tiles). Press the steam trigger located on the handle to release steam. Move the appliance slowly and

steadily over the surface to be cleaned.

4. **Combined Vacuuming and Steam Cleaning:** For a complete clean, activate both the vacuum and steam functions simultaneously. This allows you to vacuum and wash your floors in a single pass.
5. **Using the Portable Steam Unit:**
  - a. Detach the portable steam unit from the main body by pressing the release button.
  - b. Attach the appropriate accessory (e.g., small brush, concentrator, window tool) for your specific cleaning task.
  - c. Direct the steam towards the surface you wish to clean. Exercise caution as the steam is very hot.
  - d. After use, allow the portable unit to cool down before reattaching it to the main appliance.



Image: Detaching the portable steam unit.



Image: Portable unit used for diverse cleaning tasks.



Image: Cleaning a cushion with the portable steam unit.



Image: Steam cleaning curtains with the portable unit.



Image: Cleaning a sink faucet with the portable steam unit.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

1. **Emptying and Cleaning the Dust Container:** After each use, detach the dust container, empty its contents, and rinse it thoroughly with water. Ensure it is completely dry before reattaching it to the appliance.
2. **Washing Microfiber Pads:** Remove microfiber pads after each use. They are machine washable; follow the care instructions on the pad label. Allow them to air dry completely before reuse or storage.
3. **Descaling:** To prevent limescale buildup and maintain steam performance, perform descaling periodically. The frequency depends on your water hardness and usage. Refer to the complete user manual for detailed descaling instructions specific to your model.
4. **Storage:** Store the appliance in a dry, safe place. Use the provided accessory bag to keep all attachments organized and easily accessible.

## TROUBLESHOOTING

---

If you encounter issues with your appliance, refer to the following common problems and solutions.

- **No Steam:**
  - Ensure the water tank is filled with distilled or demineralized water.
  - Verify that the appliance has completed its heat-up cycle (approximately 30 seconds).
  - Check that the steam trigger on the handle is being pressed.

- **Poor Suction:**

- Empty and clean the dust container. A full or dirty container can reduce suction.
- Check for any blockages in the suction path, including the nozzle and tubes.
- Ensure all filters are clean and correctly installed.

- **Water Leaks:**

- Ensure the water tank is properly sealed and fully inserted into its compartment.
- Verify that the microfiber pad is correctly attached to the cleaning head.

For other issues not listed here, please consult the complete user manual or contact Rowenta customer support.

## SPECIFICATIONS

---

<b>Brand</b>	Rowenta
<b>Model</b>	RY8534WH
<b>Wattage</b>	1700 watts
<b>Voltage</b>	230 Volts
<b>Dimensions (L x W x H)</b>	25.89 x 36.28 x 118.89 cm
<b>Weight</b>	9.08 Kilograms
<b>Material</b>	18/8 Stainless Steel
<b>Special Feature</b>	Portable

## WARRANTY

---

This Rowenta product is covered by a manufacturer's warranty. The specific terms and duration of the warranty may vary by region and purchase date. Please refer to the warranty card included with your appliance or visit the official Rowenta website for detailed information regarding warranty coverage, conditions, and how to make a claim.

## SUPPORT

---

For technical assistance, inquiries about spare parts, or any other support needs, please contact Rowenta customer service. You can find contact details, including phone numbers and online support options, on the official Rowenta website or in the documentation provided with your appliance. When contacting support, please have your product model number (RY8534WH) and serial number ready.

