

## MONODEAL J19

# MONODEAL Active Noise Cancelling Headphones

Model: J19

### INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your MONODEAL Active Noise Cancelling Headphones, Model J19. These headphones are designed to provide a high-fidelity audio experience with effective noise cancellation, ideal for travel and noisy environments.



Image: MONODEAL Active Noise Cancelling Headphones, showcasing the black and gold design with the inline controller and 3.5mm audio jack.

## PACKAGE CONTENTS

---

Please verify that all items listed below are included in your package:

- Active Noise Cancelling Headset (x1)
- Headphone Splitter (x1)
- Airplane Joint Adapter (x1)
- USB Charging Cable (x1)
- Headset Carrying Case (x1)



Image: The MONODEAL headphones laid out with their included accessories, including the airplane adapter, charging cable, and carrying case.

## PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your headphones:

- **Adjustable Headband:** For a comfortable and secure fit.
- **Memory Foaming Earpads:** Provide comfort for extended wear.
- **Inline Controller:** Houses the Active Noise Cancellation (ANC) switch, microphone, and answer/end call button.
- **3.5mm Audio Jack:** For wired connection to audio devices.
- **USB Charging Port:** For recharging the internal battery.



## Comfortable Memory Foaming Earpads

Pillow-like softness on the headband and ear cushions



Image: A detailed diagram highlighting key components of the MONODEAL headphones, including the extra airplane dual plug, noise cancelling indicator light, noise cancelling on/off switch, USB charging port, 3.5mm audio plug, and built-in microphone on the inline controller.

## SETUP

### Initial Charging

Before first use, fully charge your headphones. Connect the supplied USB charging cable to the USB charging port on the inline controller and to a standard USB power source. The charging time is approximately 3 hours. A full charge provides up to 20 hours of continuous use with Active Noise Cancellation enabled.

### Connecting to an Audio Source

Insert the 3.5mm audio plug into the audio jack of your device (e.g., smartphone, tablet, laptop). The headphones operate in wired mode. If your device has separate microphone and headphone jacks, use the included headphone splitter.

### Adjusting Fit

Adjust the headband by sliding the earcups up or down until they comfortably fit over your ears. The semi-around-ear design is intended to cover part of the ear while providing good air permeability. Ensure a snug fit for optimal sound and noise cancellation performance.



Image: Illustration showing the adjustable headband mechanism and the foldable design of the headphones, emphasizing portability.

## OPERATING INSTRUCTIONS

---

### Active Noise Cancellation (ANC)

To activate the Active Noise Cancellation feature, locate the ANC switch on the inline controller and slide it to the "ON" position. A blue indicator light will illuminate, confirming that ANC is active. This feature is most effective at reducing low-frequency ambient noise, such as engine hum or air conditioning sounds.

To deactivate ANC, slide the switch to the "OFF" position. The headphones can operate without battery power in common mode (ANC off).



Image: A visual guide demonstrating how to activate the ANC mode by pushing the switch to the "ON" position, with a blue light indicating activation.

## Audio Playback

Once connected to your audio source, audio will play through the headphones. Adjust the volume directly on your connected device. The headphones deliver rich bass and balanced sound for an immersive listening experience.

## Call Functions

The inline controller features a built-in microphone and an answer/end call button. Press the button once to answer an incoming call or to end an active call.

## Using the Airplane Adapter

For in-flight entertainment systems, use the included airplane joint adapter. Plug the headphone's 3.5mm jack into the adapter, then insert the adapter into the dual audio jacks available on most aircraft seats.



# Frequent flyer's delight

Noise Cancelling - reduce airplane  
roar to a whisper



Image: A person wearing the MONODEAL headphones while seated on an airplane, illustrating their use for travel and noise reduction.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in the provided carrying case to protect them from dust and damage. The foldable design allows for compact storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the headphones when the ANC indicator light signals low battery.
- **Comfort:** It is recommended to take off the headphones every 2 hours to allow your ears to relax and to ensure continued comfort during extended listening sessions.

## TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Active Noise Cancellation (ANC) is not working.	Ensure the ANC switch on the inline controller is pushed to the "ON" position. Check if the blue working light is illuminated. If not, the battery may be depleted; recharge the headphones.
Earmuffs feel too small or uncomfortable.	These headphones feature semi-around-ear earmuffs designed to cover part of the ear. Adjust the headband to find the most comfortable fit for your head size. Take breaks every 2 hours to relieve pressure.
No sound or poor sound quality.	Ensure the 3.5mm audio plug is fully inserted into both the headphones and your audio device. Check the volume level on your connected device. Test with another audio source or cable if possible.
Microphone is not picking up sound.	Ensure the 3.5mm audio plug is fully inserted. If using a PC with separate jacks, ensure the headphone splitter is correctly used. Check microphone settings on your connected device.

## SPECIFICATIONS

Feature	Detail
Model Name	Noise Cancelling Headphones-J19
Connectivity Technology	Wired
Headphones Jack	3.5 mm Jack
Noise Control	Active Noise Cancellation
Audio Driver Size	40 Millimeters
Frequency Range	20 Hz - 20,000 Hz
Battery Life (ANC On)	Up to 20 Hours
Charging Time	Approximately 3 Hours
Item Weight	15.2 Ounces (approx. 431g)
Product Dimensions	6.8 x 7 x 2.6 inches
Material	Plastic
Special Features	Foldable, Active Noise Cancellation, Lightweight, Microphone Included, Comfortable

## WARRANTY AND SUPPORT

For warranty information or technical support, please contact MONODEAL customer service. Refer to the contact details provided with your purchase or visit the official MONODEAL website. Please retain your proof of purchase for



warranty claims.

**MONODEAL Customer Service:** [Visit the MONODEAL Store on Amazon](#)