

[Manuals.plus](#) /

› [iLive Electronics](#) /

› iLive Electronics ISB309B Wireless Tailgate Party Speaker User Manual

iLive Electronics ISB309B

iLive Electronics ISB309B Wireless Tailgate Party Speaker User Manual

Model: ISB309B

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your iLive Electronics ISB309B Wireless Tailgate Party Speaker. Please read this manual thoroughly before using the device and retain it for future reference.

SAFETY INFORMATION

- Do not expose the unit to extreme temperatures, direct sunlight, or moisture.
- Avoid placing the speaker near heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not block any ventilation openings.
- This product contains a lithium-ion battery. Dispose of it properly according to local regulations.

PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- iLive ISB309B Wireless Tailgate Party Speaker
- Micro-USB to USB Cable
- User's Guide

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 1: Front view of the iLive ISB309B speaker, showcasing the main speaker grille and active LED light effects.

WIRELESS TAILGATE SPEAKER



Figure 2: Detailed diagram illustrating key features and connection points of the iLive ISB309B speaker, including the phone rest, color-changing LED lights, built-in rechargeable battery, USB phone charger, and various audio inputs (Microphone, Aux In, USB Port).

Controls and Ports:

- **Power Button:** Turns the speaker on or off.
- **Play/Pause/Pairing/LED Lights Button:** Controls playback, initiates Bluetooth pairing, and cycles through LED light effects.
- **Volume Controls:** Adjusts the speaker's output volume.
- **Microphone Input:** For connecting an external microphone.
- **Aux In (3.5mm Audio Input):** For connecting external audio devices via a 3.5mm cable.
- **USB Port:** For playing MP3 files from a USB drive and charging compatible devices.
- **Micro-USB Charging Port:** For charging the speaker's internal battery.
- **Carrying Handle:** For easy portability.

SETUP

Initial Charging

1. Before first use, fully charge the speaker's built-in lithium-ion battery.
2. Connect the included Micro-USB to USB cable to the speaker's Micro-USB charging port.
3. Connect the other end of the cable to a standard USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate. Allow approximately 3-4 hours for a full charge. The indicator light will change or turn off once charging is complete.

Powering On/Off

- To power on, press and hold the Power button until the speaker activates.
- To power off, press and hold the Power button again until the speaker shuts down.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. A voice prompt will announce "Bluetooth Mode" and the LED lights will flash, indicating it's ready for pairing.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), navigate to the Bluetooth settings.
3. Search for available devices and select "ISB309B" from the list.
4. Once paired, a voice prompt will confirm "Bluetooth Connected" and the LED lights will stop flashing.
5. You can now play audio from your device through the speaker.





Figure 3: The iLive ISB309B speaker with a smartphone placed in the integrated phone rest, demonstrating its use for media playback.

FM Radio Operation

1. Press the Mode button (if available, or cycle through modes using the Play/Pause button if it doubles as mode selector) to switch to FM Radio mode. A voice prompt will announce "FM Mode".
2. To auto-scan and save available stations, press and hold the Play/Pause button. The speaker will scan and store stations automatically.
3. Use the Previous/Next track buttons to navigate between saved stations.

Aux-in Connection

1. Connect a 3.5mm audio cable (not included) from the Aux-in port on the speaker to the audio output jack of your external device.
2. Press the Mode button to switch to Aux-in mode. A voice prompt will announce "Aux Mode".
3. Control playback and volume directly from your connected device.

USB Playback

1. Insert a USB flash drive containing MP3 audio files into the USB port.
2. The speaker should automatically switch to USB mode and begin playing the first track. If not, press the Mode button to select USB mode.
3. Use the Play/Pause and Previous/Next track buttons to control playback.

Microphone Input

- Connect a microphone (not included) to the Microphone Input port.
- The microphone audio will be mixed with the currently playing music. Adjust microphone volume as needed (if a dedicated control is present).

LED Light Effects

- Press the LED Light button (often integrated with the Play/Pause/Pairing button, or a dedicated button) to cycle through different light modes or turn the lights off.

CHARGING THE BATTERY

When the battery is low, the speaker may emit an audible alert or the indicator light may change. To recharge:

1. Connect the Micro-USB end of the charging cable to the speaker's charging port.
2. Connect the standard USB end to a powered USB port (e.g., wall adapter, computer).
3. The charging indicator will show the charging status. A full charge provides approximately 3 hours of playback at 100% volume.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the battery periodically even if the speaker is not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is discharged.	Charge the speaker using the provided USB cable.
No sound	Volume is too low. Device not connected. Incorrect mode selected.	Increase volume on speaker and connected device. Ensure Bluetooth is paired or Aux/USB is properly connected and selected.
Bluetooth not pairing	Speaker not in pairing mode. Device too far. Interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker (within 60ft). Turn off other Bluetooth devices.
Poor FM reception	Weak signal. Interference.	Relocate the speaker to an area with better reception.

SPECIFICATIONS

- **Model:** ISB309B
- **Bluetooth Version:** V5.0
- **Wireless Range:** Up to 60 feet
- **Audio Inputs:** Bluetooth, Digital FM Radio (PLL with 10 presets), 3.5mm Aux In, Microphone Input, USB (MP3 file format)
- **Power Source:** Built-in Rechargeable Lithium-ion Battery
- **Battery Life:** Approximately 3 hours at 100% volume
- **Driver Size:** 6.5 inches (Woofer)
- **Dimensions (L x W x H):** 11.81 x 7.95 x 10.04 inches
- **Item Weight:** 4.8 pounds
- **Color:** Black

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official iLive Electronics website. Keep your purchase receipt as proof of purchase.

Website: www.iliveelectronics.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07RFZZ7DR>

More documents and user manuals: <https://manuals.plus/>