



[Manuals.plus](#) /

› [Krisdonia](#) /

› Krisdonia 27000mAh 130W AC Power Bank User Manual

Krisdonia 27000mAh 130W AC Power Bank

Krisdonia 27000mAh 130W AC Power Bank User Manual

Model: 27000mAh 130W AC Power Bank

1. INTRODUCTION

Thank you for choosing the Krisdonia 27000mAh 130W AC Power Bank. This portable power solution is designed to provide reliable power for your laptops, smartphones, tablets, and other electronic devices, whether you are at home, in the office, or on the go. With its high capacity and versatile output options, it ensures your devices stay charged when you need them most.



Image 1.1: The Krisdonia 27000mAh 130W AC Power Bank, a compact and powerful portable charger.

This manual provides essential information on how to safely and effectively use your power bank, including setup, operation, maintenance, and troubleshooting tips. Please read this manual thoroughly before using the product and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage to the device or injury, please observe the following precautions:

- Do not expose the power bank to extreme temperatures (above 60°C/140°F or below 0°C/32°F), direct sunlight, or high humidity.
- Do not disassemble, modify, or attempt to repair the device yourself. Refer all servicing to qualified personnel.
- Keep the power bank away from water, flammable liquids, and corrosive chemicals.
- Avoid dropping, hitting, or subjecting the device to strong impacts.
- Do not insert foreign objects into any ports or openings.
- Ensure proper ventilation when using the AC outlet to prevent overheating. Do not cover the ventilation holes.
- Use only the original charger and cables provided with the power bank or certified compatible accessories.
- Keep out of reach of children.
- Dispose of the power bank according to local regulations. Do not dispose of it in household waste.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Krisdonia 27000mAh 130W AC Power Bank
- AC Adapter (for charging the power bank)
- USB-C to USB-C Cable
- User Manual
- Travel Pouch

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts and functions of your Krisdonia Power Bank:

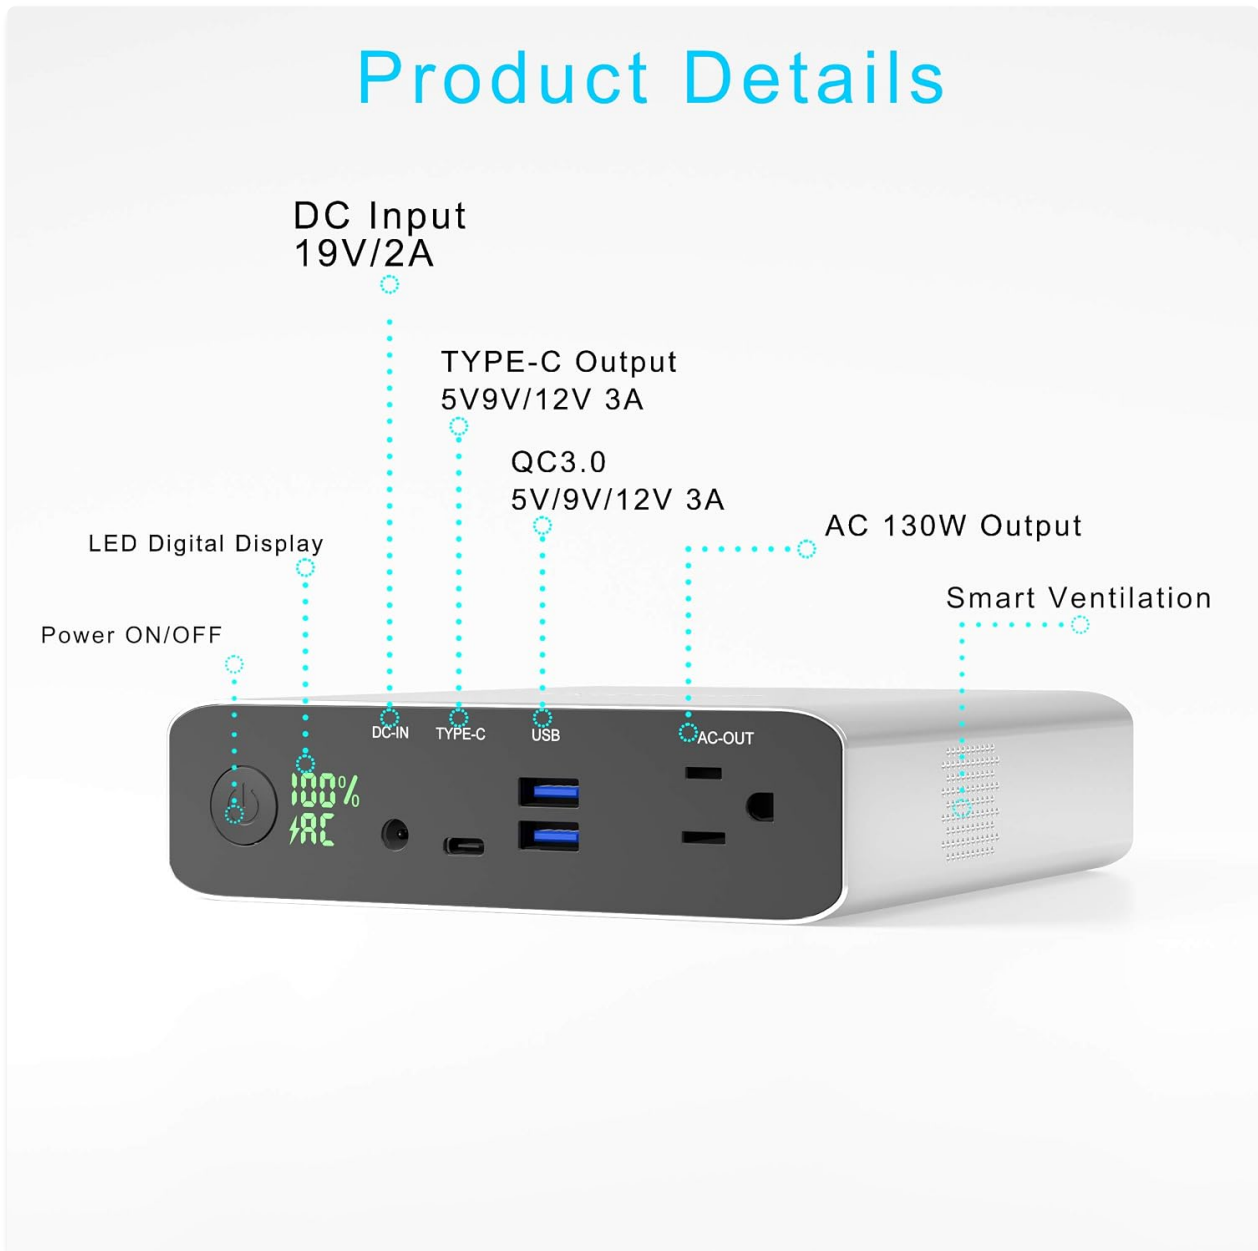


Image 4.1: Detailed diagram of the Krisdonia Power Bank's ports and indicators.

1. **Power ON/OFF Button:** Press and hold for 2 seconds to turn the unit on or off.
2. **LED Digital Display:** Shows the remaining battery percentage and AC output status.
3. **DC-IN Port (19V/2A):** Used to recharge the power bank.
4. **TYPE-C Output (5V/9V/12V 3A):** For charging Type-C compatible devices like MacBook 12" or

Nintendo Switch.

5. **USB Ports (QC3.0, 5V/9V/12V 3A):** Two Quick Charge 3.0 USB ports for fast charging smartphones, tablets, and other USB-powered devices.
6. **AC-OUT Port (220V/130W max):** Provides standard AC power for laptops, small appliances, and other AC-powered devices (ensure device power consumption is below 130W).
7. **Smart Ventilation:** Internal fan for heat dissipation during AC output.

5. SETUP: CHARGING THE POWER BANK

Before first use, fully charge your Krisdonia Power Bank. It takes approximately 4-5 hours to fully charge using the provided AC adapter.

1. Connect the provided AC adapter to the DC-IN port (3) on the power bank.
2. Plug the AC adapter into a wall outlet.
3. The LED digital display (2) will show the charging progress. When fully charged, it will display "100%".
4. Once fully charged, disconnect the AC adapter.

6. OPERATING INSTRUCTIONS

The Krisdonia Power Bank can charge up to four devices simultaneously using its various output ports.



Image 6.1: The power bank simultaneously charging a laptop, smartphone, and itself.

6.1. Charging Devices via USB or Type-C

1. Press and hold the Power ON/OFF button (1) for 2 seconds to turn on the power bank. The LED display will light up.
2. Connect your device's USB or Type-C charging cable to the corresponding port (4 or 5) on the power bank.
3. The power bank will automatically begin charging your device.
4. Once charging is complete, disconnect your device. The power bank will automatically turn off after a period of inactivity or can be manually turned off by holding the power button.

6.2. Charging Devices via AC Outlet

Important: Ensure the power consumption of your device does not exceed 130W. Overloading the AC outlet can damage the power bank and the connected device.

1. Press and hold the Power ON/OFF button (1) for 2 seconds to turn on the power bank.
2. Plug your device's AC power plug into the AC-OUT port (6) on the power bank.

3. The LED display will show the AC output status.
4. When charging is complete, disconnect your device. Turn off the power bank by holding the power button.

7. MAINTENANCE

Proper care will extend the lifespan of your Krisdonia Power Bank:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the power bank. Do not use abrasive cleaners or solvents.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, charge the power bank to approximately 50-70% every 3 months to maintain battery health.
- **Battery Life:** The power bank uses a lithium-ion polymer battery. Like all rechargeable batteries, its capacity will decrease over time.

8. TROUBLESHOOTING

If you encounter issues with your power bank, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Power bank does not turn on.	Battery is depleted.	Charge the power bank fully.
	Power button not pressed correctly.	Press and hold the power button for 2 seconds.
Device not charging from USB/Type-C.	Cable is faulty or incompatible.	Try a different cable. Ensure the cable is suitable for charging.
	Device is not compatible or requires specific charging protocol.	Check your device's charging requirements.
AC outlet not working.	Device power consumption exceeds 130W.	Use a device with power consumption below 130W.
	Power bank battery is too low.	Recharge the power bank. AC output requires sufficient battery level.
Power bank gets warm during use.	Normal operation, especially during high power output.	Ensure proper ventilation. If it becomes excessively hot, disconnect devices and allow it to cool down.

If the problem persists after trying these solutions, please contact Krisdonia customer support.

9. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	Krisdonia
Model	27000mAh 130W AC Power Bank
Battery Type	Lithium-Polymer
Capacity	27000mAh / 99.9Wh
DC Input	19V / 2A
Type-C Output	5V/9V/12V 3A
USB Output (QC3.0)	5V/9V/12V 3A (x2 ports)
AC Output	220V / 130W (Max)
Recharge Time	Approx. 4-5 hours
Dimensions	6.5 x 5.9 x 1.6 inches (approx.)
Weight	1160 Grams (2.6 lbs approx.)
Color	Silver

10. WARRANTY AND SUPPORT

Krisdonia products come with a 12-month satisfaction guarantee. If you experience any issues or have questions regarding your Krisdonia 27000mAh 130W AC Power Bank, please contact our customer support team for assistance.

For the fastest support, please have your product model and purchase information ready when contacting us.

Contact Information:

Please refer to the contact details provided on the Krisdonia official website or your purchase platform for the most up-to-date support information.