

UBay EN-22655S

UBay EN-22655S Remote Control Instruction Manual

Model: EN-22655S

Brand: UBay

INTRODUCTION

This manual provides instructions for the UBay EN-22655S replacement remote control, designed for various Sharp LCD/LED TVs. Please read this manual thoroughly before use to ensure proper operation and longevity of your remote control.

PRODUCT OVERVIEW

The UBay EN-22655S is a direct replacement remote control for compatible Sharp LCD/LED televisions. It features an ergonomic design for comfortable handling and requires no programming or setup, functioning immediately upon battery installation.



Image 1: Front view of the UBay EN-22655S Remote Control.

Compatible TV Models:

- LTDN50D36US
- LC50N3100U
- LC32Q3070U
- LC-32Q3070U
- LC32Q3170U
- LC-32Q3170U
- LC40Q3070U
- LC-40Q3070U
- LC40Q3170U

- LC-40Q3170U

SETUP

The EN-22655S remote control requires two AAA batteries (not included). No programming or pairing is necessary; the remote is ready for use once batteries are installed.

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Always replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

OPERATING INSTRUCTIONS

To operate the remote control, point it directly towards the infrared receiver on your Sharp television. Ensure there are no obstructions between the remote and the TV.

Key Functions:

- **POWER (Red Button):** Turns the TV on or off.
- **INPUT/SOURCE:** Selects input sources (HDMI, AV, USB, etc.).
- **TV/AV:** Switches between TV and AV input modes.
- **Number Buttons (0-9):** Directly selects channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **MENU:** Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Navigates through menus and confirms selections.
- **EXIT:** Exits the current menu or function.
- **DISPLAY:** Shows current channel information.
- **SLEEP:** Sets the sleep timer.
- **PICTURE:** Adjusts picture settings.
- **SOUND:** Adjusts sound settings.
- **ASPECT:** Changes the screen aspect ratio.
- **Color Buttons (Red, Green, Yellow, Blue):** Access specific functions within certain menus or applications.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next):** Controls media playback when applicable (e.g., USB media).

MAINTENANCE

To ensure optimal performance and longevity of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always use new AAA batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Storage:** Store the remote control in a dry place, away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

If you experience issues with your UBay EN-22655S remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the TV.
- **Intermittent Response:**
 - This often indicates low battery power. Replace the batteries.
 - Clean the remote's infrared emitter (the clear plastic at the front) and the TV's sensor with a soft cloth.
- **Specific Buttons Not Working:**
 - Ensure the remote is compatible with your specific TV model. While this remote is broadly compatible, some advanced functions might vary by TV model.
 - If only a few buttons are unresponsive, it might indicate a physical issue with the remote.

If the problem persists after trying these steps, the remote control may be faulty, or there might be an issue with the television itself. Consider testing with another compatible remote if available.

SPECIFICATIONS

Feature	Detail
Model Number	EN-22655S
Brand	UBay
Compatible Devices	Sharp LCD/LED Televisions
Batteries Required	2 x AAA (not included)
Product Dimensions	8.3 x 2 x 0.7 inches (approx.)

Feature	Detail
Item Weight	3.38 ounces (approx.)
Color	Black
Special Feature	Ergonomic design
Max Supported Devices	1 (Television)

WARRANTY AND SUPPORT

This product is typically covered by the retailer's return policy or a limited manufacturer's warranty. For specific warranty details or technical support, please refer to the documentation provided at the time of purchase or contact the retailer directly.

Please retain your proof of purchase for any warranty claims or support inquiries.