



[Manuals.plus](#) /

> [GREEN MOUNT](#) /

> GREEN MOUNT Metal Garden Hose Nozzle (Model GMN03R6) Instruction Manual

## GREEN MOUNT GMN03R6

# GREEN MOUNT Metal Garden Hose Nozzle (Model GMN03R6) Instruction Manual

Your guide to setup, operation, and maintenance.

## INTRODUCTION

Thank you for choosing the GREEN MOUNT Metal Garden Hose Nozzle. This manual provides essential information for the proper setup, operation, and maintenance of your new hose nozzle. Designed for durability and versatility, this nozzle offers multiple spray patterns for various watering and cleaning tasks.



*Image: The GREEN MOUNT Metal Garden Hose Nozzle in red, showcasing its robust design.*

## PRODUCT FEATURES

- **Durable Construction:** Crafted from premium zinc alloy with an anodized finish to resist rust, corrosion, and wear, ensuring long-lasting performance.
- **Adjustable Spray Patterns:** Offers a range of spray options from a gentle mist to a powerful jet, suitable for watering plants, washing vehicles, or cleaning surfaces.
- **Ergonomic Design:** Features a comfortable pistol grip handle with TPR rubber for slip-resistant handling and reduced fatigue during extended use.
- **Integrated Trigger Lock:** A convenient lock bar at the top of the handle allows for continuous water flow without constant pressure on the trigger.

- **Leakproof Connection:** Equipped with rubber washers to ensure a tight, leak-free seal when attached to standard garden hoses.
- **Shock-Resistant Dial:** The black shock-resistant rubber dial protects the nozzle from accidental impacts.

## SETUP INSTRUCTIONS

1. **Inspect Components:** Ensure all parts, including the nozzle and any included rubber washers, are present and undamaged.
2. **Prepare Hose:** Turn off the water supply to your garden hose. If the hose is already connected to another accessory, disconnect it.
3. **Insert Washer:** Place a rubber washer firmly inside the threaded end of the hose nozzle. This helps prevent leaks.
4. **Attach Nozzle:** Screw the threaded end of the GREEN MOUNT nozzle onto the end of your garden hose. Turn clockwise until hand-tight. Avoid over-tightening, which can damage the threads or washer.
5. **Check for Leaks:** Turn on the water supply slowly and check for any leaks at the connection point. If a leak occurs, tighten slightly or re-seat the rubber washer.

## LEAKPROOF DESIGN



*Image: A close-up view illustrating the leakproof design of the nozzle, highlighting the internal rubber gasket that ensures a secure connection to the hose.*

## OPERATING INSTRUCTIONS

### Adjusting Spray Patterns

The GREEN MOUNT nozzle features multiple spray patterns for various applications. To change the spray pattern, rotate the nozzle head clockwise or counter-clockwise until the desired pattern aligns with the indicator.

- **Mist:** A fine, gentle spray ideal for delicate plants or seedlings.
- **Shower:** A soft, wide spray suitable for general plant watering.
- **Jet:** A powerful, concentrated stream for cleaning tough dirt or reaching distant areas.
- **Soaker:** A steady, drenching flow for deep watering.
- **Angled:** A directed spray for specific cleaning tasks.
- **Flat:** A wide, flat spray for rinsing surfaces.



*Image: The nozzle head being rotated to select different watering patterns, demonstrating the ease of adjustment.*



*Image: A visual diagram illustrating the various spray patterns available on the nozzle, including Mist, Shower, Jet, Soaker, Angled, and Flat.*

### **Using the Trigger and Trigger Lock**

To activate water flow, squeeze the trigger handle. To maintain continuous water flow without holding the trigger, push the metal trigger lock bar forward until it engages with the trigger. To release the lock, simply squeeze the trigger again.



*Image: A detailed view of the nozzle's handle, highlighting the built-in trigger lock mechanism and the ergonomic rubberized grip for comfortable use.*

## MAINTENANCE

- **Cleaning:** Periodically rinse the nozzle with clean water to remove dirt, debris, or mineral deposits. For stubborn clogs in the spray holes, use a small brush or needle to clear them.
- **Storage:** During colder months or when not in use for extended periods, disconnect the nozzle from the hose and store it in a dry, protected area to prevent freezing and potential damage.
- **Washer Replacement:** If you notice persistent leaks, inspect the rubber washer at the hose connection point. Replace it if it appears worn or damaged.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Water leaks from connection point	Loose connection, worn or missing rubber washer.	Tighten the connection. Ensure a rubber washer is properly seated. Replace the washer if damaged.
Low water pressure or inconsistent spray	Clogged nozzle holes, low water supply from hose.	Clean the nozzle head and spray holes. Check the water source and hose for kinks or obstructions.
Difficulty rotating spray head	Mineral buildup or debris.	Rinse the nozzle head thoroughly. If necessary, soak the head in a vinegar solution to dissolve mineral deposits.

## SPECIFICATIONS

- **Model Number:** GMN03R6
- **Material:** Metal (Zinc Alloy)
- **Exterior Finish:** Anodized Metal, Plastic, Rubber, Zinc
- **Item Weight:** 10.5 ounces
- **Package Dimensions:** 7.87 x 4.53 x 2.6 inches
- **UPC:** 608631133595
- **Inlet Connection Type:** Barb (Standard Garden Hose)
- **Outlet Connection Type:** Barb

## WARRANTY AND SUPPORT

GREEN MOUNT is committed to product quality. For any questions, concerns, or support needs regarding your hose nozzle, please contact GREEN MOUNT customer service. While specific warranty details are not provided in this manual, please refer to your purchase documentation or the official GREEN MOUNT website for warranty information.

For further assistance, please visit the [GREEN MOUNT Store on Amazon](#).