

## Northlight Hand Woven Resin Wicker Hanging Porch Swing

# Northlight Hand Woven Resin Wicker Hanging Porch Swing User Manual

Model: Hand Woven Resin Wicker Hanging Porch Swing

Brand: Northlight

### INTRODUCTION

Thank you for choosing the Northlight Hand Woven Resin Wicker Hanging Porch Swing. This manual provides essential information for the safe assembly, operation, and maintenance of your new porch swing. Please read it thoroughly before beginning assembly or use to ensure proper setup and longevity of the product.

This white hand-woven outdoor porch swing is designed for two-person seating and is all-weather resistant and waterproof, making it suitable for various outdoor environments. It comes with a hanging chain for installation.

### SAFETY INFORMATION

- **Read all instructions:** Before assembly and use, carefully read and understand all instructions in this manual.
- **Adult assembly required:** Assembly should only be performed by competent adults.
- **Secure mounting:** Ensure the swing is securely mounted to a sturdy structure capable of supporting the swing's weight plus the maximum intended load (two persons). Consult a professional if unsure about mounting surface integrity.
- **Weight limit:** Do not exceed the two-person seating capacity. Overloading can lead to structural failure and injury.
- **Clearance:** Ensure adequate clearance around the swing to prevent collisions with walls, furniture, or other objects during use.
- **Supervision:** Children should be supervised at all times when using the swing.
- **Weather conditions:** While the swing is all-weather resistant, extreme weather conditions (e.g., strong winds, heavy snow) may require temporary removal or additional securing.

### PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Hand Woven Resin Wicker Porch Swing (main body)

- Hanging Chains (typically two sets, one for each side)
- Assembly Hardware (bolts, nuts, washers, wrench if included)
- Instruction Manual (this document)



Figure 1: The Northlight Hand Woven Resin Wicker Hanging Porch Swing, showcasing its white woven design and included hanging chains.

## SETUP AND ASSEMBLY

Some easy assembly is required for this porch swing. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratching.
2. **Identify Parts:** Refer to the parts diagram (if provided in original packaging) to identify the swing body, chains, and hardware.
3. **Attach Chains to Swing:** Connect the hanging chains to the designated attachment points on the swing body. Ensure all connections are secure and tightened using the provided wrench or appropriate tools.



Figure 2: The swing positioned on a lawn, illustrating the sturdy construction and points where the hanging chains attach.

4. **Prepare Mounting Location:** Select a sturdy overhead structure (e.g., porch beam, swing stand) capable of safely supporting the swing and its occupants. Ensure the mounting hardware (not included with swing, typically purchased separately) is rated for the combined weight.
5. **Hang the Swing:** Attach the top ends of the hanging chains to your pre-installed mounting hardware. Ensure the swing hangs level and at a comfortable height. Double-check all connections for security before first use.

**Important:** If you are unsure about the structural integrity of your chosen mounting location or the proper installation of mounting hardware, consult a qualified professional.

## OPERATING INSTRUCTIONS

Using your Northlight porch swing is straightforward:

- **Seating:** The swing is designed for two persons. Sit gently and evenly on the swing.
- **Swinging Motion:** Initiate a gentle swinging motion by pushing off the ground with your feet. Avoid excessive or violent swinging, as this can strain the mounting points and chains.
- **Exiting:** Bring the swing to a complete stop before exiting to prevent falls.



Figure 3: The porch swing adorned with a green cushion and blanket, demonstrating its comfortable use in an outdoor setting.

## MAINTENANCE

Proper maintenance will extend the life and appearance of your swing:

- **Cleaning:** Clean the resin wicker with a mild soap and water solution. Use a soft cloth or sponge. Rinse thoroughly with clean water and allow to air dry. Avoid abrasive cleaners or brushes that could damage the wicker.
- **Chain Inspection:** Regularly inspect the hanging chains and all metal hardware for signs of rust, corrosion, or wear. While the swing is all-weather resistant, metal components can still be affected by prolonged exposure. Consider applying a rust-inhibiting spray to metal parts if rust appears.
- **Wicker Integrity:** Periodically check the resin wicker for any unraveling or damage. Minor unraveling can sometimes be re-secured with a strong adhesive.
- **Winter Storage:** In areas with harsh winters, consider storing the swing indoors or covering it with a protective outdoor furniture cover to prolong its lifespan.



Figure 4: The swing suspended from a sturdy wooden beam in a garden, demonstrating its integration into an outdoor living space.

## TROUBLESHOOTING

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Loose connections or insecure mounting.	Check all bolts, nuts, and chain connections. Ensure the overhead mounting structure is stable and appropriate.
Chains show signs of rust.	Prolonged exposure to moisture.	Clean rust with a wire brush, then apply a rust-inhibiting primer and paint. For severe rust, consider replacing the chains.

Problem	Possible Cause	Solution
Resin wicker appears damaged or unraveling.	Wear and tear, or impact damage.	For minor unraveling, carefully re-weave and secure with a strong, outdoor-grade adhesive. For significant damage, contact the manufacturer for repair options or replacement.

## SPECIFICATIONS

Feature	Detail
Product Dimensions (D x W x H)	24 inches x 56 inches x 25 inches
Seat Depth	18 inches
Item Weight	33 pounds
Material	Resin Wicker, Metal Frame
Color	White
Seating Capacity	2 Persons
Assembly Required	Yes
Weather Resistance	All-weather resistant and waterproof



Figure 5: The porch swing installed on a covered porch, demonstrating its suitability for various outdoor covered spaces.

## WARRANTY AND SUPPORT

For information regarding warranty coverage, replacement parts, or technical support, please contact Northlight customer service directly. Refer to the product packaging or the official Northlight website for contact details.

**Northlight Customer Service:** [Visit the Northlight Store on Amazon](#)