

Omega C2100S

Omega C2100S High Speed Juicer Instruction Manual

1. INTRODUCTION

The Omega C2100S High Speed Juicer is designed to simplify your juicing experience. Featuring an extra-large 2.95-inch feeding chute, it accommodates larger pieces of fruits and vegetables, significantly reducing preparation time. This centrifugal juicer efficiently extracts tasty and nutritious juice from a variety of produce, offering both high and low-speed settings for optimal results. Its compact design and non-slip suction cup feet ensure stability and convenience on your countertop.

2. PRODUCT FEATURES

- **Extra-Large Feeding Chute:** A 2.95-inch chute minimizes pre-cutting, allowing for whole fruits and larger vegetable pieces.
- **Dual Speed Settings:** 'Low' speed is ideal for soft fruits and vegetables, while 'High' speed is suitable for harder produce.
- **Durable Stainless Steel Filter:** Ensures efficient juice extraction and separation from pulp.
- **Large Pulp Container:** A removable 9-cup capacity pulp container reduces the frequency of emptying during juicing sessions.
- **Safety Locking Mechanism:** A built-in safety arm ensures the juicer operates only when correctly assembled.
- **Non-Slip Suction Cup Feet:** Provides stability and prevents movement on your countertop during operation.
- **Compact Design:** Space-saving footprint for easy storage and countertop use.



The Omega C2100S High Speed Juicer is shown with whole green apples ready to be processed in its extra-large feeding chute, highlighting its ability to handle larger produce with minimal pre-cutting.

3. SAFETY PRECAUTIONS

Before operating your Omega C2100S Juicer, please read and understand all safety instructions. Failure to do so may result in injury or damage to the appliance.

- Always ensure the juicer is correctly assembled and the safety locking arm is securely in place before turning it on.
- Do not insert fingers or other objects into the feeding chute while the juicer is operating. Always use the provided food pusher.
- Unplug the juicer from the power outlet before assembling, disassembling, or cleaning.
- Do not operate the juicer if the power cord or plug is damaged. Contact customer support for assistance.
- Keep the appliance away from children and pets.

- Ensure the juicer is placed on a stable, flat, and dry surface during use.

4. ASSEMBLY

Follow these steps to correctly assemble your juicer:

1. Place the motor base on a clean, flat, and stable surface.
2. Attach the juice collector to the front of the motor base, ensuring it aligns with the juice spout.
3. Place the pulp container at the back of the motor base, aligning it with the pulp ejection chute.
4. Insert the stainless steel filter basket into the main body of the juicer, ensuring it sits firmly.
5. Position the juicer lid on top of the filter basket and main body, ensuring it is correctly aligned.
6. Secure the safety locking arm by lifting it and hooking it over the lid until it clicks into place.
7. Insert the food pusher into the feeding chute.



This image displays all the detachable parts of the Omega C2100S juicer, including the motor base, pulp container, juice collector, lid, food pusher, and stainless steel filter, illustrating its modular design for easy assembly and cleaning.

5. OPERATING INSTRUCTIONS

Prepare your ingredients and follow these steps for juicing:

1. Wash all fruits and vegetables thoroughly. For most items, pre-cutting is not necessary due to the large 2.95-inch feeding chute. Remove large seeds or hard pits from fruits like peaches or avocados.
2. Place a glass or the provided juice collector under the juice spout.
3. Plug the juicer into a 110/120 Volt AC power outlet.
4. Turn the control dial to the desired speed setting:
 - **'Low' (Speed 1):** For soft fruits and vegetables (e.g., oranges, grapes, tomatoes).
 - **'High' (Speed 2):** For harder produce (e.g., apples, carrots, celery, ginger).
5. Gradually feed the ingredients into the feeding chute using the food pusher. Do not force ingredients down.
6. Once juicing is complete, turn the dial to '0' (Off) and unplug the appliance.



The juicer is in operation, with fresh orange juice flowing from the spout directly into a glass, demonstrating its efficient juice extraction process.





A detailed view of the juicer's control dial, clearly indicating the 'Low' and 'High' speed settings, allowing users to select the appropriate speed for different types of produce.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your juicer. Always unplug the appliance before cleaning.

1. Turn the juicer off and unplug it from the power outlet.
2. Release the safety locking arm and carefully remove the lid, food pusher, filter basket, juice collector, and pulp container.
3. Discard any remaining pulp from the pulp container.
4. Rinse all removable parts under running water. Use a brush to clean the stainless steel filter basket thoroughly to remove any trapped pulp.
5. All removable parts are dishwasher safe. For best results, place them on the top rack of your dishwasher.
6. Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
7. Allow all parts to dry completely before reassembling or storing the juicer.

7. TROUBLESHOOTING

If you encounter any issues with your juicer, refer to the following common troubleshooting tips:

- **Juicer does not turn on:** Ensure the power cord is securely plugged into a working outlet and the safety locking arm is fully engaged.
- **Excessive vibration or noise:** Check that all parts are correctly assembled and securely locked. Ensure the juicer is on a flat, stable surface.
- **Poor juice yield or wet pulp:** This may occur with very soft or overripe produce. Try using firmer ingredients or processing them at a lower speed. Ensure the filter basket is clean and not clogged.
- **Juice leakage:** Verify that the juice collector and lid are properly seated and the safety locking arm is secured.

If problems persist after following these steps, please contact Omega customer support.

8. SPECIFICATIONS

Brand	Omega
Model Number	C2100S

Color	Silver
Power Source	Corded Electric
Voltage	120V
Number of Speeds	2
Capacity (Pulp Container)	9-Cup
Product Dimensions	15.8 x 11.5 x 8.3 inches
Item Weight	10.98 pounds
Blade Material	Stainless Steel
Dishwasher Safe Parts	Yes

9. WARRANTY AND SUPPORT

The Omega C2100S High Speed Juicer comes with a **2-Year Manufacturer's Coverage**. This coverage is valid exclusively in North America, as the 110/120 Volt model is designed for use in this region only.

For warranty claims, technical support, or any inquiries regarding your juicer, please refer to the contact information provided in your product packaging or visit the official Omega website.