

VOUNOT 3294107041892

VOUNOT 3x3m Pop Up Gazebo Instruction Manual

Model: 3294107041892

INTRODUCTION

This manual provides essential instructions for the safe and effective assembly, operation, and maintenance of your VOUNOT 3x3m Pop Up Gazebo. Please read all instructions carefully before use and retain this manual for future reference.

The VOUNOT 3x3m Pop Up Gazebo is designed for temporary outdoor use, providing shade and shelter for various events such as garden parties, picnics, and market stalls. Its foldable design allows for quick setup and disassembly.

SAFETY INFORMATION

- **Weather Conditions:** This gazebo is not suitable for unsupervised use or during periods of inclement weather, including strong winds, heavy rain, or snow. Always monitor weather conditions.
- **Water Accumulation:** Be careful to prevent rainwater from accumulating on the roof, as this can cause the frame to break. Regularly clear any standing water.
- **Anchoring:** Always use the provided leg weight bags, stakes, and tension cords to secure the gazebo firmly to the ground. Failure to do so may result in damage or injury.
- **Assembly:** For safe and proper assembly, it is recommended that two people set up the gazebo. Uneven pressure during unfolding can damage the frame connectors.
- **Fire Safety:** Keep all flame and heat sources away from the gazebo fabric. The fabric is not fireproof.
- **Site Selection:** Choose a level surface free from obstructions and overhead hazards.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Gazebo Frame (Folding Steel Structure)
- 1 x Roof Cover (100% Polyester, PA-coated, 160g/m²)
- 4 x Detachable Leg Weight Bags
- 8 x Stakes (Sardines)

- 4 x Tension Cords
- 1 x 420D Oxford Carrying Bag
- 1 x Assembly Instructions (this manual)



Image: All components included in the VOUNOT 3x3m Pop Up Gazebo package, including the folded frame, roof cover, carrying bag, leg weight bags, stakes, and tension cords.

SETUP INSTRUCTIONS

Follow these steps for proper assembly. Two people are recommended for easier and safer setup.

1. **Unpack Components:** Remove all items from the carrying bag and lay them out on a clear, flat surface.
2. **Partially Expand Frame:** With two people, each standing on opposite sides, gently pull the frame outwards to partially expand it. Do not fully extend the legs yet.
3. **Attach Roof Cover:** Drape the roof cover over the partially expanded frame. Ensure the corners of the cover align with the corners of the frame. Secure the cover to the frame using any integrated fasteners (e.g., Velcro straps).

4. **Fully Expand Frame:** With two people, continue to pull the frame outwards until it is fully expanded. Ensure that the frame locks into place at all four corners. Apply even pressure to avoid damaging connectors.



STRUCTURE ACIER PLIABLE

FOLDING STEEL FRAME / KLAPPBARER STAHLRAHMEN



Utilisation recommandée/Recommended use/Empfohlene Verwendung

Pour une pluie modérée <8 mm/h/For moderate rain <8mm/h/Bei mäßigem Regen <8mm/h

Pour un vent modéré <45 km/h/Pour un vent modéré <45 km/h/Bei mäßigem Wind <45 km/h



ATTENTION LORS DE L'INSTALLATION !

ATTENTION DURING THE INSTALLATION !/ACHTUNG BEI DER INSTALLATION !

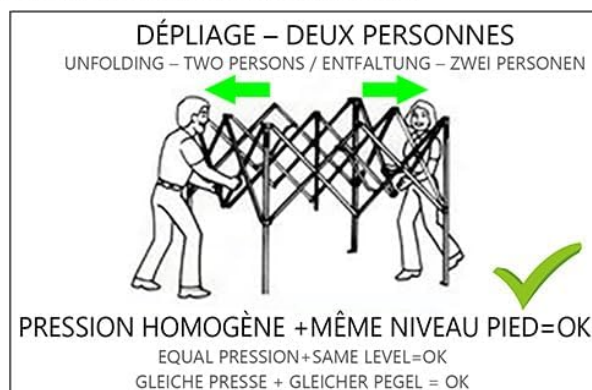 
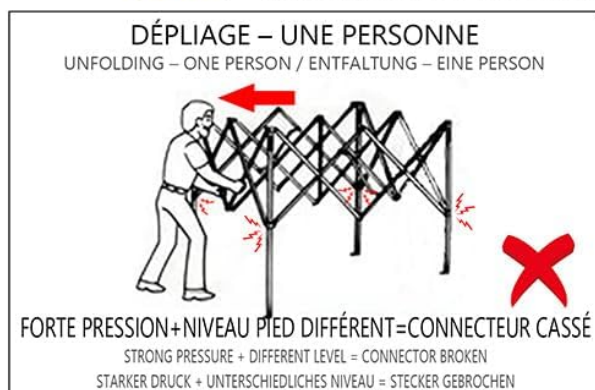 


Image: Illustration showing the correct method for unfolding the gazebo frame with two people, applying homogeneous pressure and keeping legs at the same level to prevent connector damage. Incorrect single-person unfolding is also shown, which can lead to broken connectors.

5. **Extend Legs:** Extend each leg to the desired height, ensuring the locking pins engage securely.
6. **Secure with Weight Bags:** Fill the provided leg weight bags with sand or other suitable material and attach them to each leg of the gazebo.
7. **Anchor with Stakes and Cords:** Use the stakes to secure the gazebo legs to the ground. Attach the tension cords to the corners of the roof and stake them into the ground at an angle to provide additional stability.



Image: The VOUNOT 3x3m Pop Up Gazebo fully assembled and secured, ready for use in an outdoor setting.

OPERATING INSTRUCTIONS

The VOUNOT Pop Up Gazebo is designed for temporary shade and shelter. Adhere to the following guidelines during use:

- **Intended Use:** Use the gazebo for outdoor activities such as picnics, garden events, market stalls, or temporary shelter from sun.
- **Weather Monitoring:** Always be aware of changing weather conditions. If strong winds, heavy rain, or storms are forecast, disassemble and store the gazebo immediately.
- **Stability Check:** Periodically check that all leg locks are engaged, and anchoring stakes/cords are taut. Ensure leg weight bags are properly filled and attached.
- **Rainwater Management:** In light rain, regularly push up on the underside of the roof to prevent water pooling, which can stress the frame.

PIQUE NIQUE PICNIC / PICNICH



JARDIN GARDEN / GARTEN



MARCHÉ MARKET / MARKT



FESTIVAL FESTIVAL / FEST



Image: Examples of the VOUNOT Gazebo being used in different outdoor scenarios, including a picnic, garden seating area, market stall, and festival setup.

MAINTENANCE

- **Cleaning the Fabric:** Clean the roof cover with a mild soap solution and water. Do not use harsh chemicals or abrasive cleaners. Allow the fabric to air dry completely before folding and storing.
- **Frame Care:** Inspect the steel frame periodically for any signs of rust or damage. Clean any dirt or debris from the frame. If rust appears, clean it and apply a rust-inhibiting paint.
- **Storage:** When not in use, disassemble the gazebo and store all components in the provided carrying bag in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mildew.
- **Component Check:** Before each use, check all frame connectors, leg locks, stakes, and cords for wear or damage. Replace any damaged parts immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or wobbles.	Insufficient anchoring; uneven ground; loose leg locks.	Ensure all leg weight bags are filled and attached. Use all stakes and tension cords. Verify leg locks are fully engaged. Relocate to a more level surface if necessary.
Rainwater pools on the roof.	Insufficient tension in roof fabric; heavy rainfall.	Regularly push up on the underside of the roof to clear water. If rain is heavy, disassemble the gazebo to prevent damage.
Frame difficult to expand/collapse.	Uneven pressure during operation; dirt in joints.	Ensure two people operate the frame, applying even pressure. Clean joints and apply a silicone-based lubricant if necessary.
Fabric tears or rips.	Excessive force; sharp objects; prolonged exposure to harsh weather.	Handle fabric carefully. Avoid contact with sharp objects. Do not use in strong winds. Small tears may be repaired with a fabric repair kit.

SPECIFICATIONS

Feature	Detail
Brand	VOUNOT
Model Number	3294107041892
Product Dimensions (L x W x H)	300cm x 300cm x 250cm (118"L x 118"W x 98"H)
Floor Area	9 Square Meters
Item Weight	Approximately 10 kg (22 pounds)
Frame Material	Coated Steel
Cover Material	100% Polyester with PA coating (160g/m ²)
Color	Cream White
Water Resistance Level	Not Water Resistant (as per product specifications)
UV Protection	Yes
Assembly Required	Yes

DISASSEMBLY AND STORAGE

To disassemble and store your gazebo:

- Remove Anchoring:** Detach all tension cords, remove stakes, and empty/remove leg weight bags.
- Retract Legs:** Retract each leg to its shortest position, ensuring locking pins are disengaged.
- Remove Roof Cover:** Carefully remove the roof cover from the frame. Fold the cover neatly.
- Collapse Frame:** With two people, gently push the frame inwards from opposite sides until it is fully collapsed. Ensure all locking mechanisms disengage smoothly.
- Clean and Dry:** Clean all components as per the Maintenance section. Ensure the roof cover and frame are

completely dry before storage to prevent mildew and rust.

6. **Pack Away:** Place all components into the carrying bag. Store the bag in a cool, dry place.

WARRANTY INFORMATION


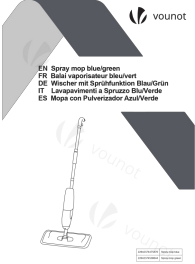

Specific warranty details are not provided in the product information. Please refer to your purchase documentation or contact the retailer for warranty terms and conditions.

CUSTOMER SUPPORT

For further assistance or inquiries, please contact VOUNOT customer support through the retailer's platform or the official VOUNOT website, if available.

© 2025 VOUNOT. All rights reserved.

Related Documents - 3294107041892

	<p>Vounot 3x3m Gazebo with Sides: Assembly and Safety Guide</p> <p>Comprehensive assembly instructions, safety guidelines, and maintenance tips for the Vounot 3x3m Gazebo with Sides. Learn how to safely set up and care for your garden tent.</p>
	<p>Vounot Spray Mop: Assembly, Parts, and Usage Guide</p> <p>Comprehensive guide for the Vounot spray mop, detailing parts, assembly steps, usage instructions, and recommended floor types. Includes model numbers and compliance information.</p>
	<p>Vounot Retractable Manual Awning 2.0M User Manual</p> <p>This document provides instructions and safety information for the Vounot Retractable Manual Awning 2.0M. It covers installation, maintenance, and usage guidelines in multiple languages.</p>



[Vounot Cat House with Cat-Ear Door Assembly Instructions](#)

Step-by-step assembly guide for the Vounot Cat House with Cat-Ear Door, including safety precautions, parts list, and hardware details. Available in Grey and Wood finishes.