

Lenovo lenovo 130s-11igm

Lenovo HD Laptop User Manual

Model: lenovo 130s-11igm

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Lenovo HD Laptop, model lenovo 130s-11igm. Please read this guide thoroughly to ensure proper use and to maximize the performance and longevity of your device.

1. SETUP

1.1 Unpacking and Initial Inspection

Carefully remove your laptop from its packaging. Verify that all components are present and undamaged. The package should include the laptop and its power adapter.



Image: The Lenovo HD Laptop, open and ready for use.

1.2 Connecting to Power

Connect the power adapter to the laptop's charging port and then plug it into a power outlet. It is recommended to fully charge the battery before initial use.

1.3 First Power On and Windows Setup

Press the power button to turn on the laptop. Follow the on-screen instructions to complete the Windows 10 setup process. This includes selecting your region, language, and setting up a user account.

1.4 Exiting Windows 10 S Mode (Optional)

Your laptop comes with Windows 10 in S Mode, which enhances security and performance by exclusively using apps from the Microsoft Store. If you need to install apps from outside the Microsoft Store, you can switch out of S Mode. This change is irreversible.

1. Go to **Settings > Update & Security > Activation**.
2. In the "Switch to Windows 10 Home" or "Switch to Windows 10 Pro" section, select **Go to the Store**.
3. On the "Switch out of S Mode" (or similar) page that appears in the Microsoft Store, click the **Get** button.
4. Confirm your choice.

2. OPERATING YOUR LAPTOP

2.1 Keyboard and Touchpad

The laptop features a QWERTY keyboard and a spill-resistant touchpad. Use the touchpad for navigation and gestures. Refer to Windows settings for customizing touchpad sensitivity and gestures.



Image: Close-up of the laptop's keyboard and touchpad.

2.2 Connecting External Devices

Your laptop is equipped with various ports for connecting peripherals:

- **USB Ports:** Connect USB devices such as external hard drives, mice, or keyboards.
- **HDMI Port:** Connect to an external monitor or TV for a larger display.
- **Audio Jack:** Connect headphones or external speakers.



Image: Side view of the laptop highlighting the available ports.

2.3 Wireless Connectivity

The laptop supports Wi-Fi (802.11bgn) and Bluetooth 1.0 for wireless connections. To connect to a Wi-Fi network, click the network icon in the taskbar and select your desired network. For Bluetooth devices, go to **Settings > Devices > Bluetooth & other devices** to pair.

3. MAINTENANCE

3.1 Software Updates

Regularly update your Windows operating system and drivers to ensure optimal performance and security. Go to **Settings > Update & Security > Windows Update** to check for updates.

3.2 Cleaning Your Laptop

Use a soft, lint-free cloth to clean the screen and exterior surfaces. For stubborn smudges, dampen the cloth slightly with water or a screen-safe cleaner. Avoid harsh chemicals. Use compressed air to clear dust from keyboard keys and vents.

3.3 Battery Care

To prolong battery life, avoid extreme temperatures. For long-term storage, charge the battery to about 50-60% and store the laptop in a cool, dry place.

4. TROUBLESHOOTING

4.1 Laptop Not Powering On

- Ensure the power adapter is securely connected to both the laptop and a working power outlet.
- Check if the power outlet is functional by plugging in another device.
- If the battery is completely drained, it may take a few minutes of charging before the laptop can power on.

4.2 Slow Performance

- Close unnecessary applications running in the background.
- Check for and install any pending Windows updates.
- Run a disk cleanup to free up storage space.
- Consider exiting S Mode if you require more flexibility with software, but be aware this is irreversible.

4.3 Wi-Fi Connectivity Issues

- Ensure Wi-Fi is enabled on your laptop.
- Restart your router and modem.
- Forget the network and reconnect.
- Update your wireless network drivers.

5. SPECIFICATIONS

Feature	Detail
Brand	Lenovo
Model Name	Lenovo Ideapad
Model Number	lenovo 130s-11igm
Screen Size	11.6 Inches
Display Type	HD LED, Anti-glare
Native Resolution	1366 x 768 pixels
Processor	Intel Celeron N4000 (1.1 GHz, 2 Cores)
RAM Memory	4 GB DDR4

Feature	Detail
Hard Disk Size	64 GB eMMC
Operating System	Windows 10 Home in S Mode
Graphics Coprocessor	Intel UHD Graphics 620
Connectivity	HDMI, USB (Total 3), Bluetooth 1.0, 802.11bgn Wi-Fi
Webcam	2 Megapixel Front Camera
Battery	Lithium Ion, 45 Watt Hours
Item Weight	2.5 Pounds
Optical Drive	No Optical Drive
Special Feature	Anti Glare Coating

6. WARRANTY INFORMATION

This Lenovo HD Laptop comes with a **1 Year Limited Warranty**. For detailed terms and conditions, please refer to the warranty card included with your product or visit the official Lenovo support website.

7. CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please visit the official Lenovo support website or contact their customer service. You can find contact information and resources at support.lenovo.com.

Please have your model number (lenovo 130s-11igm) and serial number ready when contacting support.