

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [JOYACCESS](#) /
- › [JOYACCESS Wireless Keyboard and Mouse Combo User Manual](#)

JOYACCESS X-JK4BFR

JOYACCESS Wireless Keyboard and Mouse Combo User Manual

Model: X-JK4BFR
Brand: JOYACCESS

PRODUCT OVERVIEW

The JOYACCESS Wireless Keyboard and Mouse Combo provides a reliable 2.4 GHz wireless connection, rechargeable batteries, and an ergonomic, silent design for enhanced productivity and comfort. This set is ideal for use with PCs and laptops.



Image: The JOYACCESS wireless keyboard and mouse combo, featuring a full-size AZERTY keyboard, a sleek mouse, and a compact USB nano receiver.

SETUP GUIDE

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- Wireless Keyboard
- Wireless Mouse
- USB Nano Receiver
- USB Charging Cable

2. Connecting the USB Nano Receiver

The keyboard and mouse share a single USB nano receiver. This receiver enables the 2.4 GHz wireless connection.

1. Locate the USB nano receiver. It is typically stored in the battery compartment of the mouse for safe keeping.
2. Insert the USB nano receiver into an available USB port on your computer (PC, laptop, desktop, or smart TV).
3. The system should automatically detect and install the necessary drivers. No manual driver installation is usually required.



Image: The USB Nano Receiver, which is stored inside the mouse for convenience and portability.

3. Charging the Devices

Both the keyboard and mouse are equipped with built-in 500 mAh Li-ion rechargeable batteries. It is recommended to fully charge them before first use.

1. Connect the provided USB charging cable to the charging port on the keyboard (Micro-USB port, usually on the top edge).
2. Connect the other end of the USB charging cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. Repeat the process for the mouse (Mini-USB port, usually on the front edge).
4. A charging indicator light (red) will illuminate during charging and typically turn off or change color (green) when fully charged.
5. A full charge provides over 120 days of working autonomy.



RECHARGEABLE CLAVIER ET SOURIS

Batteries Rechargeables Écologiques



Le clavier et la souris sont dotés de batteries 500 mAh intégrées avec une autonomie de plus de 90 jours.

90 Jours



Image: The keyboard and mouse being charged simultaneously using USB cables, highlighting their rechargeable battery feature.



Image: Close-up of the keyboard's top edge showing the Micro-USB charging port and indicator lights for Num Lock, Caps Lock, Power, and Charging.


Keyboard Operation

The keyboard features an AZERTY layout with a full numeric keypad and multimedia function keys.

- **Silent Scissor Mechanism Keys:** The keys are designed with a scissor mechanism for comfortable, responsive, and silent typing. The key travel is approximately 3mm, reducing noise significantly.
- **Ergonomic Design:** The keyboard's angle provides wrist support for extended use.
- **Function Keys (F1-F12):** These keys often have secondary multimedia functions (e.g., volume control, media playback). Use the 'Fn' key in combination with the F-keys to access these functions if they are not primary.
- **Indicator Lights:** The keyboard includes indicators for Num Lock, Caps Lock, Power, and Charging status.

CONFORTABLE FRAPPE SILENCIEUSE

La course de chaque touche est de 3 mm seulement pour une expérience plus silencieuse et éviter le claquement des touches.

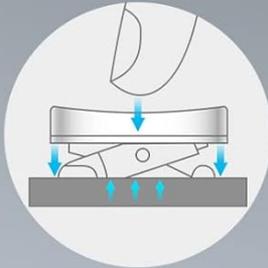

Mécanisme intérieur
avec ciseaux croisés



Image: A close-up view of the keyboard keys, illustrating the internal scissor mechanism that ensures quiet and comfortable typing.



FRAPPE MOINS BRUYANTE ET CLIC SILENCIEUX



Touches du clavier à profil bas et souris souple pour réduire considérablement le bruit des clics pour une utilisation plus confortable.

Image: Hands typing on the keyboard, emphasizing the quiet operation and soft clicks of the keys and mouse for a peaceful work environment.

Mouse Operation

The wireless mouse offers adjustable DPI settings and silent clicks.

- **Adjustable DPI:** The mouse features 5 adjustable DPI levels (800/1200/1600/2000/2400). Press the DPI button (usually located behind the scroll wheel) to cycle through the sensitivity settings. This allows you to customize pointer speed for different tasks, such as general work, gaming, or large screen navigation.
- **Silent Clicks:** The left and right mouse buttons are designed for silent operation, providing a quiet user experience.
- **Power Saving Mode:** Both the keyboard and mouse enter a sleep mode after 20 seconds of inactivity to conserve battery life. To wake them up, simply click a mouse button or press any key on the keyboard.



Image: The wireless mouse, highlighting its 5 adjustable DPI levels and silent click buttons for versatile and quiet use.

MAINTENANCE

Cleaning

- To clean the keyboard and mouse, use a soft, lint-free cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaning solution.
- Avoid using harsh chemicals, aerosols, or abrasive cleaners, as these can damage the surfaces.
- Do not immerse the devices in water or any liquid.

Battery Care

- Recharge the keyboard and mouse when the battery indicator light signals low power or when performance degrades.
- A full charge typically takes 2-3 hours.
- While the devices have a long standby time (approx. 60 days) and working autonomy (over 120 days), regular

charging when needed will prolong battery life.

- Avoid completely draining the battery frequently, as this can reduce its overall lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard/Mouse not responding	Low battery; USB receiver not properly connected; Interference; Device in sleep mode.	Charge the devices. Ensure the USB receiver is firmly plugged into a working USB port. Try a different USB port. Move closer to the receiver. Click a mouse button or press any key to wake from sleep mode.
Lagging or intermittent connection	Distance from receiver; Interference from other wireless devices; Low battery.	Reduce the distance between the devices and the receiver. Move other 2.4 GHz wireless devices away. Recharge the devices.
Mouse pointer erratic or not moving smoothly	Dirty optical sensor; Unsuitable surface; Low battery.	Clean the optical sensor on the bottom of the mouse. Use the mouse on a clean, non-reflective, opaque surface or a mouse pad. Recharge the mouse.
Keyboard keys not typing correctly	Low battery; Software issue; Physical obstruction.	Recharge the keyboard. Restart your computer. Check for any debris under the keys.

SPECIFICATIONS

Brand: JOYACCESS

Model: X-JK4BFR

Connectivity: 2.4 GHz Wireless (via USB Nano Receiver)

Keyboard Layout: AZERTY (French)

Keyboard Type: Full-size, Ergonomic, Scissor-switch keys, Silent

Mouse DPI Levels: 800 / 1200 / 1600 / 2000 / 2400 (Adjustable)

Mouse Type: Optical, Silent Click

Battery Type: Built-in 500 mAh Li-ion rechargeable batteries (for both keyboard and mouse)

Charging Time: Approximately 2-3 hours

Working Autonomy: Over 120 days (per full charge)

Standby Time: Approximately 60 days

Compatibility: Windows XP, Vista, 7, 8, 10; Mac OS; PC, Laptop, Desktop, Smart TV

Dimensions (Keyboard): Approximately 17.0 in (43.3 cm) x 5.5 in (14 cm)

Dimensions (Mouse): Approximately 4.5 in (11.4 cm) x 2.4 in (6.1 cm)



Image: The keyboard and mouse displayed with their approximate dimensions, illustrating their compact and ultra-thin design.

WARRANTY AND SUPPORT

JOYACCESS is committed to providing high-quality products and customer satisfaction. If you encounter any issues or have questions regarding your JOYACCESS Wireless Keyboard and Mouse Combo, please do not hesitate to contact our customer service team.

Customer Support: For assistance, please contact us via Amazon email. Our customer service team is available 24 hours a day to provide a satisfactory solution.

While specific warranty terms are not detailed here, JOYACCESS aims to resolve any product-related concerns promptly and effectively.

