

Secura SFP-50DS-A

Secura French Press Coffee Maker

Model: SFP-50DS-A | Capacity: 50oz (1.5 Litre)

Brand: Secura

INTRODUCTION

Thank you for choosing the Secura French Press Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The Secura French Press is crafted from durable 304-grade stainless steel with double-wall insulation to keep your beverages hot for longer. It features a 3-layered filter structure for a smooth, full-bodied brew and includes two extra screens for extended use.

SAFETY INFORMATION

- Always handle with care, especially when filled with hot liquids.
- Do not use on a stovetop or in a microwave.
- Keep out of reach of children.
- Ensure the lid and plunger assembly are securely in place before pouring.
- Avoid overfilling to prevent spills.

PARTS LIST

Your Secura French Press Coffee Maker includes the following components:

- Stainless Steel Carafe (50oz / 1.5 Litre)
- Plunger Assembly with 3-Layered Filter
- Lid with integrated pour spout and arrow indicator
- 2 x Extra Stainless Steel Filter Screens



Figure 1: Exploded view illustrating the double-wall insulation and filter components.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash:** Before first use, wash all parts in warm, soapy water, rinse thoroughly, and dry completely.
3. **Assemble Plunger:** Ensure the 3-layered filter is securely attached to the plunger rod.

OPERATING INSTRUCTIONS

Making Coffee

1. **Preheat (Optional):** Pour a small amount of boiling water into the carafe, swirl, and discard. This helps maintain coffee temperature.
2. **Add Coffee Grounds:** Add 1 rounded tablespoon of coarse ground coffee per cup (approximately 10g per 180ml/6oz of water). For a 50oz French press, this would be about 8-9 tablespoons.

3. **Add Hot Water:** Pour hot (not boiling) water over the coffee grounds. Ensure all grounds are saturated.
4. **Stir:** Gently stir the coffee and water with a non-abrasive utensil.
5. **Place Lid:** Place the plunger assembly on top of the carafe. Turn the lid so the arrow indicator is away from the pour spout to seal and retain heat during brewing. Do not press the plunger down yet.
6. **Brew:** Allow to brew for 3-5 minutes, depending on desired strength.
7. **Press:** Slowly and steadily press the plunger down. Apply gentle, even pressure. Do not force the plunger.
8. **Serve:** Turn the lid so the arrow indicator aligns with the pour spout. Pour and enjoy your freshly brewed coffee.



Figure 2: Step-by-step guide for brewing coffee.

Lid Operation

The lid features an arrow indicator for controlling the pour spout:

- **Open:** Align the arrow with the pour spout for serving.
- **Close:** Turn the arrow away from the pour spout to keep the contents warm during brewing or when not in use.

Point the arrow to the spout while pouring



Turn the arrow away from the spout while brewing



Figure 3: Lid positions for pouring and heat retention.

Official Product Video: How to Use

Your browser does not support the video tag.

Video 1: A detailed demonstration on how to use the Secura French Press Coffee Maker for optimal brewing results.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your French press.

- **After Each Use:** Discard coffee grounds. Rinse all parts with warm water.
- **Hand Washing:** For a thorough clean, disassemble the filter structure from the plunger. Wash all parts with warm, soapy water using a soft sponge or brush. Rinse thoroughly and dry completely.
- **Dishwasher Safe:** All parts of the Secura French Press are dishwasher safe. Place on the top rack for best results.
- **Replacing Filter Screens:** The French press comes with two extra filter screens. Replace the screen when you notice coffee grounds passing through the filter or if the screen becomes worn. To replace, unscrew the filter assembly, remove the old screen, and insert a new one.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee grounds in cup	Coffee grounds too fine; filter screen worn or improperly assembled.	Use coarser grounds. Check filter assembly for proper fit. Replace filter screen if worn.
Plunger difficult to press	Coffee grounds too fine or too much coffee.	Use coarser grounds. Reduce the amount of coffee.
Coffee not hot enough	Water not hot enough; carafe not preheated.	Use water just off the boil (around 200°F/93°C). Preheat the carafe before adding coffee and water.

SPECIFICATIONS

- **Model Name:** 50oz french press
- **Item Model Number:** SFP-50DS-A
- **Capacity:** 50oz / 1500ml
- **Material:** 304 Grade (18/8) Stainless Steel
- **Construction:** Double-Wall Insulated
- **Color:** Silver
- **Product Dimensions:** 4.61"D x 7.6"W x 9.49"H
- **Special Feature:** Dishwasher Safe
- **Operation Mode:** Manual

CAPACITY: 1500ML / 50 oz



Figure 4: Product dimensions and filter components.

WARRANTY AND SUPPORT

Your Secura French Press Coffee Maker is covered by the manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions.

For product support, questions, or to purchase replacement parts, please visit the official Secura website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.