

[Manuals.plus](#) /

› [ArtCreativity](#) /

› ArtCreativity Bubble Lawn Mower User Manual (Model AC-588Parent)

ArtCreativity AC-588Parent

ArtCreativity Bubble Lawn Mower User Manual

Model: AC-588Parent

INTRODUCTION

Thank you for choosing the ArtCreativity Bubble Lawn Mower. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your new toy. Please read all instructions carefully before use and retain this manual for future reference.



Image: The ArtCreativity Bubble Lawn Mower, showcasing its vibrant blue, green, and orange colors. It is accompanied by bubble solution bottles and bubble wands, presented in a festive setting.

What's Included

Verify that all components are present in the package:

- 1 x Bubble Mower Unit
- 1 x Handle Assembly
- 1 x Bubble Solution Bottle (additional bottles may be included depending on package)
- 3 x Bubble Wands



POUR BUBBLE SOLUTION INTO RESERVOIR

Image: Visual representation of the ArtCreativity Bubble Lawn Mower and a bubble solution bottle, with key dimensions indicated for reference.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the mower unit.
2. Using a small screwdriver, open the battery compartment cover.
3. Insert 3 x AA batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

2. Handle Assembly

1. Align the bottom ends of the handle assembly with the designated slots on the main mower unit.
2. Push firmly until the handle clicks securely into place.

3. Wheel Assembly

1. Attach the wheels to the axles on the mower unit.
2. Ensure each wheel is securely fastened.



Image: A detailed view of the mower's components, including the bubble spinner, wheels, and the battery compartment, emphasizing its design for continuous bubble fun and ease of use.

OPERATING INSTRUCTIONS

1. Filling with Bubble Solution

1. Locate the bubble solution reservoir at the front of the mower unit.
2. Carefully pour the bubble solution into the reservoir until it reaches the fill line. Do not overfill.



Image: A hand demonstrates pouring bubble solution into the designated reservoir at the front of the bubble lawn mower.

2. Turning On/Off

1. Press the power button located on the top of the mower unit to activate the bubble blowing mechanism.
2. To turn off, press the power button again.

3. Usage

- Push the mower across a flat surface. The wheels will generate realistic gear sounds.
- The bubble spinner will rotate, creating a continuous stream of bubbles.
- For optimal bubble production, ensure the reservoir has sufficient solution.



Image: A child actively pushes the bubble lawn mower on a grassy area, demonstrating its use and the bubbles it produces.



Image: Another view of a child enjoying the bubble lawn mower, showing the trail of bubbles created as they push it across the grass.

Your browser does not support the video tag.

Video: An official product video from ArtCreativity showcasing the bubble lawn mower in action, with children pushing it and bubbles being produced.

MAINTENANCE

- **Cleaning:** Wipe the mower with a dry cloth after each use. Do not submerge the electronic components in water.
- **Storage:** Detach the handle for compact storage. Store the mower in a cool, dry place away from direct sunlight.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
No bubbles are being produced.	Check if the bubble solution reservoir is filled. Ensure batteries are correctly installed and not depleted.
Mower is not turning on.	Verify that the batteries are new and correctly inserted. Ensure the power button is pressed firmly.
Wheels are not making sound.	Ensure the mower is being pushed on a flat surface. Check for any obstructions in the wheel mechanism.

SPECIFICATIONS

- **Brand:** ArtCreativity
- **Model Number:** AC-588Parent
- **Material:** Durable Plastic
- **Dimensions (L x W x H):** 12"L x 10.5"W x 18"H
- **Power Source:** 3 x AA Batteries (not included)
- **Age Recommendation:** 36 months to 1200 months (3 to 100 years)
- **Features:** Bubble blowing, realistic gear sounds

SAFETY INFORMATION

- Adult supervision is recommended during play.
- Keep bubble solution away from eyes and mouth. In case of contact, rinse thoroughly with water.
- Do not use the toy near stairs, pools, or other hazards.
- Ensure all parts are securely assembled before allowing children to play.

WARRANTY AND SUPPORT

ArtCreativity offers a satisfaction guarantee. If you are not satisfied with your purchase, please contact ArtCreativity customer support for assistance. Contact information can typically be found on the product packaging or the official ArtCreativity website. For further assistance, please visit the [ArtCreativity Store on Amazon](#).

© 2026 ArtCreativity. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07RJYZHN1>

More documents and user manuals: <https://manuals.plus/>