

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [JOYACCESS](#) /

> [JOYACCESS Rechargeable Wireless Keyboard User Manual - Model B07RK2RZ4B](#)

## JOYACCESS B07RK2RZ4B

# JOYACCESS Rechargeable Wireless Keyboard User Manual

Model: B07RK2RZ4B

## 1. INTRODUCTION

---

This manual provides essential instructions for the setup, operation, and maintenance of your JOYACCESS Rechargeable Wireless Slim and Full-Sized Cordless Keyboard. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

The JOYACCESS wireless keyboard is engineered for a precise typing feel and quiet keystrokes, enhancing productivity without disturbance. Its slim, full-sized design incorporates low-profile scissor-structure keys for responsive and quiet operation, ideal for various environments.

## 2. WHAT'S IN THE BOX

---

- JOYACCESS Rechargeable Wireless Keyboard
- USB Nano Receiver
- USB-A to USB-C Charging Cable
- User Manual

## 3. SETUP

---

### 3.1 Initial Charging

Before first use, fully charge the keyboard. Connect the provided USB-A to USB-C charging cable to the keyboard's USB-C port and a power source (e.g., computer USB port, USB wall adapter).

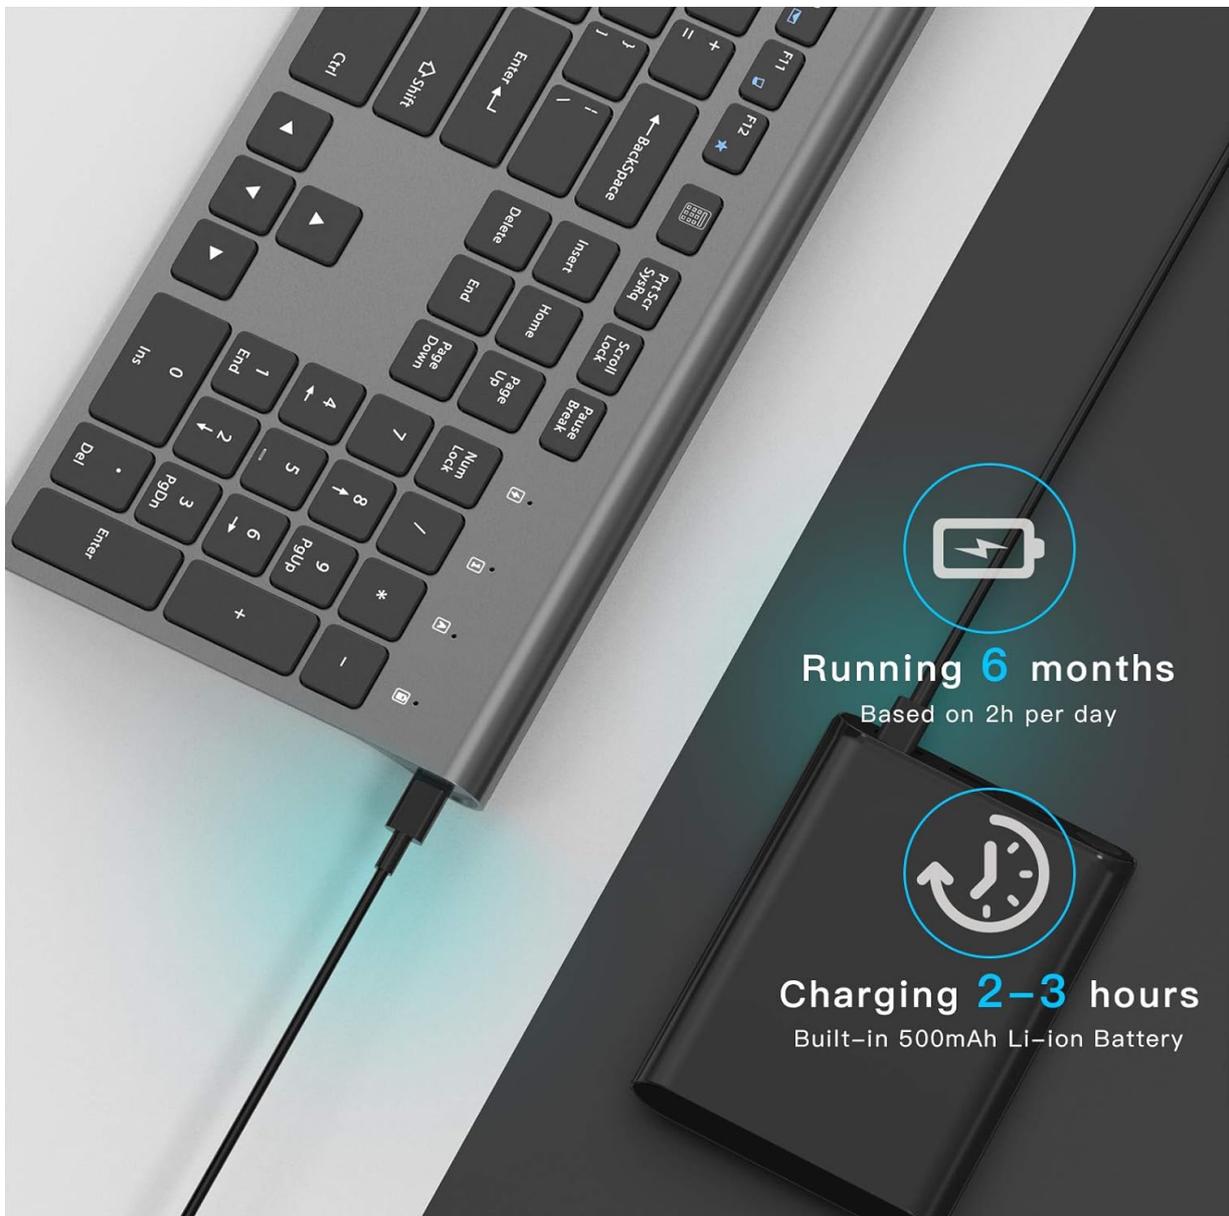


Image: Keyboard connected to a USB-C charging cable. A red indicator light signifies charging, which turns green upon full charge.

The charging indicator light will be red while charging and turn green when fully charged. A full charge typically takes 2-3 hours and provides up to 10 days of use (based on 2 hours per day usage).

### 3.2 Connecting the Keyboard

1. Locate the USB Nano Receiver. It is typically stored in a compartment on the underside of the keyboard or mouse.



Image: The JOYACCESS wireless keyboard shown with its compact USB Nano Receiver.

2. Plug the USB Nano Receiver into an available USB-A port on your computer (Laptop, Desktop, PC, Surface, Smart TV, Windows device).
3. Turn on the keyboard using the ON/OFF switch located on the back edge of the keyboard.

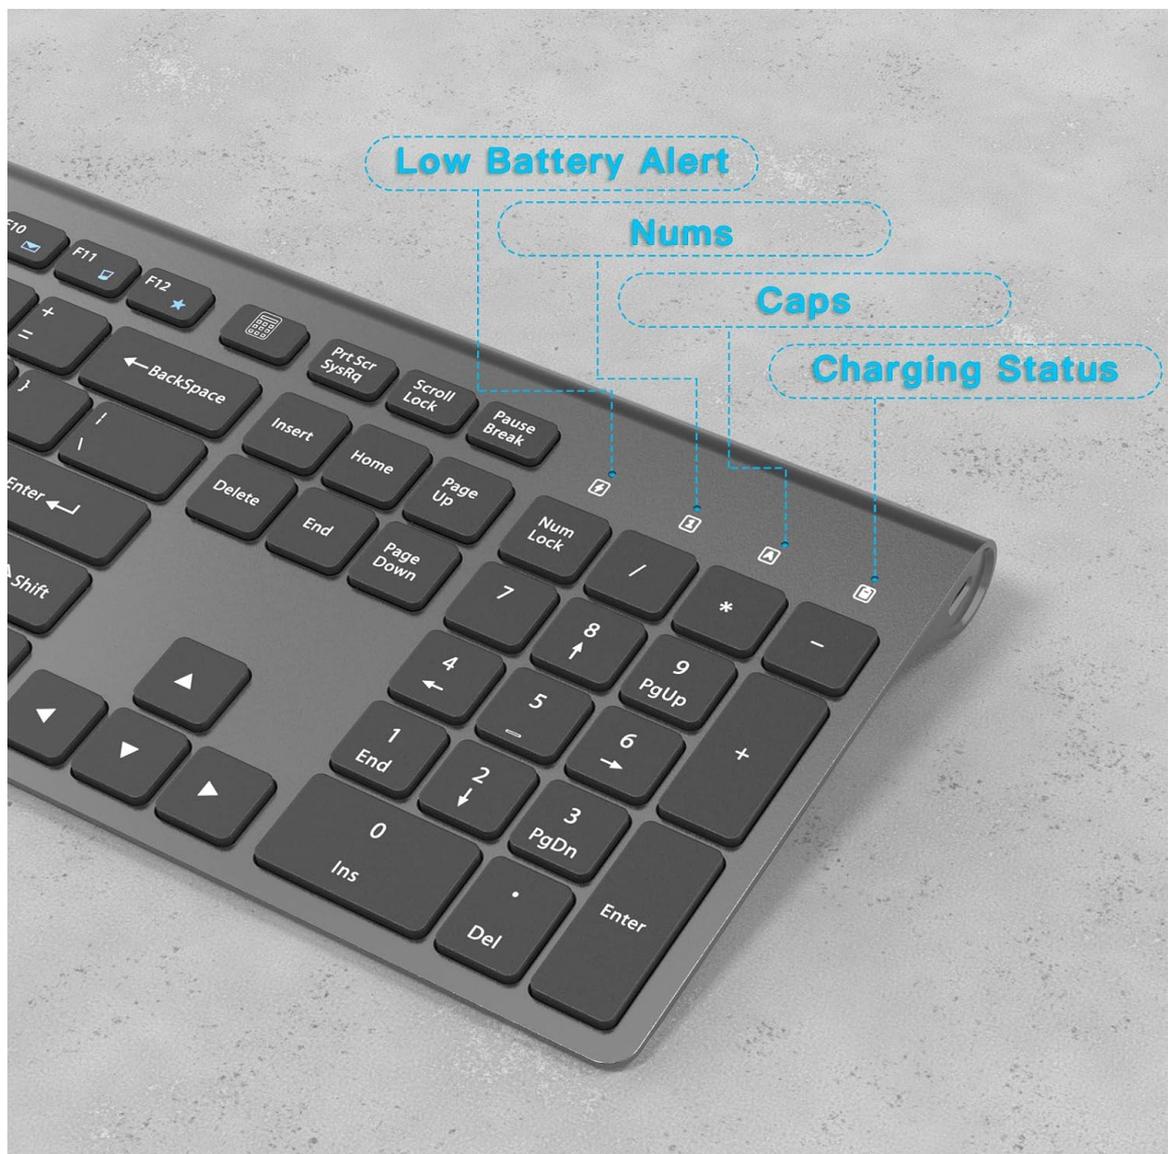


Image: Detailed view of the keyboard's top right corner, highlighting the indicator lights for various statuses.

4. The keyboard is plug-and-play and should be recognized by your device automatically without requiring additional software or drivers.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 General Use

Once connected, the keyboard provides stable data transmission within a range of 33 feet (10 meters). Simply begin typing as you would with any standard keyboard.

### 4.2 Responsive Keystrokes

The keyboard features high-quality, precise scissor switch technology, offering a quiet and responsive typing experience. This design minimizes typing noise, making it suitable for quiet environments.



Image: A keycap lifted to reveal the underlying scissor switch mechanism, which contributes to the keyboard's responsive and quiet operation.

### 4.3 Power Saving Mode

To conserve battery life, the keyboard enters a sleep state after 8 minutes of inactivity. To reactivate the keyboard, simply click any key.

## 5. MAINTENANCE

---

### 5.1 Cleaning

To clean the keyboard, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the finish.

## 5.2 Storage

When not in use for extended periods, turn off the keyboard using the ON/OFF switch and store it in a dry, cool place. The USB Nano Receiver can be stored in its designated compartment to prevent loss.

## 6. TROUBLESHOOTING

- **Keyboard not responding:** Ensure the keyboard is turned on and fully charged. Verify the USB Nano Receiver is securely plugged into your device. Try plugging the receiver into a different USB port.
- **Lag or intermittent connection:** Ensure the keyboard is within the 33-foot operating range of the receiver. Avoid obstructions between the keyboard and receiver. Check for potential interference from other wireless devices.
- **Charging issues:** Ensure the charging cable is properly connected to both the keyboard and the power source. Try using a different USB port or charging cable.

## 7. SPECIFICATIONS

Feature	Detail
Product Dimensions	17"L x 5.5"W x 0.8"H (43.18 cm x 13.97 cm x 2.03 cm)
Item Weight	1.1 pounds (0.5 kg)
Manufacturer	EASY-TECH
Batteries	1 Lithium Polymer battery required (Built-in 500mAh Li-ion Battery)
Compatible Devices	Laptop, Desktop, PC, Surface, Smart TV, Windows
Connectivity Technology	USB (2.4G Wireless via USB Nano Receiver)
Keyboard Description	Slim and Full-Sized, Rechargeable Wireless, Comfortable Space-Saving, Ergonomic, Low Profile Scissor Structure
Recommended Uses	Office
Special Feature	Ergonomic
Color	Black and Gray
Material	Plastic
Battery Life	Up to 10 days on full charge (2h/day usage)
Charging Time	2-3 hours
Wireless Range	Up to 33 feet (10 meters)

---

## 8. ADDITIONAL INFORMATION

---

### 8.1 Product Overview Video

Your browser does not support the video tag.

Video: A review of the JOYACCESS Rechargeable Wireless Keyboard, highlighting its features and performance.

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official JOYACCESS website. Keep your purchase receipt for warranty claims.