

Brondi BR-10276032

Brondi Bravo Bright Cordless Phone User Manual

Model: BR-10276032

1. INTRODUCTION

This manual provides instructions for the Brondi Bravo Bright Cordless Phone, model BR-10276032. Please read this manual carefully before using your new phone to ensure proper operation and to take full advantage of its features.

2. PACKAGE CONTENTS

- Cordless Handset
- Charging Base
- Power Adapter

Ensure all items are present before proceeding with setup.

3. SETUP

3.1. Connecting the Base Unit

1. **Connect the Power Adapter:** Plug the small end of the power adapter into the DC IN jack on the back of the charging base. Plug the other end into a standard electrical outlet.
2. **Connect to Telephone Line:** If applicable, plug one end of the telephone line cord into the LINE jack on the back of the charging base. Plug the other end into your telephone wall jack.

3.2. Installing the Handset Battery

1. **Open Battery Compartment:** Gently slide the battery compartment cover on the back of the handset downwards to remove it.
2. **Insert Battery:** Insert the rechargeable battery pack into the compartment, ensuring the polarity (+/-) matches the diagram inside.
3. **Close Battery Compartment:** Replace the battery compartment cover by sliding it upwards until it clicks into place.

3.3. Charging the Handset

Place the handset on the charging base. The charging indicator on the handset or base should illuminate, indicating that the handset is charging. For optimal battery performance, charge the handset for at least 12-15 hours before initial use, even if the display indicates a full charge.



Image: The Brondi Bravo Bright cordless phone handset resting in its red and white charging base, viewed from the side. The handset is red with white buttons and a display screen.

4. OPERATING INSTRUCTIONS

4.1. Making a Call

1. **Lift Handset:** Pick up the handset from the charging base or press the **TALK** button.

2. **Dial Number:** Enter the desired phone number using the keypad.
3. **Press TALK:** If you lifted the handset first, the call will connect. If you dialed first, press the **TALK** button to initiate the call.

4.2. Answering a Call

When the phone rings, lift the handset or press the **TALK** button to answer.

4.3. Ending a Call

Place the handset back on the charging base or press the **END** button.

4.4. Using Speakerphone (Vivavoce)

During a call, press the **Speakerphone** button (often indicated by a speaker icon) to activate the hands-free function. Press it again to switch back to the handset earpiece.

4.5. Amplified Listening (Boost Function)

The phone features a boost button for amplified listening. During a call, press the **BOOST** button to increase the earpiece volume for clearer audio, especially useful for users with hearing difficulties.

4.6. ECO DECT GAP Functionality

This phone uses ECO DECT GAP technology, allowing up to 5 additional handsets to be registered to the same base unit. Refer to the specific instructions for registering additional handsets if you purchase them separately.

4.7. High Ringer and Listening Volume

The Brondi Bravo Bright is designed with high ringer and listening volumes to ensure calls are not missed and conversations are clear.

5. MAINTENANCE

5.1. Cleaning the Phone

Wipe the phone and charging base with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the phone is disconnected from power before cleaning.

5.2. Battery Care

Use only the specified rechargeable battery pack. Do not dispose of batteries in fire. Recycle or dispose of batteries according to local regulations.

5.3. Storage

If storing the phone for an extended period, remove the battery from the handset. Store in a cool, dry place away from direct sunlight.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone line cord is disconnected.	Ensure the telephone line cord is securely plugged into the base unit and the wall jack.

Problem	Possible Cause	Solution
Handset not charging	Handset not properly seated on the base; power adapter disconnected.	Ensure the handset is correctly placed on the charging base. Check that the power adapter is securely connected to the base and the electrical outlet.
Poor call quality / Static	Interference from other electronic devices; handset too far from base.	Move the base unit away from other electronic devices (e.g., Wi-Fi routers, microwaves). Move closer to the base unit.
No display on handset	Battery is depleted or not installed correctly.	Charge the handset for several hours. Check battery installation and ensure it is making proper contact.

7. SPECIFICATIONS

Model Number: BR-10276032

Brand: Brondi

Color: Red

Form Factor: Cordless

Item Weight: 400 g

Package Dimensions: 19.2 x 13 x 7 cm

Wireless Communication Technology: Cellular (DECT)

Special Features: Wireless, Speakerphone, Boost Function, ECO DECT GAP

Power Source: Battery Powered

Compatible Devices: Base station, up to 5 cordless handsets

Material: Acrylonitrile Butadiene Styrene (ABS)

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Brondi website or contact their customer service. Keep your purchase receipt as proof of purchase.

Online Support: www.brondi.it

9. PRODUCT VIDEOS

Brondi Lemure Cordless Phone Overview

Your browser does not support the video tag.

Video: An overview of the Brondi Lemure Cordless Phone. While not the exact Bravo Bright model, this video from the seller demonstrates general features and design common to Brondi cordless phones, such as the handset and base unit. It highlights the sleek design and basic functionality.

