

Accutime SNC4055AZ

Accutime SEGA Sonic the Hedgehog Educational Learning Touchscreen Smart Watch (Model: SNC4055AZ) Instruction Manual

Model: SNC4055AZ | Brand: Accutime

1. INTRODUCTION

This manual provides comprehensive instructions for the Accutime SEGA Sonic the Hedgehog Educational Learning Touchscreen Smart Watch, Model SNC4055AZ. It covers setup, operation, features, and maintenance to ensure optimal use and longevity of your device.

This smart watch is designed for children, offering a range of interactive and educational features without internet connectivity, ensuring a safe and engaging experience.

2. WHAT'S IN THE BOX

- Accutime SEGA Sonic the Hedgehog Educational Learning Touchscreen Smart Watch
- USB Charging Cable
- Instruction Manual

3. INITIAL SETUP

3.1 Charging the Device

Before initial use, fully charge the smart watch. Connect the provided USB charging cable to the watch and a compatible USB power source. It is recommended to charge the battery for at least 2 to 3 hours prior to first use for best performance. The screen may appear blank while charging.



Figure 1: Smart Watch connected to USB charging cable.

3.2 Powering On/Off

To power on the watch, press and hold the Power/Menu button located on the side of the device until the screen illuminates. To power off, press and hold the same button until the power-off option appears, then confirm.

4. OPERATING INSTRUCTIONS

4.1 Navigating the Touchscreen

The smart watch features an HD touchscreen display. Swipe left or right on the screen to navigate through different menus and applications. Tap on an icon to select it.

4.2 Changing Watch Faces

To change the watch face, touch and hold the current watch face on the screen. Swipe left or right to browse through the available Sonic the Hedgehog themed watch faces. Tap to select your preferred design.



Figure 2: Various Sonic the Hedgehog watch faces.

4.3 Using the Camera

The watch includes a selfie camera for taking pictures. Navigate to the camera icon on the menu and tap to open. Follow on-screen prompts to take photos or record videos. Photos and videos can be viewed in the photo album viewer.



Figure 3: Camera interface on the smart watch.

4.4 Playing Games

The watch comes with various pre-loaded games for entertainment. Select the 'Games' icon from the menu to access the game selection. Choose a game by tapping its icon.

4.5 Pedometer Function

The built-in pedometer tracks steps. Access the pedometer feature from the menu to view daily step counts.

4.6 Alarm Clock and Calculator

Set alarms for reminders or daily routines using the 'Alarm Clock' function. The 'Calculator' application provides basic arithmetic functions.

4.7 Voice Recorder and Video Player

Utilize the voice recorder to capture audio. The video player allows playback of recorded videos.

5. KEY FEATURES

- **Educational and Interactive:** Designed to engage children with learning games and interactive features.
- **Touchscreen Display:** Easy-to-read 40mm HD touchscreen for intuitive navigation.
- **Built-in Camera:** Allows children to take selfies and record videos.
- **Voice Recorder:** For capturing audio notes.
- **Pedometer:** Tracks physical activity by counting steps.
- **Learning Games:** Includes various pre-loaded games for entertainment and cognitive development.
- **Time Management Tools:** Features an alarm clock and calculator.
- **Customizable Watch Faces:** Multiple Sonic the Hedgehog themed watch faces to choose from.
- **Child Safety Focused:** Does not connect to the internet, Wi-Fi, or Bluetooth, and lacks calling/texting capabilities, ensuring a secure environment.
- **Rechargeable Battery:** Long-lasting Lithium Polymer battery (400 mAh capacity) with USB charging.

Your browser does not support the video tag.

Video 1: Overview of iTime Kids Interactive Smartwatch features by Accutime Watch Corp.

6. SPECIFICATIONS

Model Number	SNC4055AZ
Brand	Accutime
Product Dimensions	5 x 5 x 0.7 inches
Item Weight	1.4 ounces
Screen Size	40 Millimeters
Operating System	Accutime OS
Memory Storage Capacity	16 GB
Battery Type	1 Lithium Polymer battery (included)
Battery Capacity	400 mAh
Special Features	Alarm Clock, Audio Recording, Camera, Pedometer, Time Display
Connectivity	None (No Wi-Fi, Bluetooth, or cellular connectivity for child safety)
Water Resistance	Splash-proof (Not waterproof; do not swim, bathe, or shower with the watch)

7. CARE AND MAINTENANCE

- **Cleaning:** Wipe the watch with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Water Exposure:** The watch is splash-proof but not waterproof. Avoid submerging it in water, swimming, bathing, or showering while wearing it.
- **Battery Care:** Do not charge for more than 3 hours or overnight, as this may weaken the battery life.
- **Storage:** Store the watch in a cool, dry place when not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch does not turn on.	Low or no battery charge.	Charge the watch for at least 2-3 hours using the provided USB cable.
Screen is blank during charging.	Normal operation.	This is expected behavior. The screen will illuminate once charging is complete or the watch is powered on.
Touchscreen is unresponsive.	Temporary software glitch or low battery.	Restart the watch by holding the Power/Menu button. Ensure the battery is sufficiently charged.
Cannot save photos/videos.	Insufficient internal memory.	Delete old files from the photo album viewer to free up space. The watch has 16GB internal storage.

9. WARRANTY AND SUPPORT

This Accutime Smart Watch comes with a one-year warranty from Accutime Watch Corp. For warranty claims or technical support, please refer to the contact information provided in the warranty card included in your product packaging or visit the official Accutime website.

For additional information or to explore other products, visit the [Accutime Store on Amazon](#).