



Manuals.plus /

› Prolux /

› Prolux 2.0 Cordless Backpack Vacuum Cleaner User Manual

Prolux 19prolux2.0c

Prolux 2.0 Cordless Battery Bagless Backpack Vacuum Cleaner User Manual

Model: 19prolux2.0c

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Prolux 2.0 Cordless Battery Bagless Backpack Vacuum Cleaner. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

The Prolux 2.0 is designed for versatile cleaning, offering cordless convenience and dual HEPA shield filtration for improved air quality. Its lightweight and portable design allows for comfortable use in various environments.

2. SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read and follow all instructions carefully.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not use without dust bin and/or filters in place.
- Turn off all controls before unplugging.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

3. PACKAGE CONTENTS

Carefully unpack your Prolux 2.0 Backpack Vacuum and ensure all components are present. Refer to the image below for a visual guide to the included items.

POWERFUL TOOLS

Prepare for every cleaning scenario
with our versatile tool kit:



- ① 2.0 Backpack Vacuum
- ② Metal Extension Wand
- ③ Extension Hose
- ④ Two 30-minute Run Time Batteries
- ⑤ Upholstery Tool

- ⑥ Prolux RD 285 Nozzle
- ⑦ Two Hour Battery Charger
- ⑧ Crevice tool
- ⑨ Duster Brush

Image: All components of the Prolux 2.0 Backpack Vacuum Cleaner, including the main unit, two batteries, charger, hose, telescopic wand, and various cleaning tools.

- Prolux 2.0 Backpack Vacuum Unit
- Flexible Extension Hose
- Adjustable Telescopic Wand

- Prolux RD 285 Floor Tool
- Upholstery Tool
- Crevice Tool
- Duster Brush
- 2 x Lithium-Ion Batteries
- Battery Charger

4. ASSEMBLY

Follow these steps to assemble your Prolux 2.0 Backpack Vacuum:

1. **Attach the Hose:** Connect the flexible extension hose to the vacuum unit's intake port. Ensure it clicks securely into place.
2. **Connect the Wand:** Insert the adjustable telescopic wand into the other end of the hose. Adjust the wand length by pressing the release button and extending or retracting the sections.
3. **Attach a Cleaning Tool:** Select the appropriate cleaning tool (e.g., floor tool, upholstery tool) and attach it firmly to the end of the telescopic wand.
4. **Adjust Harness:** Put on the backpack unit. Adjust the shoulder straps and waist belt for a comfortable and secure fit. The harness is designed for ergonomic comfort and mobility.



Image: Close-up of the adjustable shoulder straps and waist belt on the Prolux 2.0 backpack vacuum, highlighting the ergonomic design for user comfort.

5. BATTERY CHARGING AND INSTALLATION

Your Prolux 2.0 comes with two rechargeable Lithium-Ion batteries. Ensure batteries are fully charged before first use.

5.1 Charging the Battery

1. Connect the battery charger to a standard electrical outlet.
2. Insert a battery into the charger. The indicator light on the charger will show the charging status.
3. A full charge takes approximately 4 hours. Do not overcharge the battery.

5.2 Installing the Battery

1. Locate the battery compartment on the vacuum unit.
2. Slide a charged battery into the compartment until it clicks into place. Ensure it is firmly seated.
3. To remove the battery, press the release button (if present) and slide the battery out.

6. OPERATION

Once assembled and with a charged battery installed, your Prolux 2.0 is ready for use.

6.1 Powering On/Off

Locate the power switch on the vacuum unit. Press it to turn the vacuum on. Press it again to turn the vacuum off.

6.2 Using Cleaning Tools

Select the appropriate tool for the surface you are cleaning:

- **Floor Tool:** Ideal for carpets, hard floors, and large surface areas.
- **Upholstery Tool:** Designed for cleaning furniture, curtains, and car interiors.
- **Crevice Tool:** Perfect for reaching tight spaces, corners, and edges.
- **Duster Brush:** Use for delicate surfaces, vents, and dusting.



Image: A person using the Prolux 2.0 backpack vacuum to clean stairs, demonstrating its portability and ease of use in multi-level environments.



Image: The upholstery tool attached to the Prolux 2.0 vacuum, effectively removing pet hair from a sofa, showcasing its specialized cleaning capabilities.

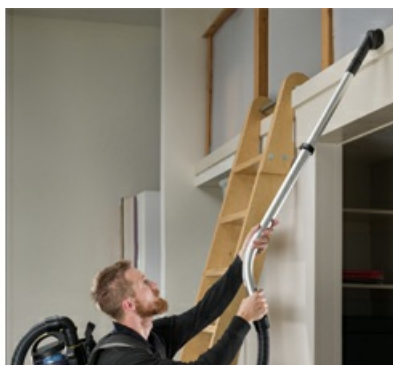


Image: A user extending the vacuum wand to clean a high, hard-to-reach area, illustrating the versatility of the Prolux 2.0 for comprehensive cleaning.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

7.1 Emptying the Dust Bin

The Prolux 2.0 features a bagless design with a clear dust bin. Empty the dust bin regularly, preferably after each use, or when the debris level reaches the 'MAX' line.

1. Ensure the vacuum is turned off and the battery is removed.
2. Detach the dust bin from the main unit according to the instructions on the vacuum.
3. Empty the contents into a waste receptacle.
4. Reattach the dust bin securely to the vacuum unit.

7.2 Cleaning the Filters

The Prolux 2.0 utilizes Dual HEPA Shield Filtration. Clean the filters periodically to maintain suction power and filtration efficiency.



Image: A close-up view of the HEPA filter within the Prolux 2.0 vacuum's dust collection system, illustrating its design for capturing fine particles.

1. Ensure the vacuum is turned off and the battery is removed.
2. Remove the dust bin and access the HEPA filters.
3. Gently tap the filters over a trash can to remove loose dust. Do not wash HEPA filters unless explicitly stated by the manufacturer.
4. Inspect filters for damage and replace if necessary.
5. Reinstall the filters and dust bin.

8. TROUBLESHOOTING

If you encounter issues with your Prolux 2.0, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged or improperly installed; Power switch off	Charge battery fully and ensure it is correctly installed; Press power switch firmly.
Low suction power	Dust bin full; Clogged filter; Blockage in hose or attachment	Empty dust bin; Clean or replace filters; Check hose and attachments for obstructions.
Battery not charging	Charger not plugged in; Damaged battery or charger	Ensure charger is securely plugged into a working outlet; Contact customer support for battery/charger replacement if damaged.
Unusual noise during operation	Blockage in fan or motor area; Damaged component	Turn off and remove battery, check for obstructions; If noise persists, contact customer support.

If the problem persists after attempting these solutions, please contact Prolux customer support.

9. SPECIFICATIONS

The following table outlines the technical specifications for the Prolux 2.0 Cordless Battery Bagless Backpack Vacuum Cleaner.

Feature	Specification
Brand	Prolux
Model Name	2.0 Battery
Item Model Number	19prolux2.0c
Power Source	Battery Powered
Battery Type	Rechargeable Lithium-Ion (2 required)
Battery Life	Up to 60 minutes per battery
Charging Time	Approximately 4 hours
Wattage	218 watts
Amperage	8.64 Amps
Motor Horsepower	0.3 Horsepower
Filter Type	HEPA Filter (Dual HEPA Shield Filtration)
Vacuum Collection Technology	Cyclonic, Bagless
Capacity	0.64 Liters
Hose Length	6 Feet
Cleaning Path Width	13 Inches
Item Weight	14 pounds (with battery)
Product Dimensions	14"L x 22"W x 11"H
Noise Level	75 Decibels
Recommended Uses	Home and Office Vacuum Cleaning
Surface Recommendation	Multi-Surface

10. WARRANTY AND SUPPORT

Prolux stands behind its products. For warranty information, parts, and labor, please refer to the official Prolux website or contact customer support directly. Prolux offers support to help you with product setup and operation. For product assistance, contact Prolux customer service. They can provide guidance and troubleshooting support.