

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RM-YD037 Replacement Remote Control User Manual for Sony Bravia TVs

ECONTROLLY RM-YD037

ECONTROLLY RM-YD037 Replacement Remote Control User Manual

For Sony Bravia TV Models

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY RM-YD037 replacement remote control. It is designed to be compatible with various Sony Bravia TV models, offering a direct replacement for your original remote without the need for complex programming. Please read this manual carefully to ensure proper use and to maximize your viewing experience.

Compatible Sony Bravia TV Models include: KDL-46NX800, KDL-52NX800, KDL40NX700, KDL40NX800, KDL46NX700, KDL46NX800, KDL52NX800, KDL60NX800, KDL60NX801, RMYD037, KDL-40NX700, KDL-40NX800, KDL-46NX700, KDL-46NX800, KDL-52NX800, KDL-60NX800, KDL-40NX700, KDL-46NX700, KDL-60NX801.

SETUP

1. Battery Installation

The RM-YD037 remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Note: This remote control does not require any programming. Once batteries are installed, it is ready for use with compatible Sony Bravia TVs.

OPERATING INSTRUCTIONS

The ECONTROLLY RM-YD037 remote control provides full functionality for your compatible Sony Bravia TV. Below is a guide to its main buttons and their functions.





An image showing the full layout of the ECONTROLLY RM-YD037 replacement remote control. The remote is black with various gray, green, blue, and orange buttons, clearly labeled for TV functions, input selection, navigation, number entry, volume, and channel control.

Button Functions:

- **TV POWER (Green Button):** Turns the TV on or off.
- **INPUT:** Selects the input source (e.g., HDMI 1, HDMI 2, Video).
- **LIGHT:** Activates the backlight on the remote (if available).
- **WIDE:** Adjusts the screen aspect ratio.
- **CC/SUBTITLE:** Toggles Closed Captions or subtitles on/off.
- **POWER (Green Button, below CC/SUBTITLE):** Controls power for connected devices like DVD/AMP/STB.
- **DVD, AMP, STB, TV:** Source selection buttons for connected devices.
- **THEATER:** Activates Theater mode.
- **PLAY/PAUSE, STOP, PREV, NEXT, FAST FORWARD, REWIND:** Media playback controls.
- **i-MANUAL:** Accesses the TV's on-screen instruction manual.
- **SCENE:** Selects scene modes for picture and sound.
- **BD/DVD TOP MENU / MENU:** Navigates Blu-ray/DVD menus.
- **INTERNET WIDGETS / VIDEO / QRIOCITY:** Accesses smart TV features and online content.
- **FAVORITES:** Accesses favorite channels or content.
- **GUIDE:** Displays the electronic program guide.
- **DISPLAY:** Shows on-screen information about the current program or input.
- **OPTIONS:** Accesses context-sensitive options menus.
- **RETURN:** Goes back to the previous screen or menu.
- **HOME / MENU (Blue Button):** Accesses the TV's main home screen or menu.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and select items.
- **Colored Buttons (Yellow, Blue, Red, Green):** Functionality varies depending on the TV menu or application.
- **Number Pad (0-9, ENT):** For direct channel entry or numerical input.
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes the channel.
- **MUTING:** Mutes or unmutes the TV audio.
- **JUMP:** Switches between the current and previously viewed channel.

MAINTENANCE

Battery Replacement:

If the remote control's performance degrades or it stops responding, replace both AAA batteries with new ones. Always

replace both batteries at the same time and ensure they are of the same type (alkaline recommended).

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Storage:

When not in use for extended periods, it is advisable to remove the batteries to prevent leakage, which can damage the remote control.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are correctly installed with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Point the remote directly at the TV's sensor.
- **Some buttons not working:**
 - This may indicate low battery power. Replace the batteries.
 - Ensure the remote is clean and there is no debris obstructing the buttons.
- **Remote range is reduced:**
 - Replace the batteries.
 - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.

SPECIFICATIONS

Feature	Detail
Model Number	RM-YD037 (RCEC-RM-YD037)
Brand	ECONTROLLY
Compatible Devices	Sony Bravia Televisions (specific models listed in Introduction)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

For warranty information or technical support regarding your ECONTROLLY RM-YD037 replacement remote control, please refer to the documentation provided with your purchase or contact the seller directly. As this is a replacement product, specific warranty terms may vary.

Manufacturer: ECONTROLLY Factory

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question