



Manuals.plus /

› Samsung /

› Samsung Galaxy A50 SM-A505G Smartphone User Manual

## Samsung SM-A505G

# Samsung Galaxy A50 SM-A505G Smartphone User Manual

Model: SM-A505G

## INTRODUCTION

---

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Samsung Galaxy A50 SM-A505G smartphone. Please read this guide thoroughly to ensure optimal performance and longevity of your device. This device is a renewed product, which has been inspected and tested to be fully functional.

## SETUP

---

### 1. What's in the Box

Upon unboxing, verify that the following items are included:

- Samsung Galaxy A50 SM-A505G Smartphone
- Adapter (Charger)

*Note: Other accessories such as a USB cable, headphones, or SIM ejector tool may be sold separately or vary by region.*

### 2. Device Layout



Image: Front view of the Samsung Galaxy A50 SM-A505G, showcasing the display and front camera.



Image: Side view of the Samsung Galaxy A50 SM-A505G, showing the power and volume buttons.



Image: Rear view of the Samsung Galaxy A50 SM-A505G, highlighting the triple camera module and Samsung branding.

### **3. Inserting SIM Card and MicroSD Card**

1. Locate the SIM card tray on the side of the device.
2. Insert the SIM ejector tool (if available) into the small hole on the tray to open it.
3. Place your Nano-SIM card(s) and/or microSD card into the tray with the gold contacts facing down. Ensure they are correctly seated.
4. Gently push the tray back into the slot until it clicks into place.

## 4. Charging the Battery

Before first use, fully charge the device battery. Use only the provided adapter or a Samsung-approved charger and USB Type-C cable.

1. Connect the USB Type-C cable to the charging port at the bottom of the phone.
2. Connect the other end of the cable to the power adapter.
3. Plug the adapter into a power outlet.
4. The charging indicator will appear on the screen.

## 5. Powering On and Initial Setup

1. Press and hold the Power button (located on the right side) until the Samsung logo appears.
2. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account setup, and security settings.

# OPERATING YOUR DEVICE

---

## 1. Basic Navigation

The Samsung Galaxy A50 operates on Android 9.0 (Pie) and features a 6.4-inch FHD+ Super AMOLED touchscreen display.

- **Touch Gestures:** Tap, double-tap, swipe, pinch-to-zoom are standard gestures for interacting with the screen.
- **Home Screen:** Access apps, widgets, and notifications. Swipe down from the top for the notification panel and quick settings.
- **Navigation Bar:** Use the on-screen buttons (Recents, Home, Back) or gesture navigation (if enabled) to move between apps and screens.

## 2. Camera Usage

The device features a versatile camera system:

- **Rear Camera:** Triple lens setup (25MP main, 5MP depth, 8MP ultra-wide) with F1.7, F2.2, and F2.2 apertures respectively, and flash.
- **Front Camera:** 25MP with F2.0 aperture.

To open the camera, tap the Camera app icon. Select modes like Photo, Video, Live Focus, or Pro mode. Tap the shutter button to capture images or start/stop video recording.

## 3. Connectivity

Your Galaxy A50 supports various connectivity options:

- **Wi-Fi:** Connect to wireless networks for internet access. Go to *Settings > Connections > Wi-Fi*
- **Mobile Data (4G LTE):** Utilize your cellular network for internet. Ensure your SIM card is active and mobile data is enabled in *Settings > Connections > Data usage*.
- **Bluetooth:** Pair with wireless headphones, speakers, or other Bluetooth devices. Go to *Settings > Connections > Bluetooth*.
- **GPS:** For location services and navigation.

## 4. Battery Management

The device is equipped with a 4000mAh lithium-ion battery with 15W fast charging support.

- To optimize battery life, adjust screen brightness, disable unused connectivity features (Wi-Fi, Bluetooth, GPS), and close background apps.
- Enable Power saving modes in *Settings > Device care > Battery* for extended usage.

## 5. Storage Management

The device comes with 64GB of internal memory, expandable up to 512GB via a microSD card (not included).

- Monitor storage usage in *Settings > Device care > Storage*
- Regularly clear cache, delete unnecessary files, and move large media files to a microSD card to free up internal storage.

# MAINTENANCE

---

## 1. Cleaning Your Device

- Use a soft, lint-free cloth to clean the screen and body of the phone.
- Avoid using harsh chemicals, abrasive materials, or aerosol sprays.
- Do not expose the device to excessive moisture.

## 2. Software Updates

Keep your device's software up to date to ensure optimal performance, security, and access to new features.

- Go to *Settings > Software update* and tap *Download and install*.
- Ensure your device is connected to Wi-Fi and has sufficient battery charge before performing an update.

## 3. Battery Care

- Avoid extreme temperatures, as they can degrade battery performance.
- Do not leave the device charging for extended periods after it has reached 100%.
- For renewed products, the battery life is typically greater than 80% of the original capacity.

# TROUBLESHOOTING

---

If you encounter issues with your device, try the following solutions:

## 1. Device Not Responding

- Press and hold the Power button for more than 7 seconds to restart the device.

## 2. Charging Issues

- Ensure the charger and cable are properly connected and undamaged.
- Try using a different power outlet or a different Samsung-approved charger.
- Clean the charging port gently with a soft, dry brush to remove any debris.

## 3. Network Connectivity Problems

- **Wi-Fi:** Turn Wi-Fi off and on again. Restart your Wi-Fi router. Forget the network and reconnect.
- **Mobile Data:** Ensure mobile data is enabled. Check your SIM card is properly inserted. Contact your network provider to confirm service status.

## 4. Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache and data in *Settings > Apps > [App Name] > Storage*
- Update the app from the Google Play Store.

## 5. Factory Data Reset

If problems persist, you may need to perform a factory data reset. This will erase all data from your device, so ensure you back up important information first.

- Go to *Settings > General management > Reset > Factory data reset*
- Follow the on-screen instructions.

## SPECIFICATIONS

---

Feature	Detail
Model Name	Galaxy A50 (SM-A505G)
Operating System	Android 9.0 (Pie)
Processor	Exynos 9610 Octa Core (2.29 GHz)
RAM	4 GB
Internal Storage	64 GB
Expandable Storage	microSD up to 512 GB (card not included)
Display	6.4-inch FHD+ (2340 x 1080) Super AMOLED
Rear Camera	25MP (F1.7) + 5MP (F2.2) + 8MP (F2.2) with Flash
Front Camera	25MP (F2.0)
Battery Capacity	4000 mAh Lithium-ion
Charging	15W Fast Charging (Type-C)
Connectivity	Wi-Fi, 4G LTE, Bluetooth, GPS
SIM Type	Dual SIM (Nano-SIM)
Dimensions	7 x 4 x 5 inches (Product)
Weight	7 ounces (0.2 Kilograms)

## WARRANTY AND SUPPORT

---

### 1. Amazon Renewed Coverage

As a renewed product, your Samsung Galaxy A50 SM-A505G is covered by the Amazon Renewed program. This includes:

- Products are inspected, undergo full diagnostic tests, thorough cleaning, and refurbished as necessary to be fully functional.
- Your purchase is eligible for Amazon Renewed coverage in conjunction with Amazon's Return Policy and the A-to-z Guarantee.
- All Amazon Renewed refurbished products are fully functional, have generic or original accessories and packaging, with greater than 80% the original battery life.

For specific details regarding your Amazon Renewed warranty and return policy, please refer to the Amazon Renewed program terms and conditions or contact Amazon customer service.

### 2. Technical Support

For technical assistance or further inquiries not covered in this manual, please visit the official Samsung support website or contact their customer service. You may also contact the seller of this renewed product for specific support related to your purchase.



