

[manuals.plus](#) /› [ProfiCook](#) /› [ProfiCook PC-TK 1165 2-in-1 Kettle and Teapot User Manual](#)

## ProfiCook PC-TK 1165

# ProfiCook PC-TK 1165 2-in-1 Kettle and Teapot User Manual

## 1. INTRODUCTION

Thank you for choosing the ProfiCook PC-TK 1165 2-in-1 Kettle and Teapot. This appliance is designed for efficient water boiling and tea preparation, featuring precise temperature control and a durable glass construction. Please read this manual carefully before first use to ensure safe operation and to achieve the best results from your new appliance. Keep this manual in a safe place for future reference.



Image 1.1: The ProfiCook PC-TK 1165 2-in-1 Kettle and Teapot, showcasing its elegant design and functionality for both boiling water and brewing tea.

## 2. SAFETY INSTRUCTIONS

Always observe the following safety precautions when using electrical appliances:

- Read all instructions before use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Place the appliance on a stable, heat-resistant surface, away from edges and heat sources.
- Do not fill above the 'MAX' level or below the 'MIN' level to prevent boiling dry or overflow.
- Always close the lid securely before operating.
- Exercise caution when handling hot water or steam.
- Unplug the appliance from the outlet when not in use and before cleaning.

### 3. PRODUCT COMPONENTS

The ProfiCook PC-TK 1165 consists of the following main components:

- Glass Kettle/Teapot Body: Heat-resistant safety glass with capacity markings.
- Lid: With integrated stainless steel tea filter.
- Stainless Steel Tea Filter: Permanent, removable, and adjustable for tea brewing.
- Handle: Ergonomically designed for safe pouring.
- Control Panel: With temperature settings and real-time temperature display.
- Power Base: 360-degree rotatable base with cord storage.



Image 3.1: Detailed view of the appliance's main parts, including the glass kettle, removable tea filter, lid, and power base.

### 4. SETUP

Before first use, follow these steps:

1. Unpack the appliance and remove all packaging materials.
2. Wipe the exterior of the kettle with a damp cloth.
3. Wash the removable tea filter and lid with warm soapy water, then rinse thoroughly and dry.

4. Fill the kettle with water to the 'MAX' level. Boil the water at 100°C, then discard it. Repeat this process 2-3 times to clean the interior.
5. Place the power base on a flat, stable surface. Ensure the power cord is fully extended and plugged into a grounded electrical outlet.



*Image 4.1: The ProfiCook PC-TK 1165 positioned on a kitchen counter, ready for use.*

## 5. OPERATING INSTRUCTIONS

### 5.1. Boiling Water (Kettle Function)

1. Remove the kettle from the power base.
2. Open the lid and fill the kettle with the desired amount of water, ensuring it is between the 'MIN' (0.2L) and 'MAX' (0.5L) markings.
3. Close the lid securely.
4. Place the kettle back onto the power base.
5. Select the desired temperature (e.g., 100°C for boiling water) using the control panel buttons. The real-time temperature will be displayed.
6. The appliance will automatically switch off once the selected temperature is reached.

### 5.2. Brewing Tea (Teapot Function)

1. Follow steps 1-3 from the 'Boiling Water' section.
2. Open the lid and place your desired amount of loose leaf tea or tea bags into the stainless steel tea filter.
3. Lower the tea filter into the kettle and close the lid securely.
4. Place the kettle back onto the power base.
5. Select the appropriate brewing temperature for your tea type (70°C, 80°C, 90°C, or 100°C).
6. Once the water reaches the set temperature, allow the tea to steep for the recommended time.
7. After steeping, lift the tea filter to remove the tea leaves from the water.

### 5.3. Temperature Control and Keep Warm Function

The appliance offers electronic temperature settings at 70°C, 80°C, 90°C, and 100°C. The real-time temperature is displayed on the handle. After reaching the set temperature, the appliance can maintain the temperature for a period, ensuring your beverage stays warm.



*Image 5.1: The digital temperature display on the handle, indicating the current water temperature.*

# TEE IN PROFIQUALITÄT BEI DIR ZUHAUSE

WARMHALTEFUNKTION

DANK EDLEM  
DESIGN AUCH ALS  
SERVIERKANNE  
GEEIGNET



Image 5.2: The tea filter in a raised position, allowing brewed tea to remain warm without over-steeping.



Image 5.3: Illustrates the user-friendly design, including the 360-degree base for left or right-handed use and the heat-resistant safety glass.

## 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your appliance.

### 6.1. Daily Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the tea filter and lid. Wash them with warm, soapy water and a soft sponge. Rinse thoroughly and dry.
3. Wipe the interior of the glass kettle with a soft, damp cloth.
4. Wipe the exterior of the kettle and the power base with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Ensure all parts are completely dry before reassembling or storing.

### 6.2. Descaling

Limescale buildup can affect performance and taste. Descale your kettle regularly, especially in areas with hard water.

1. Fill the kettle with a mixture of water and white vinegar (1:1 ratio) or a commercial descaling solution according to product instructions.
2. Boil the mixture.
3. Allow the mixture to sit in the kettle for at least 30 minutes, or longer for heavy buildup.
4. Pour out the descaling solution and rinse the kettle thoroughly several times with fresh water.
5. Boil fresh water in the kettle 2-3 times and discard it to remove any residual descaling agent.

## 7. TROUBLESHOOTING

If you encounter issues with your ProfiCook PC-TK 1165, refer to the following table:

Problem	Possible Cause	Solution
Appliance does not turn on.	No power supply; Kettle not properly seated on base.	Check power plug and outlet; Ensure kettle is correctly placed on the power base.
Water does not heat up.	Temperature not selected; Appliance malfunction.	Select a temperature setting; Contact customer support if issue persists.
Water boils over.	Overfilled kettle.	Do not fill above the 'MAX' marking.
Limescale buildup.	Hard water usage.	Descale the kettle as described in Section 6.2.
Leakage from the bottom.	Manufacturing defect or damage.	Discontinue use immediately and contact customer support.

## 8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	ProfiCook
Model Number	501165
Capacity	0.5 Litres
Power	1100 Watts
Voltage	230V
Material	Glass, Stainless Steel, Plastic (BPA-free)
Dimensions (L x W x H)	18 x 11 x 20 cm
Weight	0.95 kg
Temperature Settings	70°C, 80°C, 90°C, 100°C

Feature	Specification
Special Features	2-in-1 Kettle & Teapot, Permanent Stainless Steel Tea Filter, Keep Warm Function, Automatic Shut-off, Boil-dry Protection, Overheat Protection



Image 8.1: Visual representation of the product's key dimensions, weight, and materials.

## 9. WARRANTY AND CUSTOMER SUPPORT

ProfiCook products are manufactured with quality and durability in mind. This appliance comes with a 2-year availability for spare parts.

For warranty claims, technical assistance, or any questions regarding your ProfiCook PC-TK 1165, please contact ProfiCook customer support. Refer to the official ProfiCook website or your purchase documentation for contact details.