

[manuals.plus](#) /› [Panasonic](#) /› [Panasonic KX-TU110 Mobile Phone User Manual](#)

## Panasonic KX-TU110

# Panasonic KX-TU110 Mobile Phone User Manual

Model: KX-TU110

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Panasonic KX-TU110 mobile phone. Please read it thoroughly before using the device and keep it for future reference. The Panasonic KX-TU110 is designed for ease of use, featuring a large color screen, clear buttons, and essential functions for communication.

## 2. SAFETY INFORMATION

- **Battery Safety:** Use only approved batteries and chargers. Do not short-circuit, puncture, or expose the battery to extreme temperatures.
- **Hearing Protection:** Avoid prolonged listening at high volume levels to prevent hearing damage.
- **Driving Safety:** Always prioritize driving. Use hands-free accessories if making calls while driving and adhere to local laws and regulations.
- **Medical Devices:** Maintain a safe distance between the phone and medical devices like pacemakers. Consult a physician or the medical device manufacturer for specific guidelines.
- **Disposal:** Dispose of the phone and battery responsibly according to local regulations. Do not dispose of with household waste.

## 3. PACKAGE CONTENTS

Ensure all items are present in the package:

- Panasonic KX-TU110 Mobile Phone
- Battery (Lithium-polymer)
- AC Adapter/Charger
- User Manual (this document)

## 4. SETUP

### 4.1. Inserting the SIM Card(s) and Battery

The Panasonic KX-TU110 supports Dual SIM functionality, allowing you to use two Mini SIM cards simultaneously.

1. **Remove the Back Cover:** Gently pry open the back cover of the phone using the notch provided, usually at the bottom edge.
2. **Insert SIM Card(s):** Locate the SIM card slots. Carefully slide your Mini SIM card(s) into the designated slots with the gold contacts facing down. Ensure they are securely in place.
3. **Insert Battery:** Place the Lithium-polymer battery into its compartment, aligning the contacts with those on the phone.
4. **Replace Back Cover:** Align the back cover and press firmly until it clicks into place all around the edges.

## 4.2. Charging the Battery

Before initial use, fully charge the phone's battery.

1. Connect the Mini USB end of the charger cable to the charging port on the side of the phone.
2. Plug the AC adapter into a power outlet.
3. The charging indicator on the screen will show the charging status. Once fully charged, disconnect the charger.





**Image:** Side view of the Panasonic KX-TU110 mobile phone, blue, highlighting the volume control buttons and charging port. The Mini USB charging port is visible at the bottom of the side panel.


### 4.3. Powering On/Off

- **To Power On:** Press and hold the **Power/End Call** button (red button) until the screen lights up.
- **To Power Off:** Press and hold the **Power/End Call** button until the power-off options appear, then select 'Power Off'.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Overview of the Phone

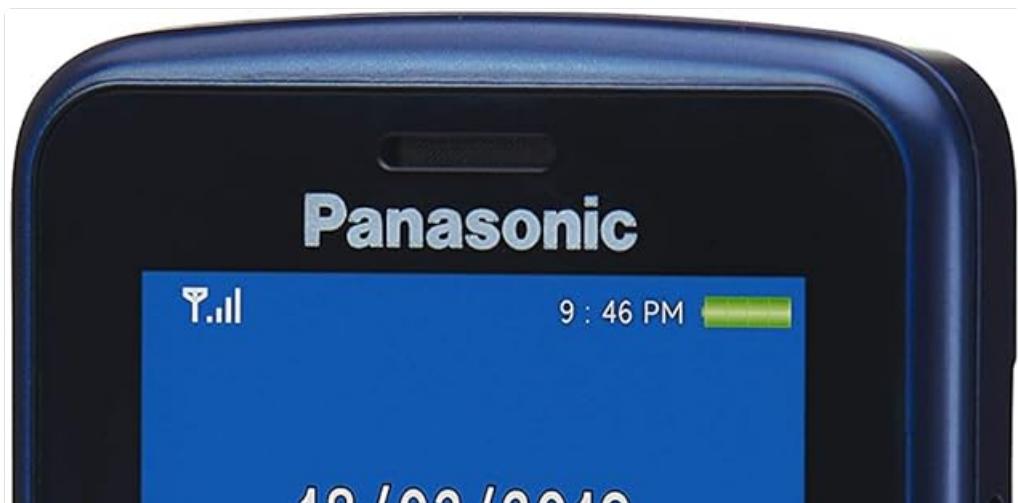



**Image:** Front view of the Panasonic KX-TU110 mobile phone, blue, with the screen displaying date and time, and the large, backlit keypad clearly visible. The screen shows 'Menu' and 'Names' soft keys.





**Image:** Rear view of the Panasonic KX-TU110 mobile phone, blue, featuring the prominent SOS emergency button, a small camera lens, and the speaker grille at the bottom.

## 5.2. Making and Receiving Calls

- **To Make a Call:** Enter the phone number using the keypad and press the **Call** button (green button).
- **To Answer a Call:** Press the **Call** button when the phone rings.
- **To End a Call:** Press the **End Call** button (red button).

## 5.3. Sending and Receiving SMS Messages

- **To Send an SMS:** Go to **Menu > Messages > Write Message**. Enter your message, then select the recipient from your contacts or enter their number.
- **To Read an SMS:** New messages will typically appear as a notification. Go to **Menu > Messages > Inbox** to view received messages.

## 5.4. SOS Priority Call Function

The KX-TU110 features an SOS button for emergencies. You can pre-set up to 5 emergency contacts.

1. **Setting Up SOS Contacts:** Navigate to **Menu > SOS Settings**. Add up to 5 contact numbers.
2. **Activating SOS:** In an emergency, press and hold the **SOS button** on the back of the phone. The phone will automatically call the pre-set emergency contacts in sequence until one answers. Hands-free mode will be activated during these calls.

## 5.5. Volume Control

Adjust the call volume or ringtone volume using the dedicated volume control button located on the side of the phone. Slide it up to increase volume and down to decrease.

## 5.6. Flashlight

The phone includes an integrated LED flashlight.

- **To Turn On/Off:** Press and hold the dedicated flashlight button (if available) or access it via the **Menu**.

## 6. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the phone regularly.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

---

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Phone does not power on	Ensure the battery is charged. Check if the battery is correctly inserted.
Cannot make/receive calls	Check if the SIM card is properly inserted and activated. Ensure you have network coverage.
Poor call quality	Move to an area with better network reception. Check the volume settings.
Battery drains quickly	Reduce screen brightness. Close unused applications. Limit background activities.
SOS button not working	Verify that emergency contacts are correctly set up in the SOS settings.

## 8. SPECIFICATIONS

---

- **Model Name:** KX-TU110
- **Brand:** Panasonic
- **Color:** Blue
- **Product Type:** Monolithic Mobile Phone
- **Operating System:** Proprietary
- **Screen Size:** 1.8 Inches
- **Screen Resolution:** 160 x 128 pixels
- **Cellular Technology:** GSM (Dual Band 900/1800 MHz)
- **Connectivity Technology:** Bluetooth
- **Charging Port:** Mini USB
- **Special Features:** SOS Function, Flashlight, Large Keypad, Dual SIM, Shock Resistant
- **Battery Type:** Lithium-polymer (included)
- **Talk Time:** Up to 5 hours
- **Standby Time:** Up to 225 hours
- **Compatible Devices:** All GSM network providers (Unlocked)

## 9. WARRANTY AND SUPPORT

---

For warranty information, please refer to the warranty card included with your purchase or visit the official Panasonic website for your region. For technical support or service inquiries, please contact Panasonic customer service. Keep your proof of purchase for warranty claims.