

RecPro RPM-2-BLK

RecPro RV Convection Microwave RPM-2-BLK Instruction Manual

Model: RPM-2-BLK

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not heat sealed containers, as they may explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Ensure the appliance is properly grounded.
- Only use utensils suitable for microwave ovens.

2. PRODUCT OVERVIEW

The RecPro RV Convection Microwave RPM-2-BLK is a versatile 1.1 cubic feet, 120V appliance designed for RV use, offering both microwave and convection cooking capabilities. It features a sleek black finish and a user-friendly touch pad control panel with an LED display.

Key Features:

- **1.1 Cubic Feet Capacity:** Ample space for various dishes.
- **120V Power:** Standard power requirement for RVs.
- **Convection Cooking:** Allows for baking and roasting in addition to microwaving.
- **Touch Pad Controls:** Easy-to-use digital interface.
- **4-Digit LED Display:** Clear time and setting indicators.
- **8 Express Cook Options:** Pre-programmed settings for common foods like Popcorn, Potato, Pizza, Beverage, Soup, Dinner Plate, Fresh Vegetable, and Frozen Vegetable.
- **Child Lock Setting:** Enhances safety by preventing unintended operation.

- **Stainless Steel Handle:** Durable and stylish.
- **Tempered Glass Door:** Allows visibility during cooking.



The RecPro RV Convection Microwave RPM-2-BLK, shown installed in an RV kitchen setup. This image highlights the appliance's integrated appearance within a recreational vehicle environment.

3. INSTALLATION


This microwave is designed for cabinet installation. Proper ventilation is crucial for safe and efficient operation. Ensure adequate clearance around the unit as specified in the detailed installation guide (sold separately or available for download from RecPro's website).

Dimensions:

- **External Dimensions (without trim):** 20 1/2" W x 14 1/4" H x 18" D
- **Trim Outer Dimensions:** 24" W x 16 3/4" H
- **Product Dimensions (overall):** 18.5"D x 20.5"W x 14.75"H



RPM-2-BLK RV Convection Black 1.1 cu. ft Microwave Measurements

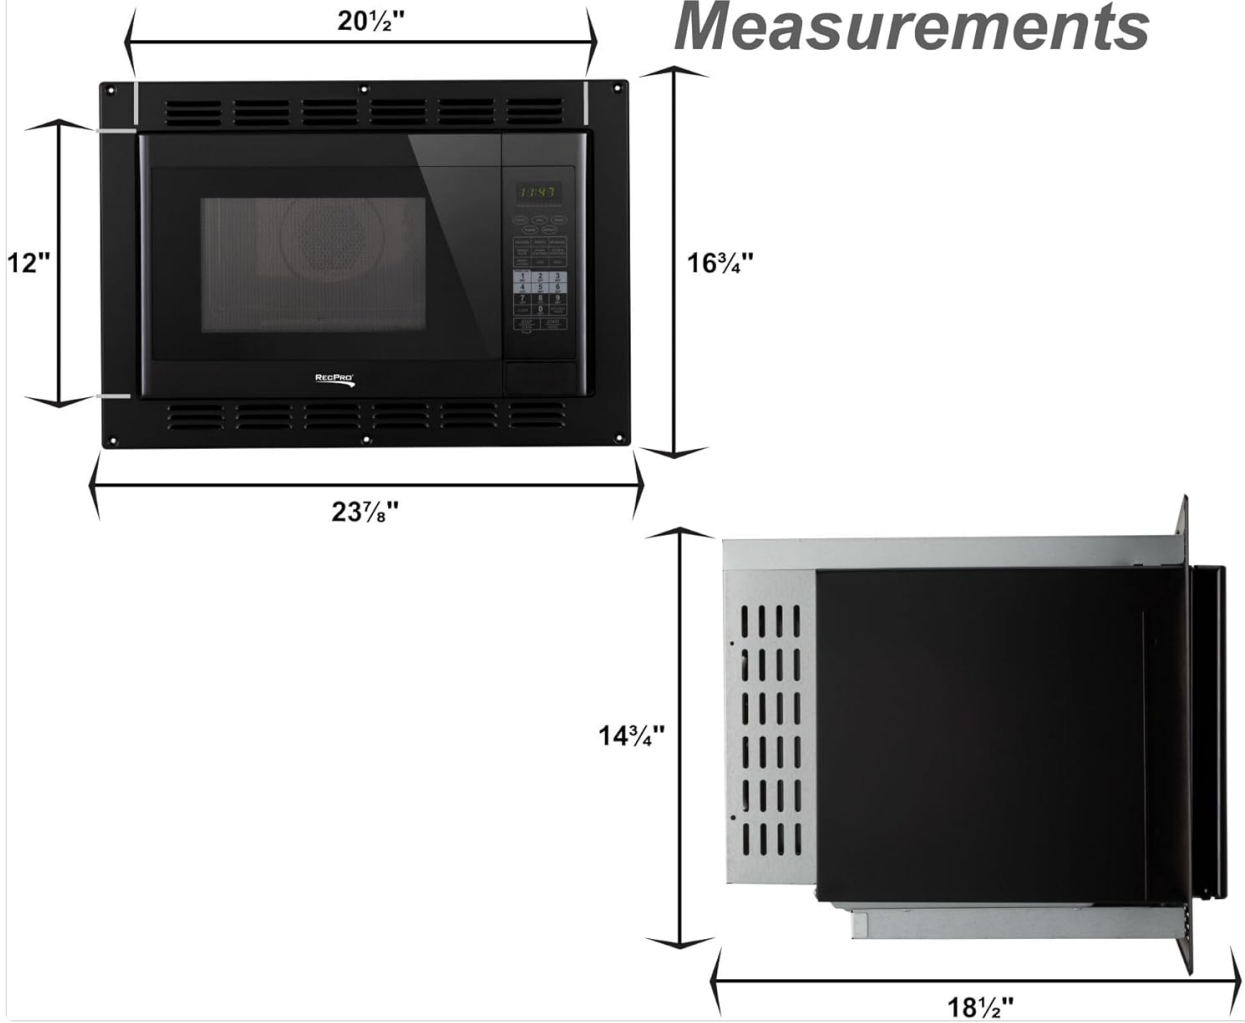

This diagram illustrates the precise measurements of the RecPro RV Convection Microwave, including width, height, and depth, essential for proper installation in an RV cabinet.



A clear front view of the RecPro RV Convection Microwave, showcasing its black finish and control panel. This image provides a visual reference for the appliance's exterior design.

4. OPERATING INSTRUCTIONS

The RecPro RV Convection Microwave features intuitive touch pad controls for various cooking functions.

Control Panel Functions:

- **Power:** Adjust microwave power levels.
- **Cook:** Manual cooking time setting.
- **Timer:** Set a kitchen timer.
- **Cook by Weight:** Automatically cooks based on food weight.
- **Defrost by Weight:** Automatically defrosts based on food weight.
- **Speed Defrost:** Quick defrost function.
- **Express Cook Options:** Dedicated buttons for Popcorn, Potato, Pizza, Beverage, Soup, Dinner Plate, Fresh Vegetable, Frozen Vegetable.
- **Child Lock:** Press and hold the designated button to activate/deactivate.

- **Start/+30 SEC:** Initiates cooking or adds 30 seconds to cooking time.
- **Stop/Clear:** Stops cooking or clears settings.




A detailed view of the microwave's control panel, highlighting the touch pad buttons for various functions including express cook options, power settings, and the digital display.

Using Express Cook Options:

1. Place food in a microwave-safe container inside the oven.
2. Press the desired Express Cook button (e.g., 'Popcorn', 'Pizza').
3. The oven will automatically set the appropriate cooking time and power level.
4. Press 'Start' to begin cooking.

Child Lock Feature:

To activate the Child Lock, press and hold the 'Stop/Clear' button for 3 seconds. The display will show an indicator (e.g., 'LOCK') to confirm activation. To deactivate, repeat the process.

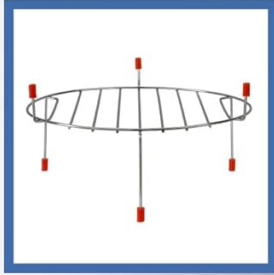

Heat Evenly with
Convection Rack



Ample Oven Capacity
1.1 Cubic Foot



Child Lock
Safety Option

REC PRO[®]

This image displays the interior of the microwave, featuring the convection rack for even heating and an icon representing the child lock safety option, emphasizing its functional design.



An open view of the microwave's interior, showing the glass turntable and the metal convection rack. This illustrates the internal components designed for both microwave and convection cooking.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** Wipe the interior with a damp cloth and mild detergent after each use. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Turntable:** The glass turntable and its support ring can be removed for cleaning in warm, soapy water.
- **Ventilation:** Ensure the ventilation openings are clear of obstructions to prevent overheating.

6. TROUBLESHOOTING

If you encounter issues with your RecPro RV Convection Microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped.	Ensure door is securely closed; Check power connection; Reset circuit breaker or replace fuse.

Problem	Possible Cause	Solution
Food not heating	Incorrect cooking time/power level; Door not closed properly.	Adjust settings; Ensure door is securely closed.
Turntable not rotating	Turntable not properly seated; Obstruction under turntable.	Reposition turntable; Remove any obstructions.
Unusual noise during operation	Food container touching oven walls; Loose parts.	Adjust food container position; Contact customer support if noise persists.

7. SPECIFICATIONS

- **Brand:** RecPro
- **Model:** RPM-2-BLK
- **Capacity:** 1.1 Cubic Feet
- **Power Input:** 120V
- **Wattage:** 1500 watts
- **Color:** Black
- **Installation Type:** Cabinet
- **Controller Type:** Button (Touch Pad)
- **Special Features:** Auto Cook, Child Safety Lock, Defrost, Digital Control, Express Cook
- **Product Dimensions (D x W x H):** 18.5" x 20.5" x 14.75"



A side profile of the RecPro RV Convection Microwave, showing its depth and the ventilation slots along the top edge, crucial for heat dissipation during operation.



The rear view of the RecPro RV Convection Microwave, displaying the power cord connection and additional ventilation. This perspective is important for understanding installation requirements and clearances.

8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official RecPro website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

RecPro Customer Service: Refer to your product packaging or the official RecPro website for the most current contact information.