

Taipow S400

Taipow LED Night Light Instruction Manual

Model: S400

1. INTRODUCTION

Thank you for purchasing the Taipow LED Night Light. This versatile bedside lamp is designed to provide a comfortable and customizable lighting experience for various environments, including baby rooms, kids' rooms, bedrooms, and outdoor settings. Featuring touch activation, remote control, adjustable brightness, and a wide range of colors, this lamp is both functional and aesthetically pleasing. Please read this manual carefully to ensure proper use and maintenance of your device.

2. SAFETY INFORMATION

- Do not disassemble or modify the lamp. Unauthorized modifications may cause damage or injury.
- Keep the lamp away from water and high humidity environments to prevent electrical shock or damage. The lamp is waterproof, but avoid submerging it.
- Use only the provided USB charging cable or a certified equivalent.
- Do not expose the lamp to extreme temperatures or direct sunlight for prolonged periods.
- Keep out of reach of small children when not in use, especially the remote control, to prevent choking hazards.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Taipow LED Night Light (Model S400)
- 1 x USB Charging Cable
- 2 x Remote Controllers (with batteries included)
- 1 x User Manual

If any items are missing or damaged, please contact customer support.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Taipow LED Night Light:



Figure 4.1: Taipow LED Night Light and Remote Controls

- **Lamp Body:** Provides 360° lighting.
- **Touch Sensor (Top):** For manual power on/off and color/brightness changes.
- **USB Charging Port (Base):** For recharging the built-in battery.
- **Power Switch (Base):** Main power toggle.
- **Remote Control:** For comprehensive control of light functions.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the lamp. The built-in 1500mAh rechargeable battery provides up to 25 hours of use at minimum brightness and 8 hours at maximum brightness.

1. Locate the USB charging port on the base of the lamp.
2. Connect the provided USB charging cable to the lamp's port and to a USB power source (e.g., computer, USB wall adapter).
3. The charging indicator light will illuminate (color may vary) during charging and turn off when fully charged.

5.2 Powering On/Off

To power on the lamp, slide the main power switch on the base to the 'ON' position. To turn off, slide the switch to 'OFF'.

6. OPERATING INSTRUCTIONS

6.1 Touch Control



Figure 6.1: Touch Control Area

- **Power On/Off:** Touch and hold the top of the lamp for 3 seconds to turn it on or off.
- **Change Color/Brightness:** Once on, tap the top of the lamp to cycle through colors and brightness levels.

6.2 Remote Control Functions



Figure 6.2: Remote Control

The remote control offers comprehensive command over the lamp's features:

- **ON/OFF:** Power the lamp on or off.
- **Brightness Adjustment:** Use the sun icons (brighter/dimmer) to adjust brightness across 5 levels.
- **Color Selection:** Choose from 13 distinct colors using the color palette buttons.
- **Color Changing Modes:**
 - **FLASH:** Rapidly cycles through colors.
 - **STROBE:** Flashes colors at a moderate pace.
 - **FADE:** Smoothly transitions between colors.
- **Timer Function:** Set the lamp to automatically turn off after 1 hour (1H), 2 hours (2H), 4 hours (4H), or 6 hours (6H).



Figure 6.3: Multi-Color Display Effect

7. MAINTENANCE

7.1 Cleaning

To clean the lamp, gently wipe its surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.

7.2 Battery Care

- Recharge the lamp regularly, even if not in frequent use, to maintain battery health.
- Avoid completely draining the battery before recharging.
- If storing the lamp for an extended period, charge it to about 50% and recharge every few months.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted. Main power switch is off.	Charge the lamp. Ensure the main power switch on the base is in the 'ON' position.
Remote control is not working.	Remote battery is dead. Obstruction between remote and lamp.	Replace the remote control battery. Ensure clear line of sight between remote and lamp.

Problem	Possible Cause	Solution
Lamp brightness is low.	Brightness setting is low. Battery is low.	Increase brightness using touch or remote. Recharge the lamp.
Colors are not changing.	Lamp is in a static color mode.	Use the remote to select a different color or activate a color-changing mode (FLASH, STROBE, FADE).

9. SPECIFICATIONS

Feature	Detail
Model Number	S400
Dimensions (D x W x H)	3.62" x 3.62" x 5.98"
Weight	9.6 ounces (0.27 kg)
Power Source	Battery Powered (1500mAh Lithium Ion)
Input Voltage	DC 5V
Lighting Wattage	Max 1.6W
Light Source Type	LED
Control Method	Remote Control, Touch
Number of Colors	13
Brightness Levels	5
Special Features	Color Changing, Cordless, Dimmable, Rechargeable, Timer, Waterproof
Material	Plastic (Acrylonitrile Butadiene Styrene)

10. WARRANTY AND SUPPORT

Taipow provides a **30-day money-back guarantee** and a **12-month warranty** for this product. If you encounter any issues or have questions regarding your LED Night Light, please do not hesitate to contact our customer support team.

Customer Support:

- Email: support@taipow.com
- Website: www.taipow.com

Please have your purchase details and model number (S400) ready when contacting support.

