

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool Combi Refrigerator W7 821O OX User Manual](#)

## Whirlpool W7 821O OX

# Whirlpool Combi Refrigerator W7 821O OX User Manual

Model: W7 821O OX

### IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your appliance and retain them for future reference. This manual provides essential information for the safe and efficient operation of your refrigerator.

- Ensure the appliance is properly earthed.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

### PRODUCT OVERVIEW

The Whirlpool Combi Refrigerator W7 821O OX is a freestanding appliance designed for efficient food preservation. It features a refrigerator compartment at the top and a freezer compartment at the bottom, equipped with a display on the door for easy control.



Image 1: Front view of the Whirlpool Combi Refrigerator W7 821O OX with the door display visible.



Image 2: Interior view of the refrigerator and freezer compartments, showing shelves, drawers, and door storage.

## SETUP AND INSTALLATION

### Unpacking

Carefully remove all packaging materials, including protective films and tapes. Keep packaging materials out of reach of children. Inspect the appliance for any damage during transit. If damage is found, do not install or operate the refrigerator and contact your retailer.

## Placement

- Place the refrigerator on a firm, level floor.
- Ensure adequate ventilation around the appliance. Maintain a minimum clearance of 5-10 cm from walls and other furniture to allow for proper air circulation and heat dissipation.
- Avoid placing the appliance near heat sources such as direct sunlight, radiators, or ovens, as this will increase energy consumption.
- The approximate dimensions of the appliance are 189 cm (height) x 60 cm (width).

## Electrical Connection

Connect the appliance to a properly earthed electrical outlet. Ensure the voltage and frequency match the ratings on the appliance's data plate. Do not use extension cords or multiple adapters.

## Initial Cleaning

Before first use, clean the interior of the refrigerator and freezer compartments with a mild detergent and warm water. Wipe dry thoroughly. This removes any manufacturing residues.

## OPERATING INSTRUCTIONS

### Control Panel and Temperature Settings

Your Whirlpool refrigerator features a digital display on the door, allowing for easy monitoring and adjustment of temperature settings for both the refrigerator and freezer compartments. Refer to the display for current temperatures and settings.

- **Refrigerator Temperature:** Use the controls on the display to set the desired temperature for the fresh food compartment, typically between 2°C and 8°C.
- **Freezer Temperature:** Adjust the freezer temperature, usually between -16°C and -24°C, using the door display controls.
- **Fast Freeze Function:** If available, activate the fast freeze function when adding a large quantity of fresh food to the freezer to rapidly lower its temperature and preserve quality.

### Special Storage Features

This appliance is equipped with specialized compartments to optimize food preservation.



Image 3: The FreshBox+ drawer, designed for optimal storage of fruits and vegetables.

- **FreshBox+:** This drawer is ideal for storing fruits and vegetables, helping to maintain their freshness and crispness for longer periods.
- **FreshBox 0°C:** Designed for delicate foods such as meat and fish, this compartment maintains a temperature close to 0°C, extending their shelf life.



Image 4: The FreshBox 0°C drawer, suitable for storing fresh meat and fish.



Image 5: The Easy Access drawer in the freezer compartment, providing convenient retrieval of frequently used frozen items.

- **Easy Access Drawer (Freezer):** This pull-out drawer in the freezer section provides convenient access to smaller or frequently used frozen items.

## MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficient operation of your refrigerator.

### Cleaning the Interior

- Always unplug the appliance before cleaning.
- Clean the interior regularly with a solution of warm water and a mild, non-abrasive detergent.
- Wipe all surfaces, shelves, and drawers. Rinse with clean water and dry thoroughly to prevent odors and mold growth.
- Do not use abrasive cleaners, scouring pads, or solvents.

### Cleaning the Exterior and Door Seals

- Clean the exterior surfaces with a soft cloth and mild detergent. For stainless steel finishes, use a specialized stainless steel cleaner.
- Regularly clean the door seals with warm water to ensure they remain flexible and maintain a tight seal.

### Defrosting

This refrigerator features a No-Frost system, which automatically prevents ice build-up in the freezer compartment, eliminating the need for manual defrosting. The refrigerator compartment also defrosts automatically.

## TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply.	Check if the power cord is plugged in correctly and if there is power at the outlet.
Refrigerator/Freezer not cooling sufficiently.	Door not closed properly; excessive opening; high ambient temperature; temperature setting too high.	Ensure doors are fully closed. Reduce frequency of door openings. Adjust temperature settings to a lower value. Ensure adequate ventilation around the appliance.
Unusual noises.	Appliance not level; objects touching the back wall; normal operating sounds.	Adjust leveling feet. Ensure no objects are touching the appliance. Gurgling, humming, and cracking sounds are normal during operation.
Water on the bottom of the refrigerator compartment.	Drain hole blocked.	Clean the drain hole at the back of the refrigerator compartment with a small tool (e.g., a pipe cleaner).

## TECHNICAL SPECIFICATIONS

Brand	Whirlpool
Model Number	W7 8210 OX

<b>Configuration</b>	Freezer at the bottom
<b>Total Capacity</b>	300 Liters
<b>Dimensions (H x W)</b>	Approximately 189 cm x 60 cm
<b>Color</b>	Stainless Steel
<b>Installation Type</b>	Freestanding
<b>Number of Doors</b>	1 (Combi design with separate compartments)
<b>Shelf Type</b>	Glass
<b>Energy Efficiency Rating</b>	E
<b>Defrost System</b>	No-Frost (Freezer)

## **WARRANTY AND CUSTOMER SUPPORT**

For warranty information, please refer to the warranty card included with your appliance or visit the official Whirlpool website. In case of technical issues or for further assistance, please contact Whirlpool customer support.

When contacting support, please have your appliance's model number (W7 821O OX) and serial number ready. This information can typically be found on a label inside the refrigerator compartment.