



[Manuals.plus](#) /

> [LOVHO](#) /

> LOVHO 4000 PSI Commercial Grade Telescoping Spray Wand Instruction Manual

LOVHO 787794191373

LOVHO 4000 PSI Commercial Grade Telescoping Spray Wand Instruction Manual

Model: 787794191373

1. INTRODUCTION

The LOVHO 4000 PSI Commercial Grade Telescoping Spray Wand is designed to extend your reach for pressure washing tasks, allowing you to clean tall areas up to 18 feet away without the need for ladders. Constructed from durable aluminum, this wand is both sturdy and lightweight, making it easy to handle and store. It is ideal for cleaning building sides, houses, trucks, boats, warehouses, external walls, roofs, and various other applications.

2. SAFETY INFORMATION

WARNING: Always wear appropriate personal protective equipment (PPE) including safety glasses, gloves, and sturdy footwear when operating a pressure washer and this telescoping wand. High-pressure spray can cause serious injury.

- Ensure all connections are secure before operating.
- Do not point the spray wand at people, pets, or electrical outlets.
- Maintain a firm grip on the wand at all times. The belt kit is provided to assist with control and reduce fatigue during extended use.
- Be aware of your surroundings and potential hazards, especially when working at extended heights.
- Always relieve pressure from the system before disconnecting any hoses or accessories.

3. PACKAGE CONTENTS

- LOVHO 4000 PSI Commercial Grade Telescoping Spray Wand
- Belt Kit (for control and fatigue reduction)
- Assorted Spray Nozzles (typically 5 different types)
- Inlet Adapter (3/8" quick connector and M22-14MM)



Figure 1: Main components of the LOVHO Telescoping Spray Wand package, including the wand, belt, and various nozzles.

4. SPECIFICATIONS

Feature	Value
Material	Aluminum
Maximum Operating Pressure	4000 PSI
Inlet Connection Size	0.25 Inches
Inlet Connection Type	Quick Connect
Outlet Connection Size	0.25 Inches
Outlet Connection Type	Quick Connect
Item Weight	13.82 pounds
Item Model Number	787794191373

5. SETUP

1. **Assemble the Wand:** The telescoping wand consists of multiple sections. Extend each section by twisting the collars counter-clockwise to loosen, pulling the section out, and then twisting clockwise to tighten. Ensure each section is securely locked to prevent collapse during use.
2. **Attach Nozzle:** Select the appropriate spray nozzle for your task and attach it to the quick-connect fitting at the end of the wand.
3. **Connect to Pressure Washer Hose:** The wand's inlet adapter is designed for 3/8" quick connectors and M22-14MM pressure hoses. Connect your pressure washer hose to the wand's inlet. Ensure the connection is tight and leak-free.

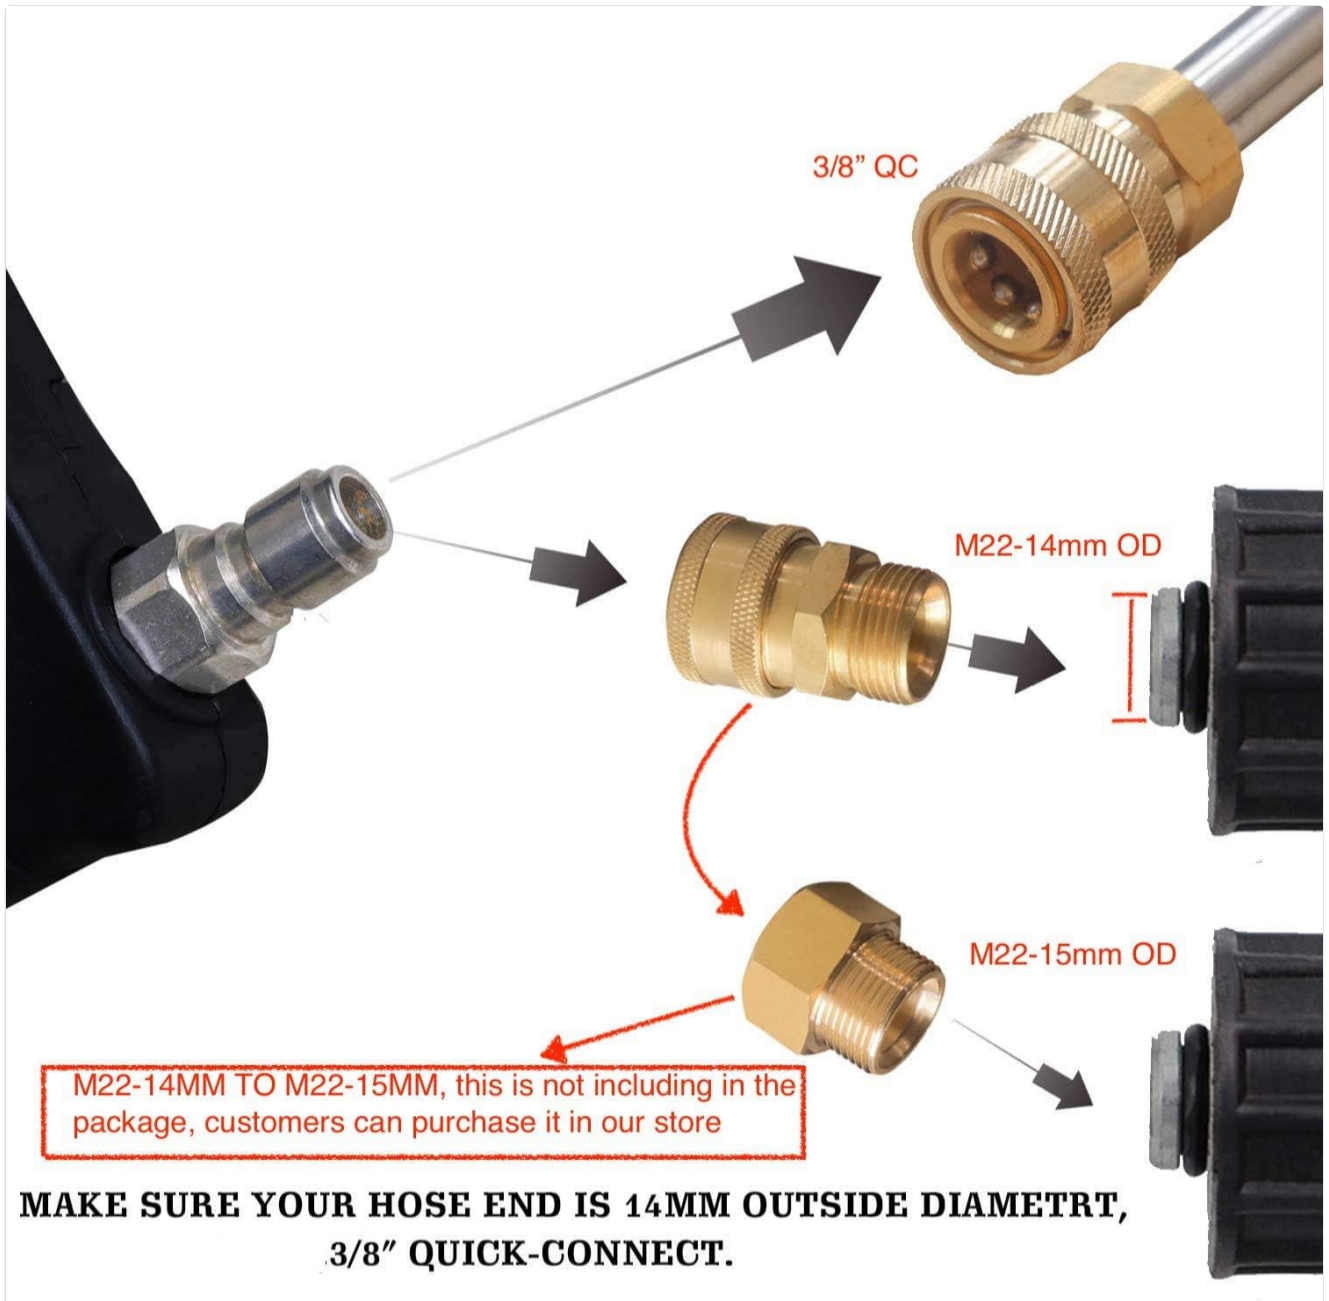


Figure 2: Illustration showing the connection points for the pressure washer hose to the wand, highlighting the 3/8" quick connect and M22-14MM compatibility.

4. **Attach Belt Kit:** For prolonged use and better control, attach the provided belt kit. Secure the harness around your torso and connect the wand to the belt's attachment point. Adjust the clamp on the wand to a comfortable position that provides optimal support and reduces strain.



Figure 3: A user demonstrating the proper use of the belt kit to support the telescoping wand, showing how the clamp can be adjusted for comfort and leverage.

6. OPERATING INSTRUCTIONS

1. **Start Pressure Washer:** Follow your pressure washer's instructions to start the unit and ensure water flow.
2. **Extend Wand:** Gradually extend the telescoping wand to the desired length, ensuring all sections are securely tightened.
3. **Begin Cleaning:** Aim the nozzle at the surface to be cleaned, maintaining a safe distance. Squeeze the trigger to begin spraying. Move the wand in a controlled, sweeping motion to clean the area.
4. **Adjust Angle:** The 13-degree extension wand makes it easier to reach difficult angles, such as roof corners. Adjust your position and the wand's angle as needed.
5. **Use Belt Kit:** Utilize the belt kit to distribute the weight of the wand and reduce strain on your arms and back, especially during prolonged use.

Your browser does not support the video tag.

Video 1: Demonstration of the LOVHO Telescoping Spray Wand in use, showing its extended reach and how it can be used to clean high surfaces.

- 6. Finish Cleaning:** Release the trigger to stop spraying. Turn off your pressure washer and relieve any remaining pressure in the system before disconnecting the wand.

7. MAINTENANCE

- **Cleaning:** After each use, rinse the wand and nozzles thoroughly with clean water to remove any detergent or debris.
- **Storage:** Disassemble the wand into its 5 sections for compact storage. Store in a dry, protected area to prevent corrosion and damage.
- **Inspections:** Regularly inspect the wand, hose connections, and nozzles for any signs of wear, damage, or blockages. Replace worn parts as necessary.
- **Lubrication:** Periodically apply a silicone-based lubricant to the telescoping sections to ensure smooth extension and retraction.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water flow or low pressure	Clogged nozzle; kinked hose; insufficient water supply; pressure washer issue.	Clean or replace nozzle; straighten hose; ensure adequate water supply; check pressure washer manual.
Wand sections not extending/retracting smoothly	Dirt/debris in sections; lack of lubrication.	Clean sections; apply silicone lubricant.
Leaks at connections	Loose connections; worn O-rings/seals.	Tighten connections; replace O-rings/seals.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please contact LOVHO customer service. Refer to your product packaging or the LOVHO official website for the most current contact details.

LOVHO Store: [Visit the LOVHO Store on Amazon](#)