

Calvin Klein K9M311UP

Calvin Klein Glimpse Quartz Silver Dial Men's Watch K9M311UP User Manual

INTRODUCTION

This manual provides essential instructions for the Calvin Klein Glimpse Quartz Silver Dial Men's Watch, model K9M311UP. Please read this guide thoroughly to understand the proper setup, operation, and maintenance of your timepiece. This watch features a unique silver dial with red hands, a silver-tone stainless steel case, and a red leather band, powered by a reliable quartz movement.

SETUP

Setting the Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown outwards to the time-setting position. You may feel a slight click.
3. Rotate the crown clockwise or counter-clockwise to adjust the red hands to the correct time.
4. Once the time is set, push the crown back into its original position against the watch case. Ensure it is fully seated to maintain water resistance.



Image: Angled view of the watch, highlighting the crown for time adjustment.

OPERATING

Reading the Dial

The Calvin Klein Glimpse watch features a distinctive silver dial with red hands. The outer track displays minutes in increments of 5, while the inner track indicates hours. The red hands provide a clear indication of the current time.



Image: Front view of the watch, displaying the unique silver dial and red hands.

Water Resistance

This watch is water resistant up to 30 meters (100 feet). This rating means the watch is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, diving, or any water sports where it would be submerged for extended periods or subjected to high water pressure.

- Do not operate the crown while the watch is wet or submerged.
- Avoid exposing the watch to extreme temperature changes, as this can affect its water resistance.

MAINTENANCE

Cleaning Your Watch

- **Case and Crystal:** Wipe the stainless steel case and mineral crystal with a soft, dry, lint-free cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying.
- **Leather Band:** The red leather band should be cleaned with a soft, dry cloth. Avoid prolonged exposure to water, direct sunlight, and harsh chemicals, as these can damage the leather.

Battery Replacement

Your watch is powered by a quartz movement, which requires a battery. When the watch stops running, it indicates the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

- **Watch Not Running:** If the watch stops, the battery may need to be replaced. Consult a professional watch technician.
- **Incorrect Time:** Ensure the crown is fully pushed in after setting the time. If the time continues to be inaccurate, the watch may require servicing.
- **Moisture Under Crystal:** If condensation appears under the crystal, immediately take the watch to a service center. This indicates a breach in water resistance.

SPECIFICATIONS

Feature	Detail
Model Number	K9M311UP
Movement Type	Quartz
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	46 Millimetres
Dial Colour	Silver
Band Material	Leather
Band Colour	Red
Band Width	20 Millimetres
Crystal Material	Scratch Resistant Mineral

Feature	Detail
Water Resistance Depth	30 Metres (100 Feet)
Clasp Type	Tang Buckle
Item Weight	363 g
Product Dimensions	8 x 8 x 8 cm

WARRANTY AND SUPPORT

For information regarding the warranty coverage for your Calvin Klein Glimpse watch, please refer to the warranty card included with your purchase or visit the official Calvin Klein website. For technical support or service inquiries, please contact the retailer where the watch was purchased or an authorized Calvin Klein service center.