

HONEYSEW 40264 Plastic Bobbins

HONEYSEW Sewing Machine Bobbins

INSTRUCTION MANUAL

1. Introduction

This instruction manual provides essential information for the proper use and maintenance of your HONEYSEW sewing machine bobbins. These bobbins are designed for compatibility with a range of industrial and domestic sewing machines, ensuring smooth thread delivery for various sewing projects. Please read this manual thoroughly before use to ensure optimal performance and longevity of your bobbins.

Compatible Sewing Machine Models:

- **Consew:** 210, 220, 230, 2230, 231
- **Juki:** DDL-5530, DDL-5550
- **Singer:** 1300-2, 191, 195K, 241-11, 241-12, 241-13, 281, 241-1, 241-SV10, 241-SV13, 251-1, 251-4, 251-11, 251-21, 251-24, 701-710, 761-765, 81, 81K, 81U, 95-1, 95-10, 95-40, 95-41, 95-42, 95-100, 96, 96-87, 96-100, 96-107, 96-60, 96K41

2. Setup: Winding the Bobbin

Before inserting the bobbin into your sewing machine, it must be properly wound with thread. Refer to your specific sewing machine's manual for detailed instructions on using its bobbin winder. The general steps are as follows:

1. Place a spool of thread on the spool pin of your sewing machine.
2. Guide the thread through the machine's tension disc for bobbin winding. This ensures even tension during winding.
3. Insert an empty HONEYSEW bobbin onto the bobbin winder spindle.
4. Wrap the thread around the bobbin a few times manually to secure it.
5. Engage the bobbin winder (usually by pushing it to the right or down) and press the foot pedal or start button. The machine will automatically wind the thread onto the bobbin.
6. Stop winding when the bobbin is full, but not overfilled. Overfilling can cause tension issues or damage to the bobbin case.
7. Cut the thread and remove the wound bobbin from the spindle.



Figure 1: A collection of colorful HONEYSEW bobbins, ready for winding and use.

3. Operating: Inserting the Bobbin

The method for inserting a bobbin varies depending on your sewing machine's design (top-loading or front-loading bobbin case). Always consult your sewing machine's manual for precise instructions.

3.1 Top-Loading Bobbins

1. Open the bobbin cover plate, usually located on the needle plate of your machine.
2. Insert the wound bobbin into the bobbin case with the thread unwinding in the correct direction (typically counter-clockwise, but check your machine's markings).
3. Guide the thread through the tension spring or slot in the bobbin case. Ensure it clicks into place for proper tension.
4. Pull out about 4-6 inches of thread.
5. Replace the bobbin cover plate.

3.2 Front-Loading Bobbins (with separate bobbin case)

1. Remove the bobbin case from the machine (often located behind a hinged cover).
2. Insert the wound bobbin into the bobbin case. The thread should unwind in the direction indicated by the bobbin case (usually clockwise).
3. Guide the thread through the slot and under the tension spring of the bobbin case.
4. Pull out about 4-6 inches of thread.
5. Reinsert the bobbin case into the machine, ensuring it locks securely into place.
6. Close the machine's front cover.



Figure 2: HONEYSEW bobbins stored in their clear case, illustrating their organized presentation.

4. Maintenance

Proper care of your bobbins ensures consistent sewing performance and extends their lifespan.

- **Cleaning:** Periodically inspect bobbins for lint or thread residue. Clean with a soft brush or compressed air if necessary.
- **Storage:** Store bobbins in a clean, dry place, preferably in a bobbin box or organizer to prevent tangling and damage. The provided clear plastic case is ideal for this purpose.
- **Inspection:** Before winding, check bobbins for any cracks, deformities, or rough edges that could snag thread or affect tension. Replace damaged bobbins.

5. Troubleshooting

If you encounter issues related to bobbin performance, consider the following:

- **Uneven Bobbin Winding:** Ensure the thread is correctly routed through the bobbin winder tension disc. Check for any obstructions.
- **Thread Breakage:** Verify that the bobbin is not overfilled. Check for burrs or sharp edges on the bobbin or bobbin case. Ensure the thread is not caught anywhere.
- **Skipped Stitches or Looping:** Confirm the bobbin is inserted correctly and the thread is properly seated in the bobbin case tension spring. Adjust bobbin tension if necessary (refer to your machine's manual).
- **Noise from Bobbin Area:** Clean the bobbin area thoroughly to remove any lint or broken thread. Ensure the bobbin case is correctly seated.

6. Specifications

Feature	Detail
Product Type	Sewing Machine Bobbins
Material	Plastic
Bobbin Type	40264
Diameter	21 MM
Quantity	100 Colorful Bobbins
Compatibility	Juki DDL-5530, DDL-5550; Consew 210, 220, 230, 2230, 231; Various Singer models (see Introduction)

7. Warranty and Support

For any questions, concerns, or support regarding your HONEYSEW bobbins, please contact the manufacturer directly through their official website or the retailer from whom you purchased the product. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question