

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Kingbox](#) /

› [Kingbox X55 MP3 Player User Manual](#)

Kingbox X55

Kingbox X55 MP3 Player User Manual

Model: X55

INTRODUCTION

Welcome to the user manual for your Kingbox X55 MP3 Player. This guide provides detailed instructions on how to set up, operate, and maintain your device. Please read this manual thoroughly to ensure optimal performance and longevity of your MP3 player.

PACKAGE CONTENTS

Upon unboxing, please verify that all the following items are included:

- Kingbox X55 MP3 Player
- USB Charging/Data Cable
- 3.5mm Audio Cable
- User Manual (this document)
- Clip (pre-attached or separate)

Package Contents



Gift box



X55 MP3



Audio Line



USB Cable



User Manual

Image: Contents of the Kingbox X55 MP3 Player package, including the player, USB cable, audio cable, and gift box.

DEVICE OVERVIEW

Familiarize yourself with the buttons and ports of your Kingbox X55 MP3 Player:



Image: A detailed view of the Kingbox X55 MP3 Player, highlighting the Switch Button, 3.5mm Headphone Jack, LO Output, Power Supply Slot (USB port), and TF Card Slot.

- **Switch Button:** Power on/off the device.
- **3.5mm Headphone Jack:** Connect wired headphones.
- **LO Output:** Line Out for connecting to external audio systems.
- **Power Supply Slot (USB):** For charging and data transfer.
- **TF Card Slot:** Insert a Micro SD card for expanded storage.
- **Control Buttons:** Navigation and playback controls on the front panel.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the USB charging cable to the Power Supply Slot on the device and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

2. Power On/Off

- **To Power On:** Press and hold the Switch Button until the screen lights up.

- **To Power Off:** Press and hold the Switch Button until the screen turns off.

3. Loading Music and Files

Connect the MP3 player to your computer using the provided USB cable. The device will appear as a removable disk. You can then drag and drop music files, videos, e-books, and photos into the appropriate folders on the player's internal storage.

4. Inserting a Micro SD Card

The Kingbox X55 supports Micro SD cards up to 128GB for additional storage. Locate the TF Card Slot and gently insert the Micro SD card until it clicks into place. Ensure the card is inserted in the correct orientation.

OPERATING INSTRUCTIONS

1. Basic Navigation

Use the control buttons on the front panel to navigate through menus and select options. The central button typically acts as 'Enter' or 'Confirm', while surrounding buttons are for directional movement or specific functions (e.g., back, menu).

2. Music Playback

From the main menu, select 'Music'. Browse your stored audio files and select a track to play. The player supports various audio formats including MP3, WMA, APE, FLAC, WAV, DRM, and ACELP.

Deliver High Quality Music



Image: The Kingbox X55 MP3 Player screen displaying music playback, surrounded by icons representing supported audio formats like MP3, WMA, APE, WAV, and FLAC.

3. Bluetooth Connection

The Kingbox X55 features Bluetooth 4.1 for wireless audio streaming. To connect to Bluetooth headphones or speakers:

1. Go to the 'Bluetooth' menu on your MP3 player.
2. Ensure your Bluetooth device is in pairing mode.
3. Select 'Search for devices' on the MP3 player.
4. Choose your device from the list to pair.

 BT 4.1



Music



Recording



Video



FM-Radio



A-B Repeat

Image: The Kingbox X55 MP3 Player with a Bluetooth 4.1 icon, showing various compatible Bluetooth devices such as earbuds, headphones, and a Bluetooth speaker.

4. FM Radio

To use the FM radio function, connect wired headphones to the 3.5mm jack, as they act as the antenna. Navigate to the 'FM Radio' menu. You can auto-scan for stations or manually tune to frequencies within the 87.8-108 MHz band.

5. Pedometer Function

The built-in pedometer tracks your steps, distance, and calories. Activate this function from the main menu. It can operate while music is playing, making it suitable for fitness activities.

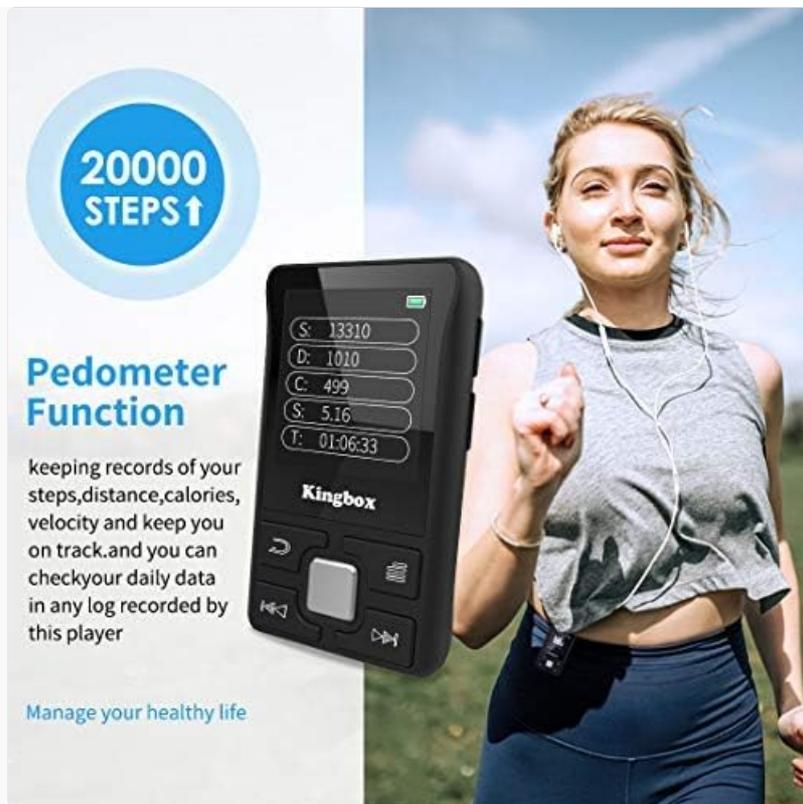


Image: A woman running outdoors with the Kingbox X55 MP3 Player clipped to her clothing, displaying the pedometer function with step count, distance, calories, and time.

6. Other Functions

The Kingbox X55 offers several additional features:

- **E-book:** Read text files.
- **Recording:** Use the built-in microphone to record audio.
- **Video:** Play supported video formats (AMV, AVI).
- **Stopwatch:** A basic timing function.
- **Alarm Clock:** Set alarms.
- **Time Saver:** Display time when idle.
- **Resume Playback:** Continues from where you left off.
- **Lyrics Synchronization:** Display lyrics for supported music files.

Multi-Function Design



Image: The Kingbox X55 MP3 Player alongside icons representing its various functions: Music, Bluetooth, FM-Radio, E-Book, Video, Recording, Stopwatch, A-B Repeat, Alarm Clock, Time Screensaver, Resume Playback, and Lyrics Synchronization.

MAINTENANCE

1. Cleaning

Wipe the device with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as they may damage the screen or casing.

2. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods. Store the device in a cool, dry place.

3. Storage

When not in use, store the MP3 player in a protective case or pouch to prevent scratches and damage from dust or impacts.

TROUBLESHOOTING

1. Poor FM Reception

If FM reception is weak or unclear, try the following:

- Adjust the direction and position of the player.
- Ensure the headphone cable is fully extended, as it functions as the antenna.
- Check for nearby electronic devices that might cause interference.

2. Device Not Responding

If the device becomes unresponsive, try performing a soft reset by pressing and holding the power button for approximately 10-15 seconds until it restarts.

3. Cannot Connect to PC

Ensure the USB cable is securely connected to both the player and the computer. Try a different USB port or cable. Verify that your computer's operating system recognizes new USB devices.

SPECIFICATIONS

Feature	Detail
Brand	Kingbox
Model Name	X55
Internal Storage	32 GB (Flash Memory)
Expandable Storage	Up to 128 GB (Micro SD/TF Card)
Bluetooth Version	4.1
Screen Size	1.44 Inch
Supported Audio Formats	MP3, WMA, APE, FLAC, WAV, DRM, ACELP
Supported Video Formats	AMV, AVI
FM Radio Frequency	87.8-108 MHz
Battery Type	Lithium-polymer
Connectivity	Bluetooth, USB
Special Features	FM Radio, Pedometer, E-book, Recording, Photo Viewer, Stopwatch, Alarm Clock
Product Dimensions	8.99 x 3.81 x 12.5 cm; 38 g

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

