

## AIDITIYMI EUR7659Y70

# AIDITIYMI EUR7659Y70 Replacement Remote Control User Manual

For Panasonic DVD VCR Recorder Models

## 1. INTRODUCTION

---

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your AIDITIYMI EUR7659Y70 replacement remote control. This remote is designed to be compatible with various Panasonic DVD VCR Recorder models, including DMR-ES45, DMR-ES46, DMR-ES35, DMR-ES45V, DMR-ES35V, DMR-ES36V, DMR-ES45VS, DMR-ES46V, and DMR-ES46VS.

## 2. SETUP GUIDE

---

### 2.1 Unpacking

Carefully remove the remote control from its packaging. Inspect the remote for any visible damage. If any damage is observed, contact customer support.

### 2.2 Battery Installation

The remote control requires two (2) AA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two new AA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





POWER



DRIVE SELECT

TV/VIDEO

CH

VOL



TRACKING/V-LOCK



ADD/DEL CH

CANCEL \*



INPUT SELECT

DELETE

RESET

SLOW/SEARCH



SKIP/INDEX

REW

FF



TIME SLIP/ JET REW

CM SKIP



SCHEDULE



DIRECT NAVIGATOR



FUNCTIONS

SUB MENU

RETURN



AUDIO

DISPLAY

CREATE CHAPTER

VCR/TV



REC

REC MODE

STATUS

F Rec



EUR7659Y70

DVD/TV



Image: Back view of the remote control, illustrating the battery compartment location.

## 2.3 Initial Power On

After installing the batteries, the remote is ready for use. No programming or pairing is typically required for basic functions. Point the remote directly at your Panasonic DVD VCR Recorder and press the **DVD/VHS POWER** button to turn on the device.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Basic Functions

The remote control features a standard layout for easy operation of your Panasonic DVD VCR Recorder.



Image: Front view of the remote control, highlighting the button layout.

- **DVD/VHS POWER:** Turns the DVD/VCR Recorder on or off.
- **TV POWER:** Controls the power of a compatible television (requires TV code setup, see your TV manual).
- **Number Buttons (0-9):** Used for direct channel selection or inputting numerical data.
- **VOL +/-:** Adjusts the television volume.

- **CH +/-:** Changes television channels.
- **PLAY, STOP, PAUSE, REW, FF:** Standard playback controls for DVD and VCR functions.

## 3.2 Advanced Functions

- **DRIVE SELECT:** Switches between DVD and VCR modes.
- **TV/VIDEO:** Toggles between TV and video input modes.
- **INPUT SELECT:** Selects external input sources.
- **TRACKING/V-LOCK:** Adjusts VCR tracking for optimal picture quality.
- **ADD/HLT CH:** Adds or deletes channels.
- **SLOW/SEARCH:** Controls slow motion playback or search speed.
- **SKIP/INDEX:** Skips chapters on DVD or indexes on VCR.
- **TIME SLIP/JET REW:** Allows time-shift recording or fast rewind.
- **CM SKIP:** Skips commercial breaks during playback.
- **SCHEDULE:** Accesses the recording schedule menu.
- **DIRECT NAVIGATOR:** Opens the Direct Navigator menu for recorded content.
- **SUB MENU:** Accesses sub-menus within various functions.
- **FUNCTIONS:** Opens the main function menu.
- **RETURN:** Returns to the previous menu or screen.
- **AUDIO:** Changes audio tracks or modes.
- **DISPLAY:** Shows on-screen display information.
- **CREATE CHAPTER:** Creates chapters during recording.
- **VCR/TV:** Toggles between VCR and TV display.
- **REC, REC MODE, STATUS, F Rec:** Recording related controls.
- **Directional Arrows and ENTER:** Navigate menus and confirm selections.

## 3.3 Pairing the Remote (If Applicable)

While this remote typically requires no programming, some Panasonic DVD VCR Recorder models may display a message like "SET 2" or "RC 2" on the device's display. This indicates that the recorder is set to a different remote control code than the default. To synchronize the remote with your device:

1. Note the number displayed on your recorder (e.g., '2' from "SET 2").
2. On the remote control, simultaneously press and hold the **ENTER** button and the corresponding number button (e.g., '2') for approximately 5-10 seconds.
3. Release the buttons. The remote should now be paired with your recorder.

*Note: If batteries are removed from the remote, it may reset to code '1'. You may need to repeat the pairing process if your recorder is set to a different code.*

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.

### 4.2 Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both

batteries at the same time with new AA alkaline batteries. Do not mix old and new batteries or different battery types.

## 5. TROUBLESHOOTING

---

- **Remote not working after battery installation:**

Ensure batteries are inserted with correct polarity (+/-). Try new alkaline batteries. Restart your Panasonic DVD VCR Recorder by unplugging it from the power outlet for a few minutes, then plugging it back in.

- **Remote not responding to the device:**

Check if there are any obstructions between the remote and the recorder's infrared sensor. Ensure you are within the maximum operating range (approximately 32 feet). Verify if the recorder displays a "SET" or "RC" message and perform the pairing procedure described in Section 3.3.

- **Some buttons require excessive force:**

This may indicate wear or minor manufacturing variations. Ensure the remote is clean and free of debris around the buttons. If the issue persists and affects core functionality, contact customer support.

- **Remote code resets to '1' after battery removal:**

This is normal behavior for some remotes. If your recorder is set to a different code, you will need to re-pair the remote using the method in Section 3.3 after changing batteries.

- **TV control buttons not working:**

The TV control buttons (TV POWER, VOL+/-, CH+/-) are designed to control a television, not the DVD VCR Recorder. These buttons may require specific programming for your TV brand, which is typically found in your television's user manual. This remote does not provide TV programming codes.

## 6. PRODUCT SPECIFICATIONS

---

<b>Brand</b>	AIDITIYMI
<b>Model Name</b>	EUR7659Y70
<b>Model Number</b>	AIDITIYMI-EUR7659Y70-AD0S1
<b>Connectivity Technology</b>	Infrared
<b>Maximum Range</b>	32 Feet
<b>Battery Type</b>	AA
<b>Number of Batteries Required</b>	2
<b>Button Quantity</b>	51
<b>Compatible Devices</b>	Panasonic DVD VCR Recorders (DMR-ES45, DMR-ES46, DMR-ES35, DMR-ES45V, DMR-ES35V, DMR-ES36V, DMR-ES45VS, DMR-ES46V, DMR-ES46VS)

## 7. WARRANTY INFORMATION

---

This product comes with a 1-year warranty from the date of purchase. The warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

## 8. CUSTOMER SUPPORT

---

If you encounter any issues not covered in this manual or require further assistance, please contact AIDITIYMI customer service. Provide your product model number (EUR7659Y70) and a detailed description of the problem for efficient support.