

[Manuals.plus](#) /

› [Americanflat](#) /

› Americanflat 20x30 Poster Frame with Polished Plexiglass - Black Picture Frame - Wide Photo Frames Made of Engineered Wood for Vertical or Horizontal Wall Display - Epic Collection - Black Black 20x30

Americanflat WB2030BKPC

Americanflat 20x30 Poster Frame User Manual

Model: WB2030BKPC

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Americanflat 20x30 Poster Frame. Please read these instructions carefully before use to ensure optimal performance and longevity of your product.

The Americanflat 20x30 Poster Frame is designed to display photos, posters, or artwork measuring 20x30 inches. It features a durable engineered wood (MDF) frame with polished plexiglass for protection and clarity. The frame supports both vertical and horizontal wall display.

PRODUCT OVERVIEW

The Americanflat 20x30 Poster Frame consists of the following main components:

- **Frame:** Constructed from engineered wood (MDF) with a black finish and wide molding.
- **Plexiglass:** A polished, clear sheet that protects your displayed item. It comes with a protective film on both sides that must be removed before use.
- **Backboard:** A sturdy MDF wood backing that secures your artwork within the frame.
- **Turn Buttons:** Easy-to-open tabs on the backboard for simple insertion and removal of content.
- **Sawtooth Hangers:** Built-in hardware on the back for vertical or horizontal wall mounting.

20x30

EPIC

OVERSIZED FRAME
COLLECTION

WIDE MOLDING



Figure 1: Front view of the Americanflat 20x30 Black Poster Frame.

Frame Materials

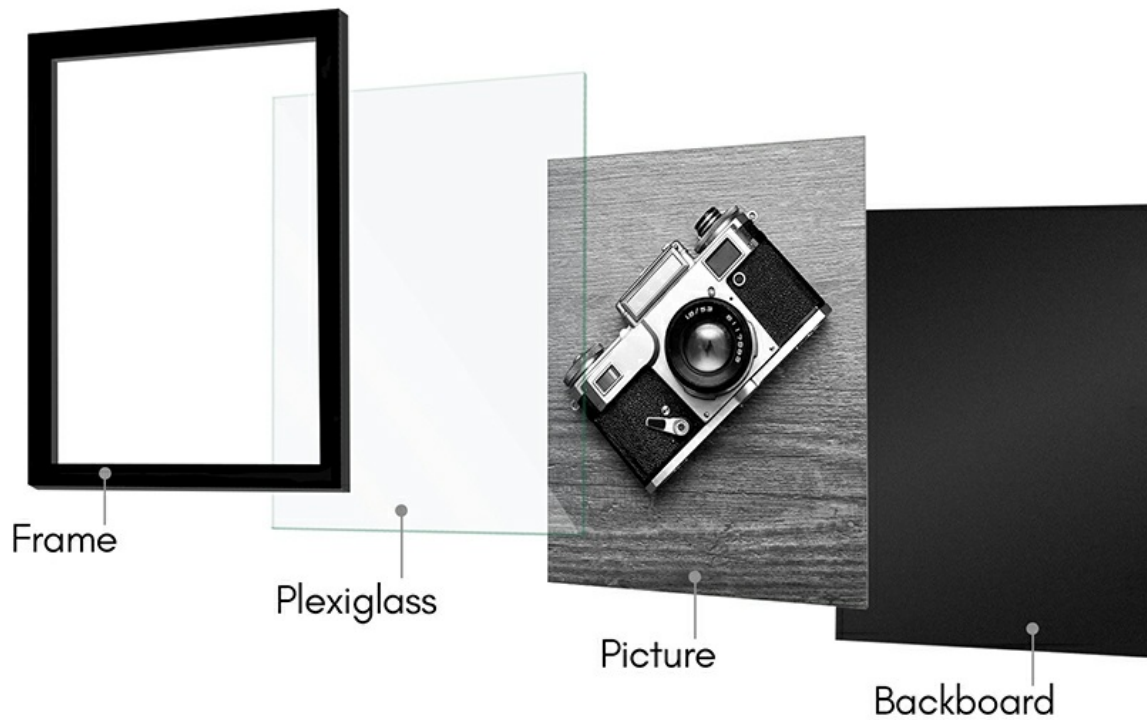 


Figure 2: Exploded view illustrating the components of the frame: frame, plexiglass, picture, and backboard.

SETUP

1. **Unpacking:** Carefully remove the frame from its packaging. Inspect for any damage.
2. **Prepare the Plexiglass:** The plexiglass comes with a protective film on both sides to prevent scratches during shipping. Gently peel off this film from both the front and back surfaces of the plexiglass.

Plexiglass

Remove protective film from both sides of plexiglass upon arrival

Safe

Packaged for additional protection

Easy to open tabs make inserting your posters easy



Figure 3: Remove protective film from both sides of the plexiglass before use.

3. **Open the Backboard:** On the back of the frame, locate the turn buttons. Rotate these buttons to release the backboard.

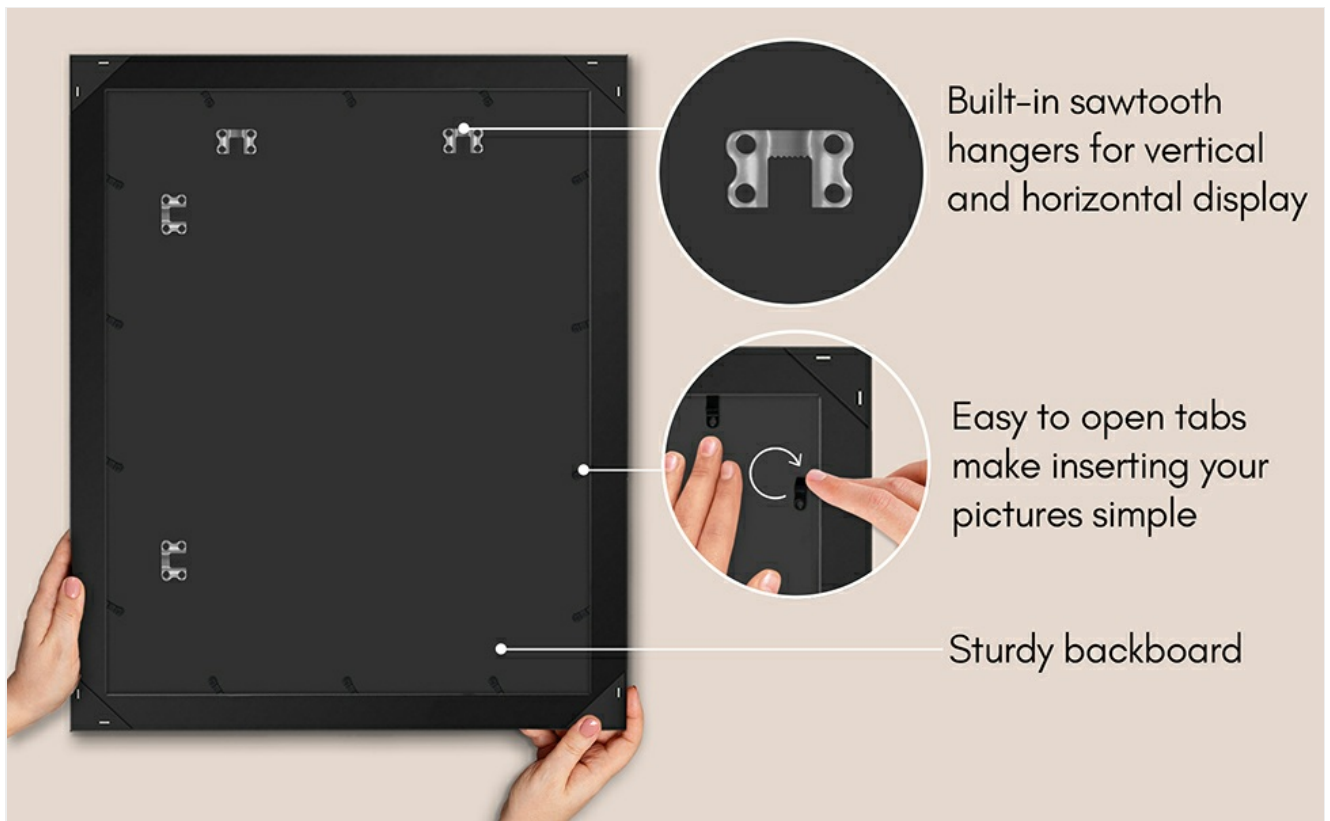



Figure 4: Back of the frame with easy-to-open turn tabs and built-in sawtooth hangers.

4. **Insert Artwork:** Place your 20x30 inch photo, poster, or artwork into the frame, ensuring it is centered and flat against the plexiglass.
5. **Secure the Backboard:** Place the backboard back into position and rotate the turn buttons to secure it firmly.

OPERATING

The Americanflat 20x30 Poster Frame is designed for wall display. It can be mounted either vertically or horizontally.

1. **Choose Orientation:** Decide whether you want to display your frame vertically or horizontally. The built-in sawtooth hangers are positioned to support both orientations.

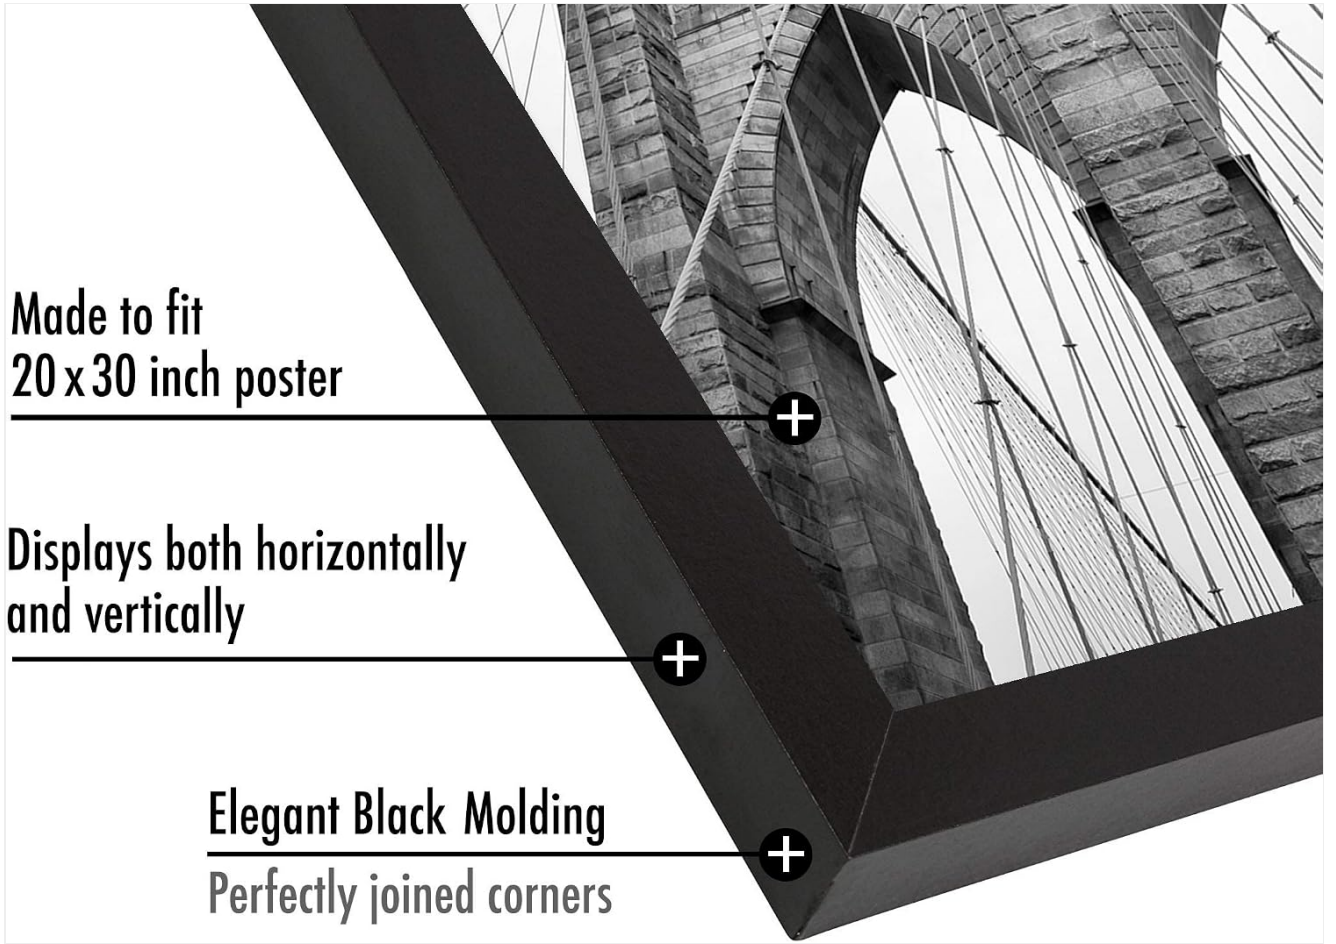

Made to fit
20 x 30 inch poster

Displays both horizontally
and vertically

Elegant Black Molding
Perfectly joined corners

Figure 5: The frame supports both horizontal and vertical display.

2. **Wall Mounting:** Use appropriate wall anchors and screws (not included) suitable for your wall type. Measure the distance between the two sawtooth hangers for your chosen orientation to ensure level hanging.

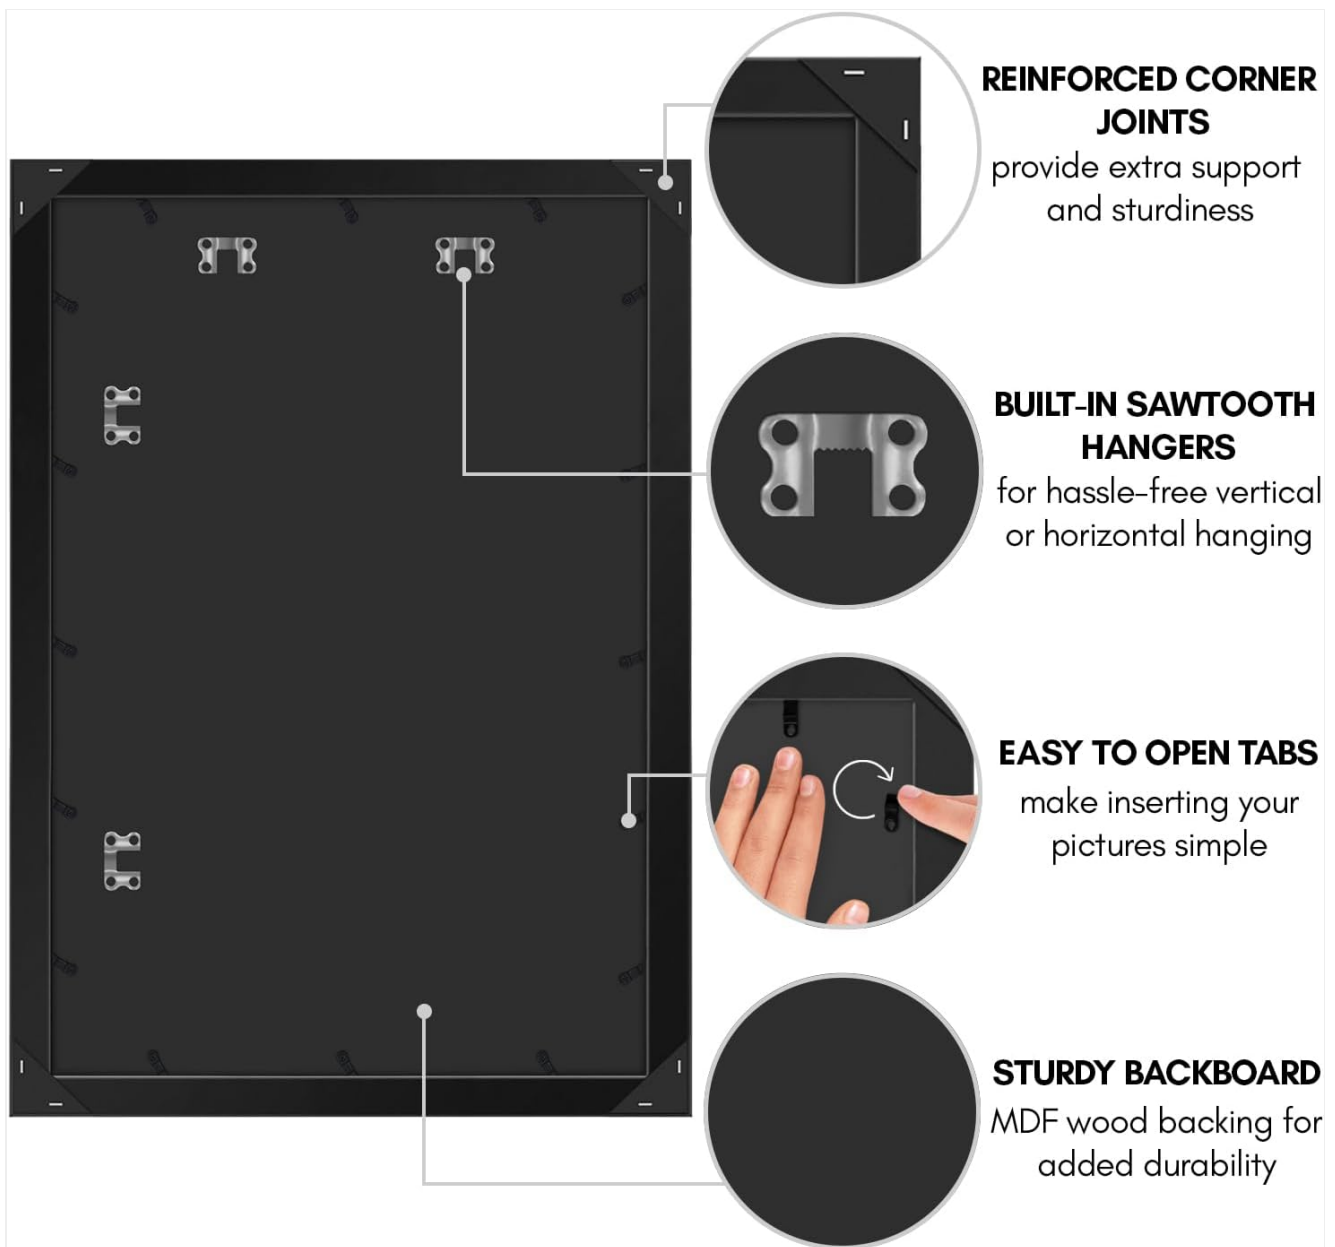


Figure 6: Detail of the built-in sawtooth hangers on the back of the frame.

3. **Hang the Frame:** Carefully align the sawtooth hangers with the installed screws or hooks on the wall. Ensure the frame is securely seated before releasing it.

MAINTENANCE

- **Cleaning the Frame:** Wipe the engineered wood frame with a soft, dry cloth to remove dust. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners.
- **Cleaning the Plexiglass:** Use a soft, lint-free cloth and a mild, non-abrasive cleaner specifically designed for acrylic or plastic. Do not use glass cleaners containing ammonia, as they can damage the plexiglass. Gently wipe to avoid scratching.
- **Storage:** If storing the frame, ensure it is placed in a dry environment, away from direct sunlight and extreme temperature fluctuations. It is recommended to keep the protective film on the plexiglass if storing for extended periods without content.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Plexiglass appears cloudy or scratched.	Protective film not removed, or improper cleaning.	Ensure protective film is removed from both sides. Clean with a soft, lint-free cloth and an acrylic-safe cleaner.
Artwork is not held securely.	Backboard not properly secured.	Ensure all turn buttons are rotated to firmly hold the backboard in place.
Frame hangs crookedly on the wall.	Improper measurement or uneven hanging points.	Re-measure the distance between the sawtooth hangers and ensure wall hooks/screws are level.

SPECIFICATIONS

Feature	Detail
Model Number	WB2030BKPC
Dimensions	20x30 inches (for artwork)
Frame Material	Engineered Wood (MDF)
Cover Material	Polished Plexiglass
Color	Black
Orientation	Vertical or Horizontal
Mounting Type	Wall Mount (Sawtooth Hangers)
Item Weight	5.71 pounds

WARRANTY AND SUPPORT

Americanflat products are designed for durability and quality. For information regarding warranty coverage, product support, or to contact customer service, please refer to the official Americanflat website or the contact information provided at the point of purchase.

For further assistance, please visit the [Americanflat Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question